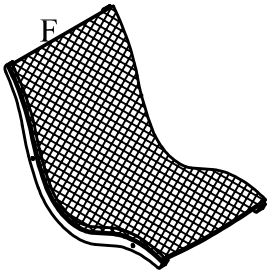
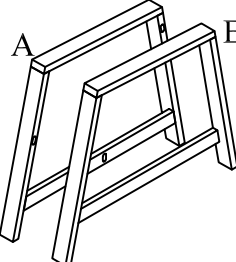
 



 



## PARTS LIST-(Per Lounger)

	1 PC
	2 PCS
	2 PCS
	1 PC

## HARDWARE LIST

1		6x100mm	4 pcs
2		6x45mm	2 pcs
3		6x50mm	4 pcs
4	 Allen key		2 pcs


## STOP! PLEASE READ FIRST:

Thank you for purchasing this item from Outdoor Interiors. Please verify all the hardware and components are included as you unpack the carton. Place the items in safe area to avoid lost and damaging contents. Use a soft area or the empty box to assembly the item.



## TEAK CARE & MAINTENANCE:

Your new Teak Furniture will begin to weather and fade over time naturally when exposed to direct sunlight, rain, snow and more. Oil 2-3 times per year to maintain the finish and look it has today, which brightens and sharpens the beautiful wood grain and helps to preserve for many years. If you prefer no oil to the Teak then it will begin to acquire a silvery grey patina that is the most natural part of teak outdoor furniture. If there is hardware and assembly required then tighten 1-2 times per year.

We recommend the following maintenance plan to provide long term care. Thoroughly clean 2-3 times a year with a hose and wipe dry. Do not clean or ever oil in intense direct sunlight. Always wipe excess oil from the furniture after a few hours. Also, all solid hardwoods may sweat oil after the first few days in the sunlight. For tough stains, gently scrub with a soft brush or cloth only, rinsing well and drying. Avoid standing water or sprinklers from hitting your furniture regularly as this will cause staining and uneven grain and finish concerns. Always cover your furniture when not in use during extended periods.

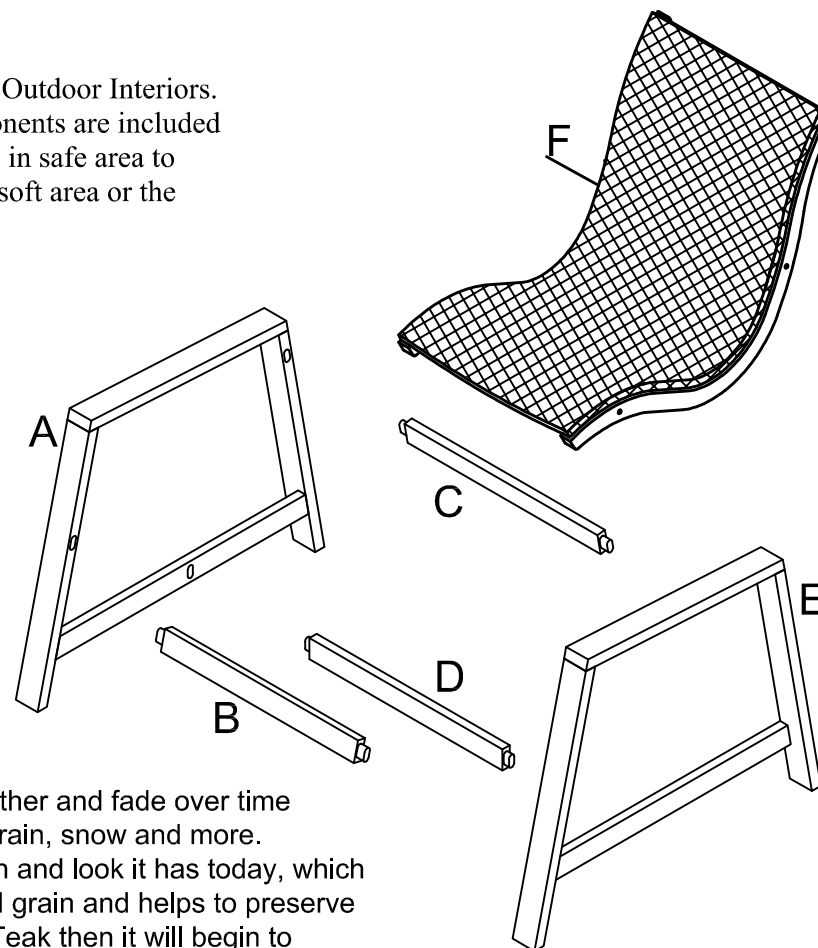


## ASSEMBLY INSTRUCTIONS TNA 2185

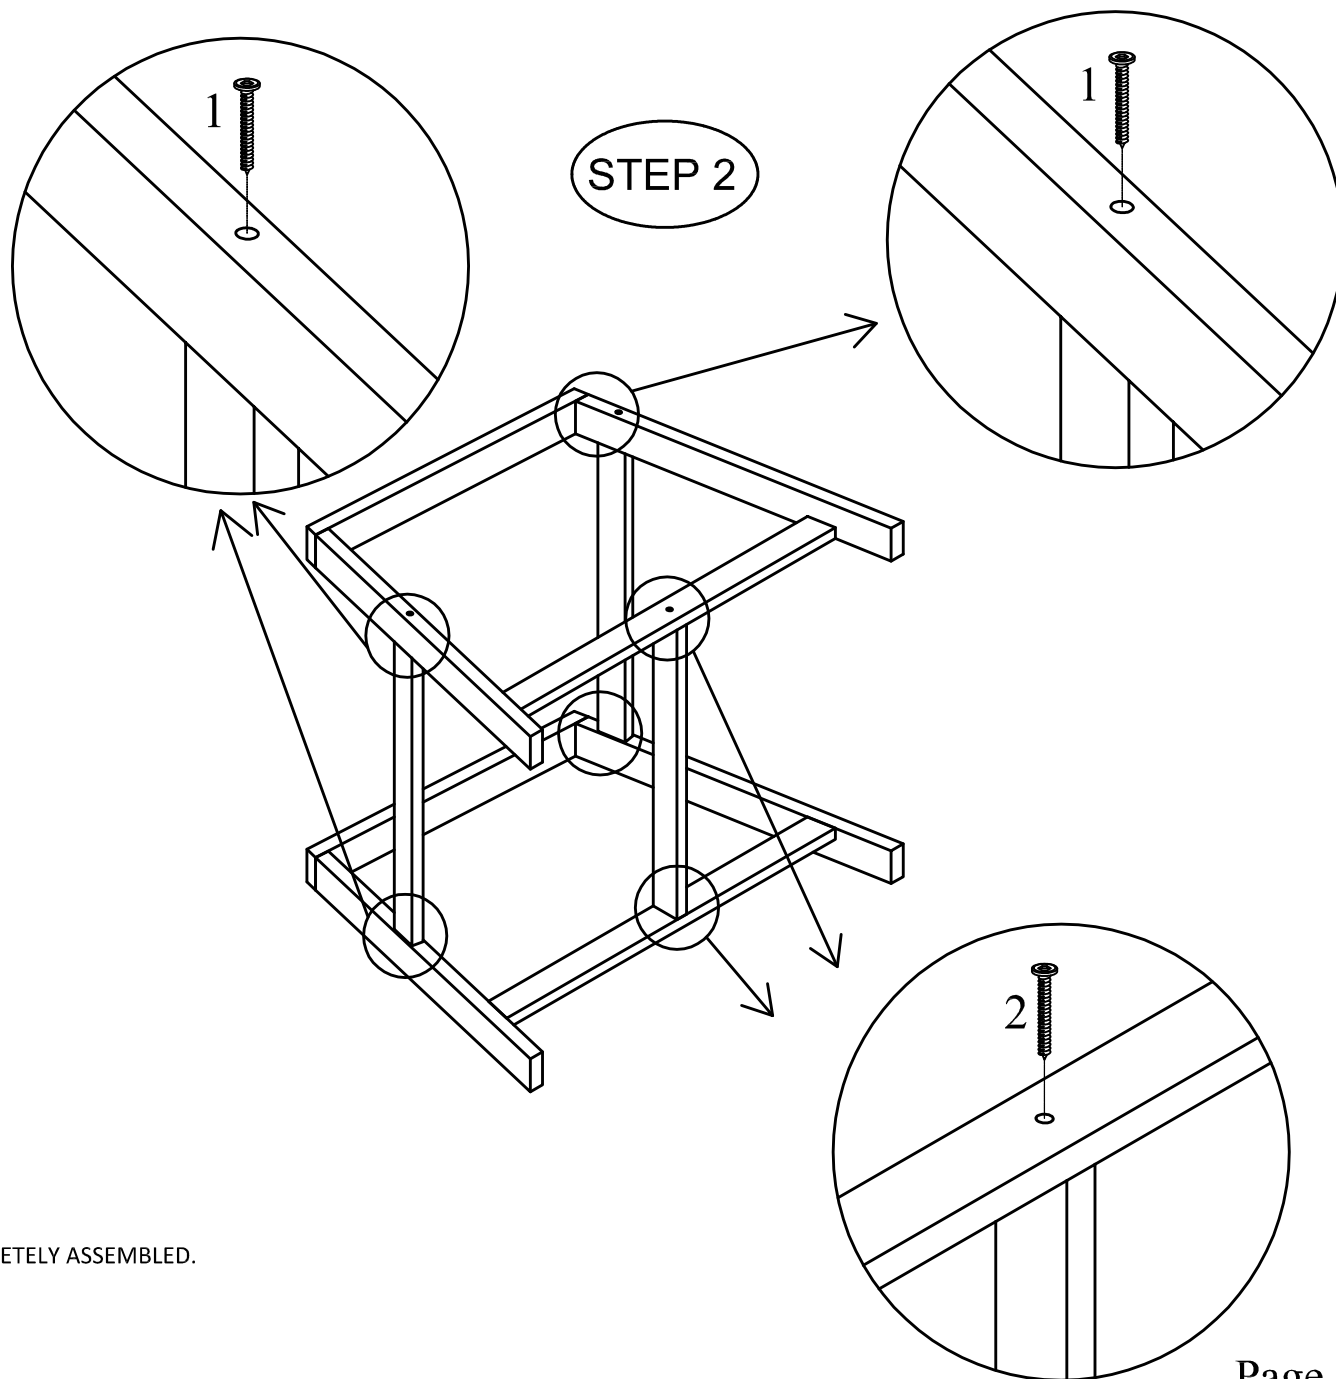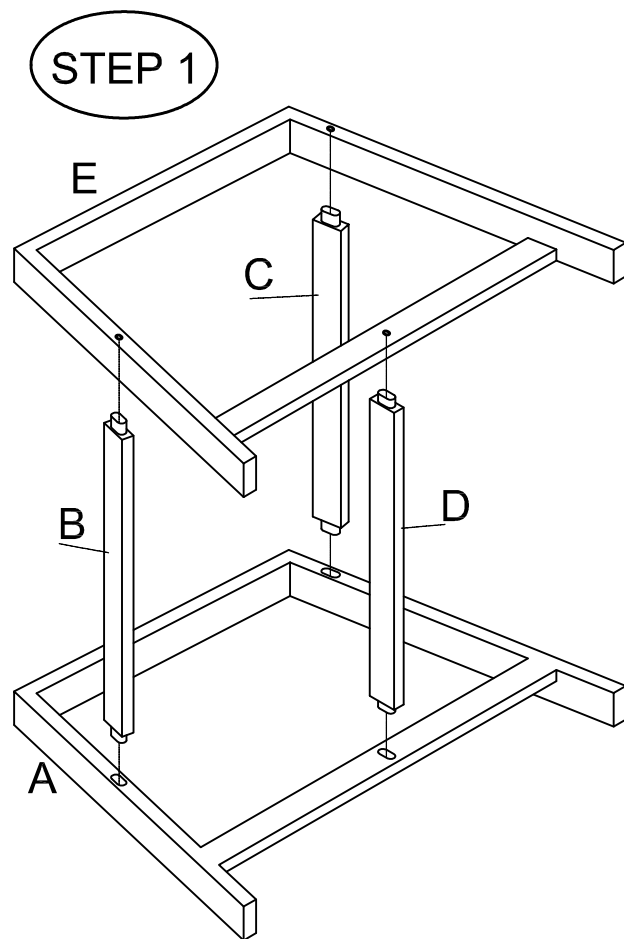

- DO NOT FULLY TIGHTEN SCREWS UNTIL CHAIR IS COMPLETELY ASSEMBLED.
- Easiest to assemble with two people.

STEP 3

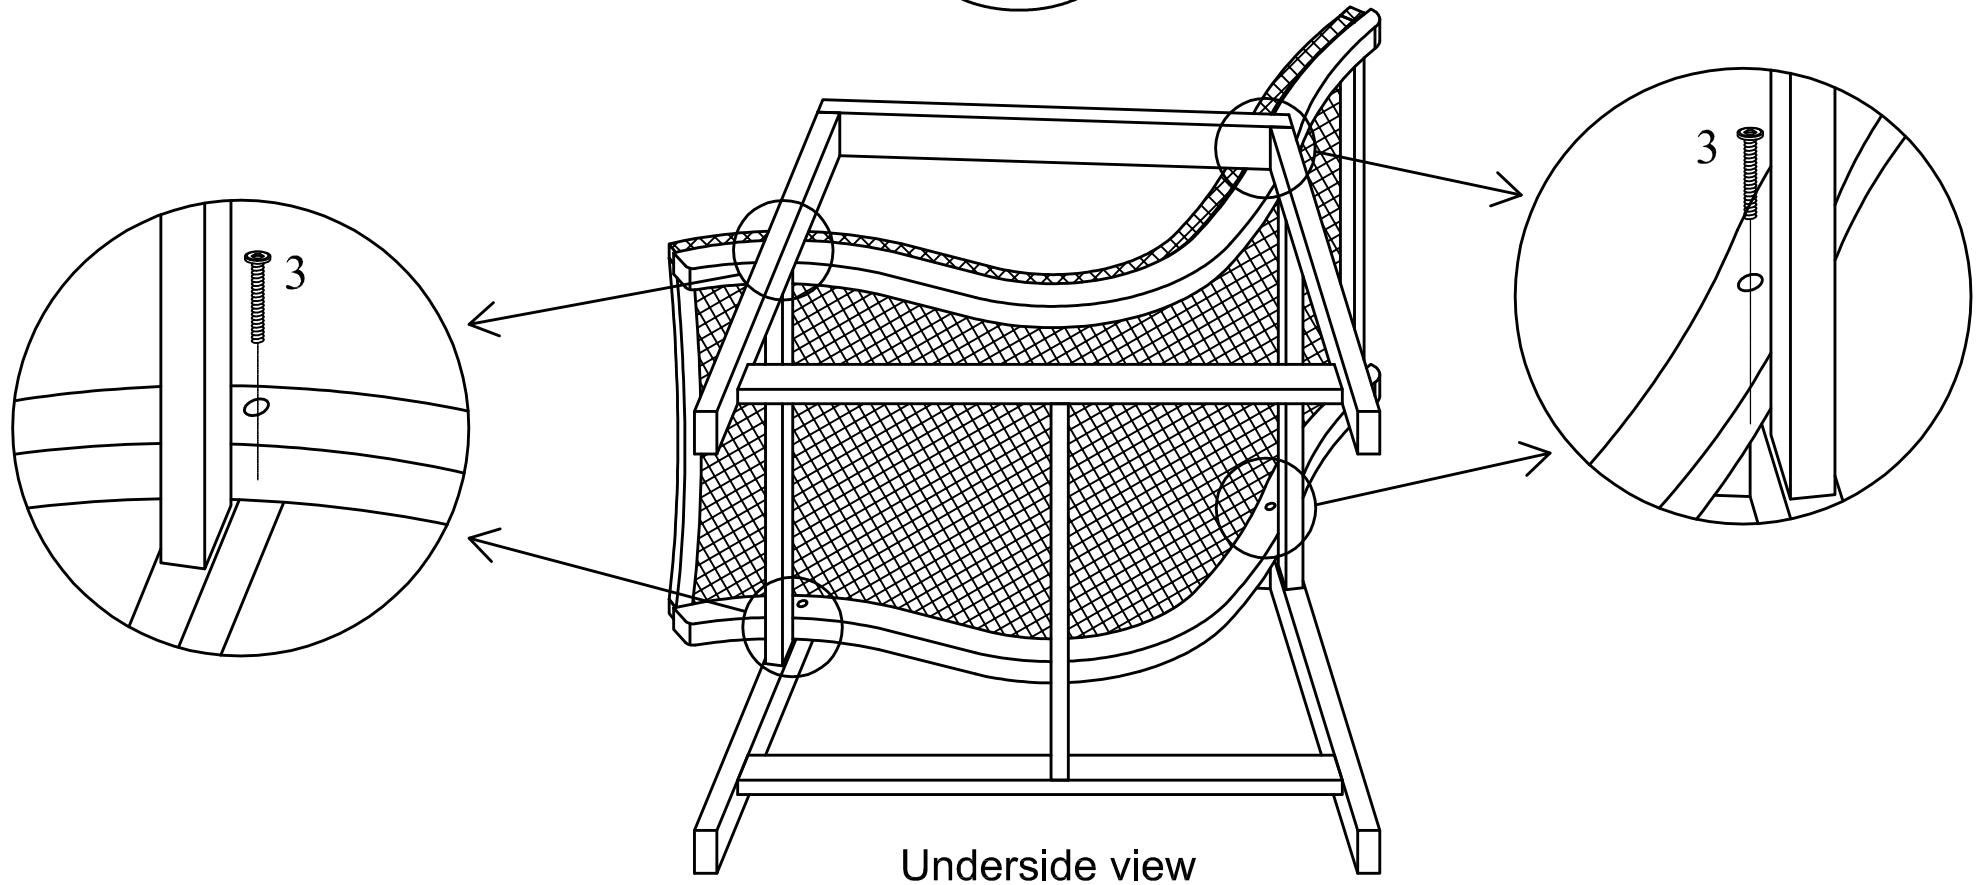

Tighten screws once the chair is fully assembled.