


Daily Cleaning for the ECO ST Oven

Daily Cleaning

Follow the steps below when cleaning your ECO ST oven. Use only TurboChef® -approved cleaning chemicals. The use of any other cleaning products may damage critical oven components, resulting in a non-warranty service call.

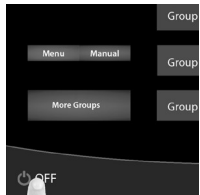

Step 1

Step 1: Prepare the Oven

⚠ WARNING: The oven operates at approximately 500°F (260°C) and may cause injury if not allowed to cool properly.

- Turn off the oven by touching the Off icon.
- Slightly open the oven door.
- Cooling takes approximately 30 minutes. DO NOT proceed to Step 2 until the oven displays “ready to clean.”




Step 2 (Fig A)

Step 2: Remove the Cook Plate and Lower Jetplate

⚠ WARNING: Be sure the oven interior is cool before removing these items.

- Remove the cook plate from the oven (Step 2, Fig. A).
- Loosen the bottom jetplate thumbscrew.
- Lift the front of the bottom jetplate and pull it out from the cavity (Step 2, Fig. B).

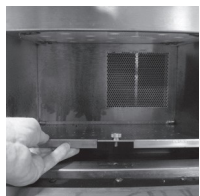

Step 2 (Fig B)

Step 3: Clean the Cook Plate and Lower Jetplate

- Wash, rinse, sanitize, and dry the jetplate and cook plate.

Step 4: Remove the Lower Panel and Clean the Air Filter

⚠ CAUTION: TurboChef does not recognize blocked air vents as a warrantable claim. The filter must be cleaned regularly or replaced if damaged. During oven operation, the filter must remain in place at all times.

- Remove the lower panel (under the door) by lifting straight up until the bolts are free from the retaining slots.
- Empty and clean the lower panel.
- Remove the air filter from the front of the oven.
- Rinse the air filter with hot water.
- Allow the air filter to dry completely.

⚠ CAUTION: DO NOT operate the oven without the air filter in place.

Step 5: Wipe the Oven Interior

- Use a food vacuum or damp towel to remove large particles from the oven cavity.

Step 6: Clean the Oven Interior

- Spray TurboChef Oven Cleaner onto the top, bottom, and sides of the interior.

⚠ CAUTION: DO NOT spray Oven Cleaner into the holes on the back oven wall. Doing so can damage critical oven components, resulting in a non-warranty service call.


- Allow Oven Cleaner to penetrate stains for five minutes.
- Clean the oven interior with a nylon scrub pad.



Step 6

Supplies and Equipment

TurboChef® Oven Cleaner (Product Number: 103180), TurboChef® Oven Guard (Product Number: 103181), Kay ClickSan® sanitizer, nylon scrub pad, clean damp and dry towels, disposable gloves, protective eyewear, dust mask (optional)

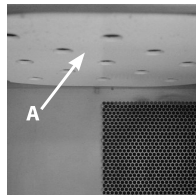


Step 6, Continued

Step 6: Clean the Oven Interior, Continued

⚠ CAUTION: DO NOT attempt to scrub the upper jetplate (A). If food is stuck to the oven ceiling, gently remove it without applying pressure to the glass plate. Breakage will result in a non-warranty service call.

⚠ CAUTION: DO NOT remove the top glass jetplate (A); breakage will result in a non-warranty service call.

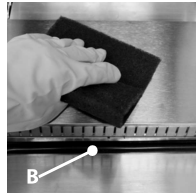

Step 7

Step 7: Clean and Dry the Oven Door

⚠ CAUTION: DO NOT spray Oven Cleaner directly onto the oven door gasket (B) or saturate it with water.

⚠ CAUTION: DO NOT scrub or attempt to clean the oven door gasket (B). Doing so may cause the oven door to misalign, resulting in a non-warranty service call.

- Clean oven door with Oven Cleaner and a nylon scrub pad.
- Wipe the oven door with a damp towel.



Step 8

Step 8: Rinse or Wipe the Oven Interior

⚠ CAUTION: DO NOT use a hose or water jet for cleaning. Doing so can damage critical oven components, resulting in a non-warranty service call.

- Wipe down the oven interior with a clean damp towel.
- Dry the oven interior with a clean towel.




Step 9

Step 9: Apply TurboChef Oven Guard

- Spray TurboChef Oven Guard onto a clean towel.
- Wipe the interior walls and the inside of the oven door.

⚠ CAUTION: DO NOT spray Oven Guard into the cavity, especially around the holes on the back oven wall. Doing so can damage critical oven components, resulting in a non-warranty service call.

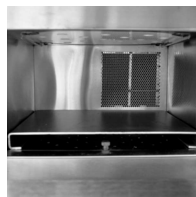

Step 10

Step 10: Reinstall Components

- Reinstall the lower jetplate and tighten the thumbscrew.
- Reinstall the cook plate.
- Close the oven door.
- Reinstall the filter, or replace it with a new one if the mesh is deteriorated, has large openings, or has started to dislodge from the frame.
- Reinstall the lower panel.

Step 11: Clean the Oven Exterior

- Wipe the oven exterior with a clean, damp towel.

⚠ CAUTION: DO NOT spray chemicals into any openings, such as the vents below the door or on the back panel. Doing so can damage critical oven components, resulting in a non-warranty service call.

- The oven is ready to turn on.



Step 11