

LAVEX
JANITORIAL



INSTRUCTION MANUAL



READ ENTIRE MANUAL BEFORE USE

LAVEX JANITORIAL CORDLESS STICK VACUUM WITH HEPA FILTRATION AND TOOLKIT USER MANUAL

457VC8002BL • 457VC8002GY

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING (THIS APPLIANCE), Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

WARNING—To reduce the risk of fire, electric shock, or injury:

1. Do not use outdoors or on wet surfaces.
2. Do not allow to be used as a toy. Close attention is necessary when used by or near children, pets or plants.
3. Use only as described in this manual. Use only manufacturer's recommended attachments
4. Do not use with damaged cord or charger. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
5. Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
6. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
7. Do not handle charger, including charger plug, and charger terminals with wet hands
8. Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
9. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
10. Use extra care when cleaning on stairs.
11. Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
12. Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
13. Do not use without dust container and filter.
14. Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that have the switch on invites accidents.
15. Disconnect the battery pack from the appliance before making any adjustments, changing accessories, or storing appliance. Such preventive safety measures reduce the risk of starting the appliance accidentally.
16. Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
17. Use appliances only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
18. When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
19. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
20. Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
21. Do not expose a battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C may cause explosion.
22. Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.



23. Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
24. Do not modify or attempt to repair the appliance or the battery pack except as indicated in the instructions for use and care.
25. The appliance should be stored, used and charged at a temperature range 40°F~104°F.

SAVE THESE INSTRUCTIONS

Household use only.



IMPORTANTES MESURES DE SÉCURITÉ

L'utilisation d'un appareil électrique demande certaines précautions:

LIRE TOUTES LES INSTRUCTIONS AVANT DE FAIRE FONCTIONNER (CET APPAREIL). Le non-respect des mises en garde et des instructions peut causer des chocs électriques, des incendies et/ou des blessures graves.

AVERTISSEMENT. Pour réduire les risques d'incendie, de choc électrique ou de blessure:

1. Ne pas exposer à la pluie, Ranger à l'intérieur.
2. Ne pas permettre aux enfants de jouer avec l'appareil. Une attention particulière est nécessaire lorsque l'appareil est utilisé par des enfants ou à proximité de ces derniers.
3. N'utiliser que conformément à cette notice avec les accessoires recommandés par le fabricant.
4. Ne pas utiliser si le cordon ou la fiche est endommagé. Retourner l'appareil à un atelier de réparation s'il ne fonctionne pas bien, s'il est tombé ou s'il a été endommagé, oublié à l'extérieur ou immergé.
5. Ne pas tirer soulever ni trainer l'appareil par le cordon. Ne pas utiliser le cordon comme une poignée, le coincer dans l'embrasure d'une porte ou l'appuyer contre des arêtes vives ou des coins. Ne pas faire rouler l'appareil sur le cordon. Garder le cordon à l'écart des surfaces chaudes.
6. Ne pas débrancher en tyrant sur le cordon. Tirer plutôt la fiche.
7. Ne pas manipuler le chargeur, y compris la prise du chargeur, et les bornes du chargeur avec les mains mouillées
8. N'insérer aucun objet dans les ouvertures. Ne pas utiliser l'appareil lorsqu'une ouverture est bloquée. S'assurer que de la poussière, de la peluche, des cheveux ou d'autres matières ne réduisent pas le débit d'air.
9. Maintenir les cheveux, les vêtements amples, les doigts et toutes les parties du corps à l'écart des ouvertures et des pièces mobiles.
10. User de prudence lors du nettoyage des escaliers.
11. Ne pas aspirer des liquides inflammables ou combustibles, comme de l'essence, et ne pas faire fonctionner dans des endroits où peuvent se trouver de tels liquides.
12. Ne pas aspirer de matières en combustion ou qui dégagent de la fumée, comme des cigarettes, des allumettes ou des cendres chaudes.
13. Ne pas utiliser sans bac à poussière ni filtre.
14. Éviter une mise en marche accidentelle. S'assurer que l'interrupteur est à la position arrêt avant de raccorder la batterie, de lever ou de déplacer l'appareil. Transporter l'appareil en gardant un doigt sur l'interrupteur, ou mettre sous tension un appareil dont l'interrupteur est à la position marche peut causer un accident.
15. Retirer la batterie de l'appareil avant d'effectuer des réglages, changer les accessoires ou ranger l'appareil. Ces mesures de sécurité ont pour but d'éviter une mise en marche accidentelle de l'appareil.
16. Recharger uniquement avec le chargeur prescrit par le fabricant. Un chargeur convenant à un type de batterie peut présenter un risque d'incendie lorsqu'il est utilisé avec une autre batterie.
17. Utiliser uniquement les batteries recommandées pour l'appareil. L'utilisation d'autres types de batteries peut présenter un risque de blessure ou d'incendie.
18. Lorsque l'appareil n'est pas utilisé, tenir la batterie loin d'objets métalliques comme des trombones, des pièces de monnaie, des clés, des clous, des vis ou autres petits objets qui pourraient établir une liaison entre les bornes. Un court-circuit des bornes des batteries peut causer des brûlures ou un incendie.

 
19. En condition d'usage abusif, du liquide peut s'échapper de la batterie ; éviter tout contact avec ce liquide. En cas de contact accidentel, rincer abondamment avec de l'eau. En cas de contact avec les yeux, consulter également un médecin. Le liquide projeté peut causer des irritations ou des brûlures.
20. Ne pas utiliser une batterie ou un appareil endommagé ou qui a été modifié. Des batteries endommagées ou modifiées peuvent avoir un comportement imprévisible pouvant causer un incendie, une explosion ou un risque de blessure.
21. Ne pas exposer une batterie ou un appareil à la flamme ou à des températures excessives. L'exposition à une flamme ou à des températures supérieures à 130 °C peut causer une explosion.
22. Respecter toutes les instructions de chargement et ne pas charger la batterie ou l'appareil à des températures qui ne sont pas incluses dans la gamme de températures indiquées dans la notice d'instructions. Un chargement mal effectué.
23. Confier les réparations à une personne qualifiée qui utilisera uniquement des pièces de remplacement identiques. Cette façon de faire garantira la sécurité du produit.
24. Ne pas modifier ni tenter de réparer l'appareil ou la batterie sauf comme il est indiqué dans les instructions d'utilisation et d'entretien.
25. Le produit fonctionne à des températures comprises entre 40 ° F et 104 ° F.

CONSERVER CES INSTRUCTIONS


Usage Domestique seulement



2. PRODUCT LAYOUT

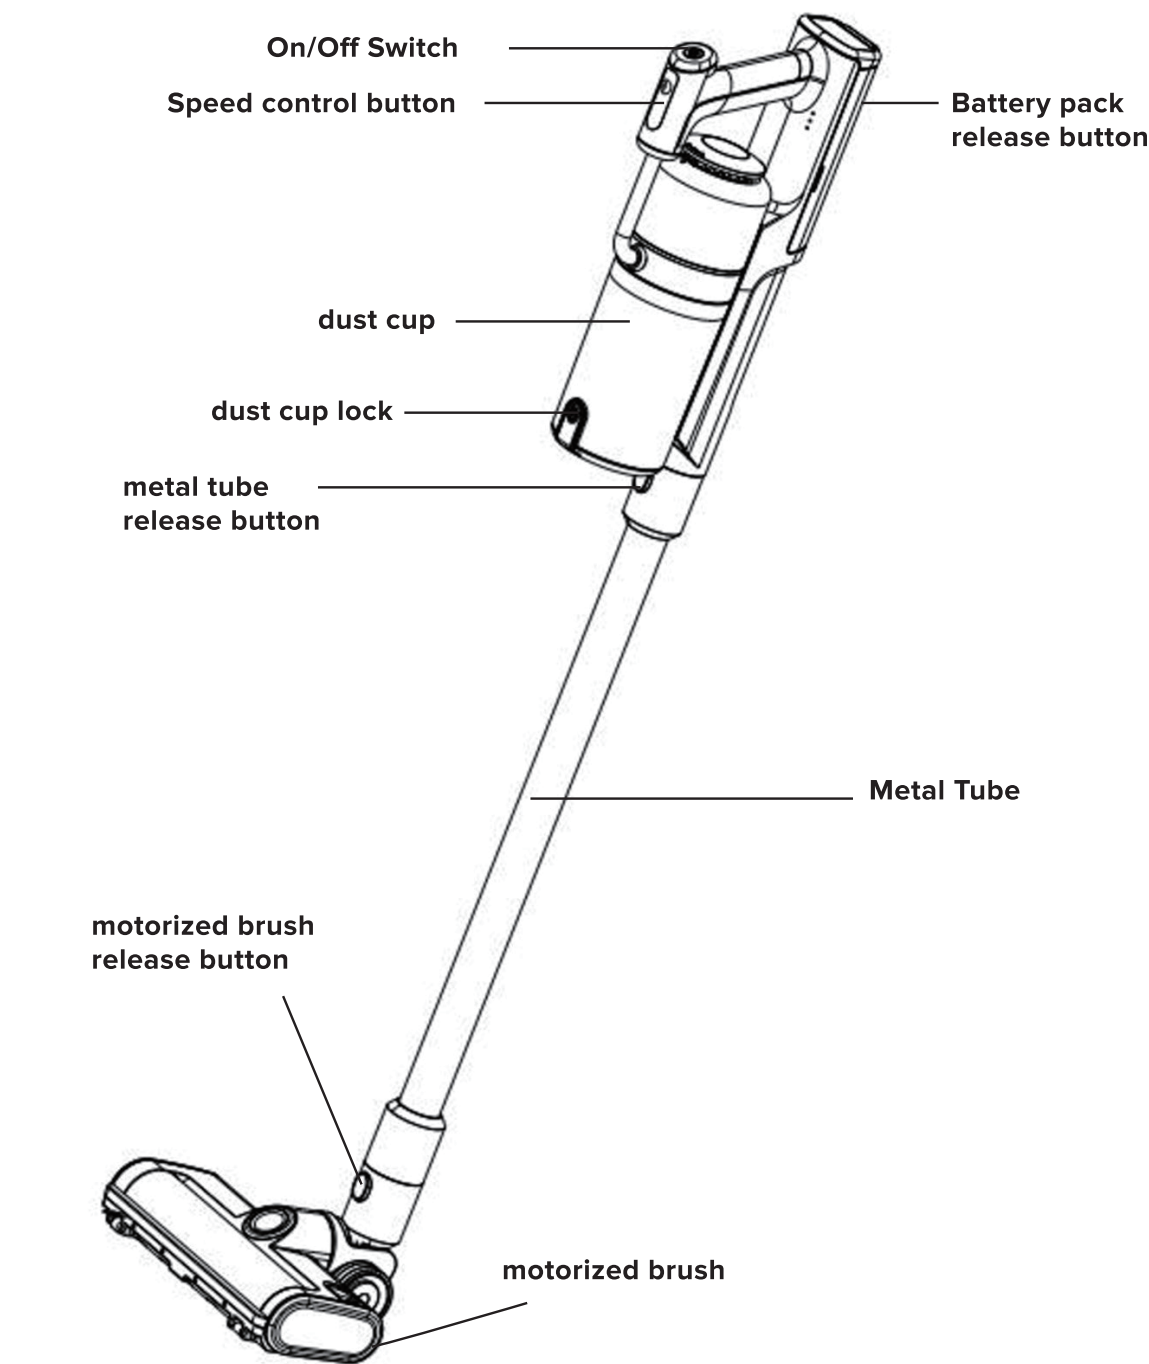

Crevice Tool

 


Dust Brush




Power Adapter

3. PRODUCT INSTRUCTIONS

 1. Assemble the dust cup in a clockwise fashion following the indication arrows on the machine.
2. Install the dust cup by aligning it and then turning clockwise, following the indication arrows on the machine.

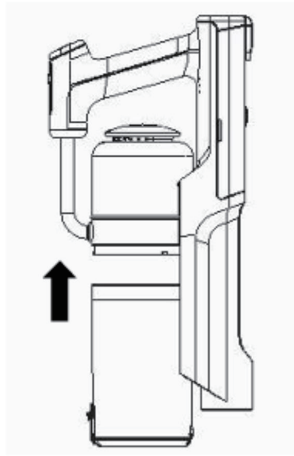


clockwise direction

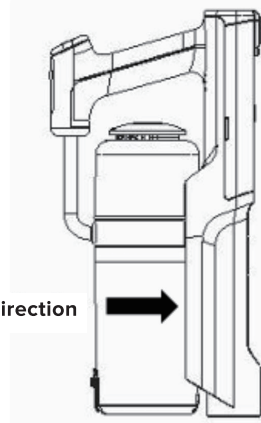 

3. Insert the metal tube into the body until you hear a click. Insert the motorized brush to the head of the metal tube until you hear a click.



 4. Your vacuum cleaner is now ready for operation.

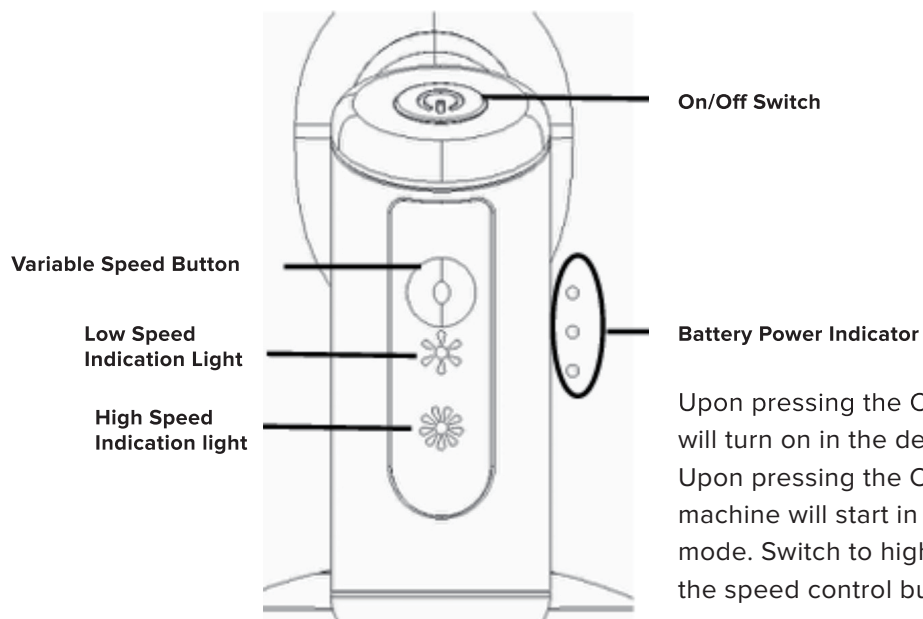


Upon pressing the On/Off Switch the machine will turn on in the default (Low Suction) setting. Upon pressing the ON/OFF switch, the machine will start in the default low speed mode. Switch to high speed mode by pressing the speed control button.

3. PRODUCT INSTRUCTIONS

HANDHELD VACUUM SETTING

 Insert your desired accessory into the body of the machine until you hear a click.

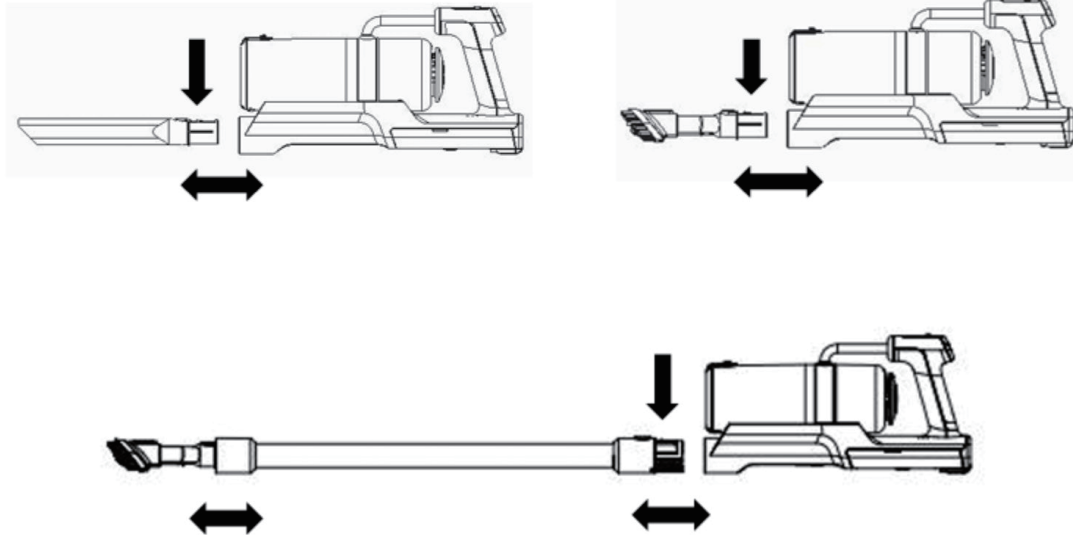


BATTERY CHARGING

1. A single flashing light on the battery pack indicates that the power supply has been drained and the battery must be charged.
2. When charging, the number of lights flashing on the battery pack represents the total charge. First a single light will flash, then a second, then all three. When the battery is fully charged, all lights will be solid.
3. When the battery is fully charged, the light will turn off after approximately 10 minutes, indicating a full charge.

Charging Mode 1:

 
Directly insert into the charging socket of the host battery pack to charge.

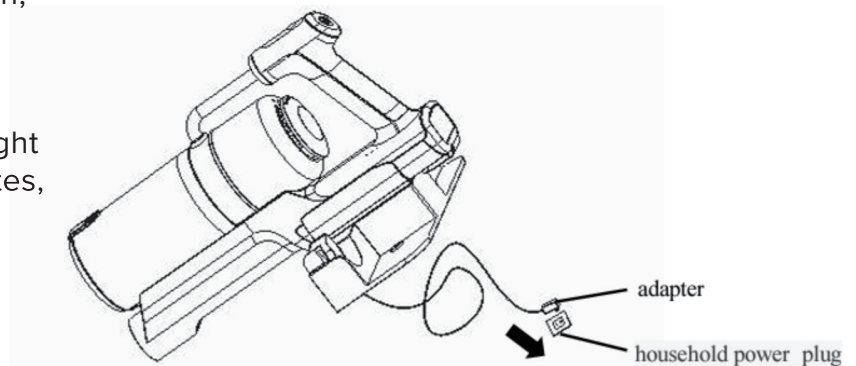

Charging Mode 2:



Charging socket of single battery pack.

 Slide down the battery pack release button, and pull out the battery pack.

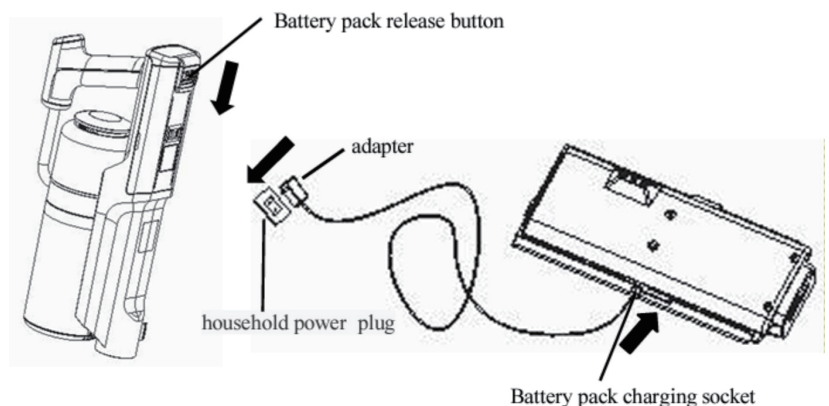

INDEPENDENT SUPPORT PLACEMENT

  
The machine and the floor brush are placed at a 90 degrees angle with the wall (as seen below). From here the machine can slide into the wall mount and the accessories can be situated within the wall mount for convenient storage.

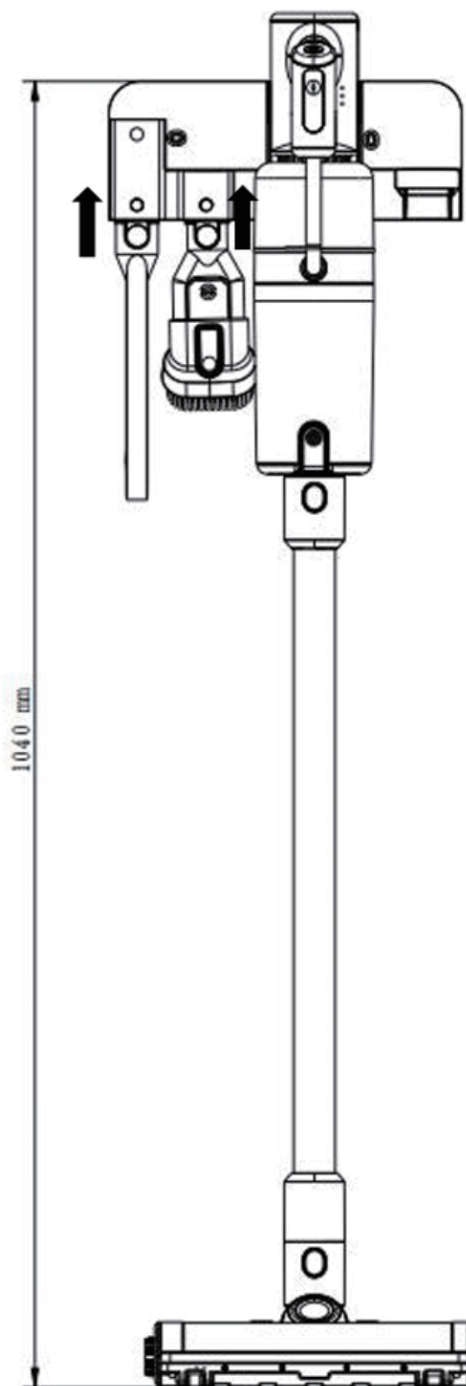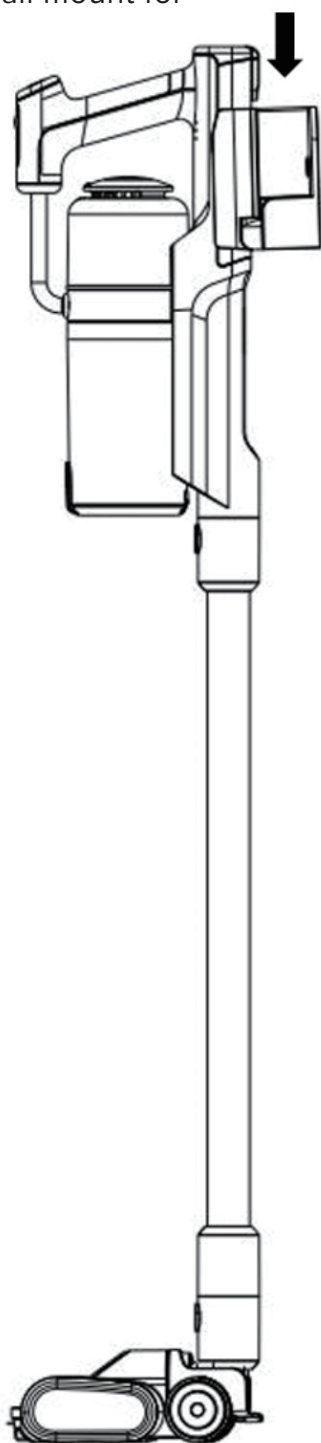



4. CLEANING INSTRUCTIONS

HOW TO EMPTY THE DUST CUP AND CHANGE THE FILTER


 
1. Remove the dust cup by twisting counterclockwise until it unlocks.

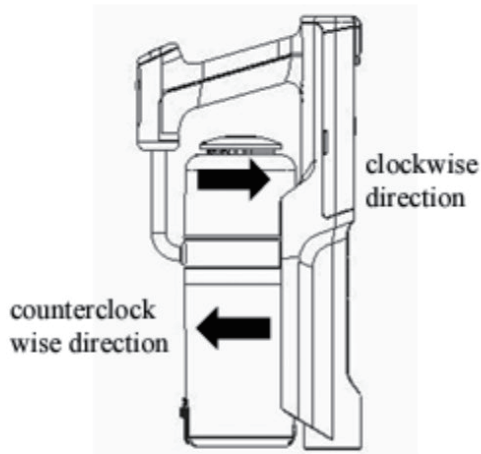

  2. Press the easy release button to empty any debris from the dust bin as shown in the figure below.

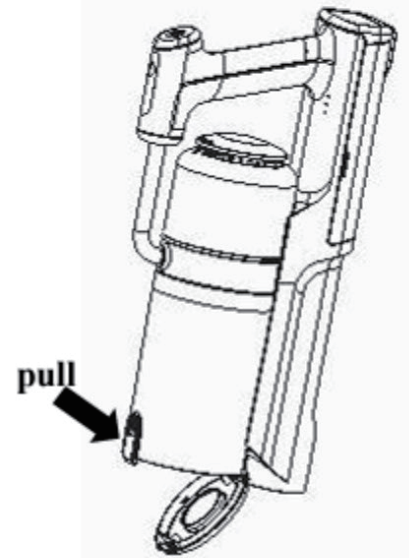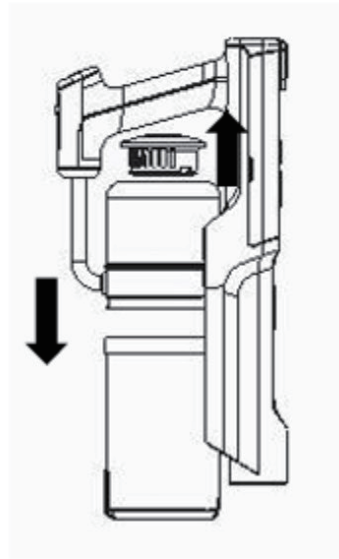


  3. The filter can be removed by pulling on the tab connected to the filter.

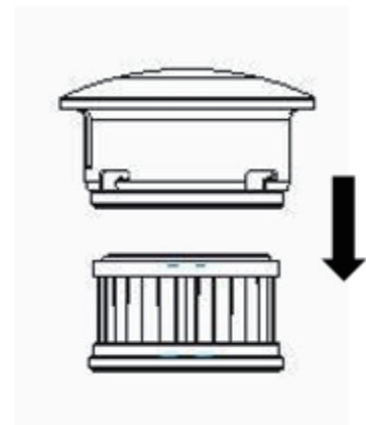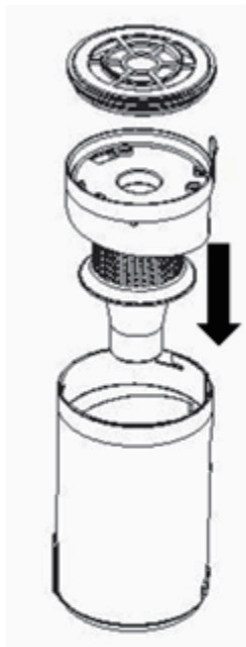


4. CLEANING INSTRUCTIONS (CONTINUED)

 
4. Wash both the HEPA and sponge filter.

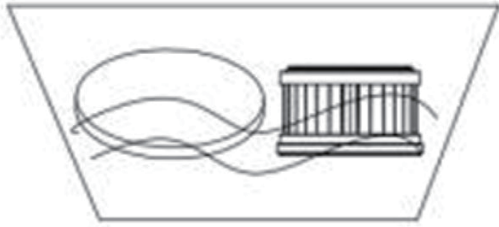

 
5. Be sure to dry the HEPA and sponge filter completely.

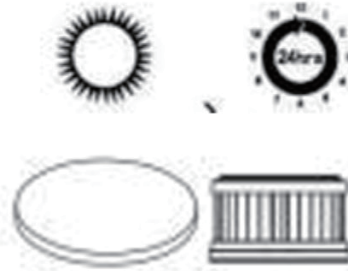

 6. Put the filter and HEPA back into the dust cup.

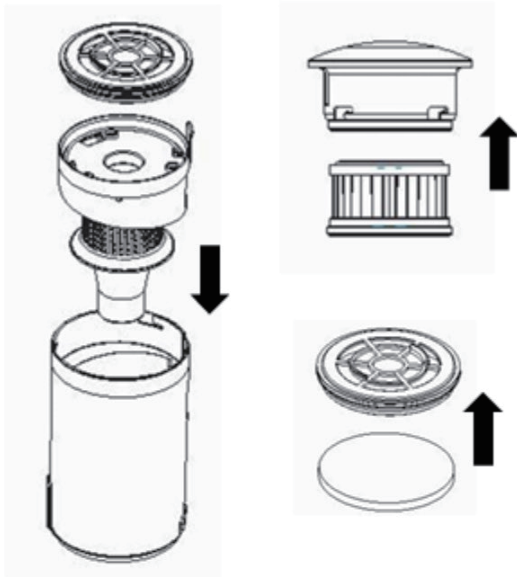

7. Attach the dust cup and HEPA filter.

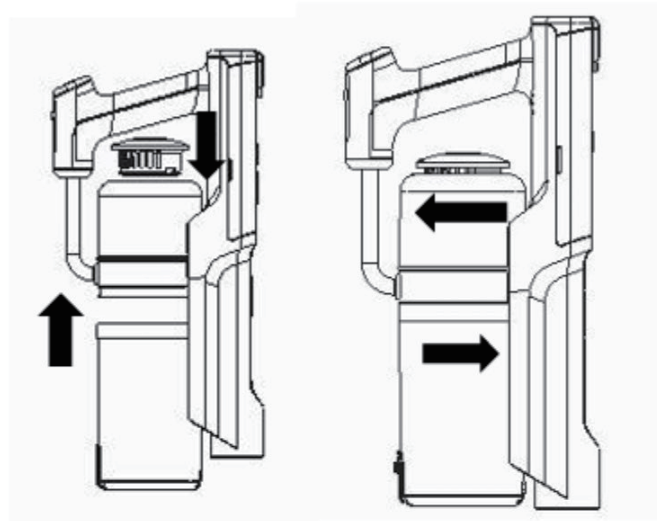 


4. CLEANING INSTRUCTIONS (CONTINUED)


HANDHELD VACUUM SETTING

1. Disconnect the power supply and slide the brush lock down as shown below

 
Insert your desired accessory into the body of the machine until your hear a click.

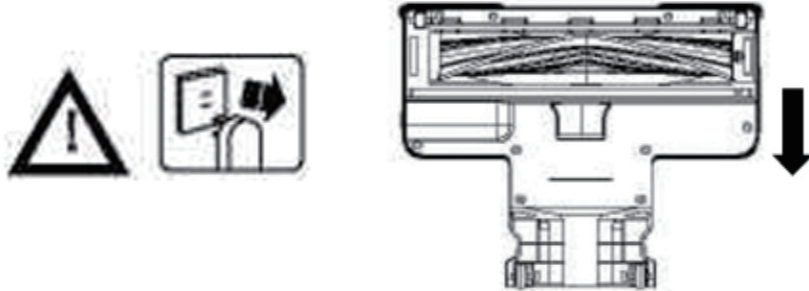

 2. Unlock the brush latch

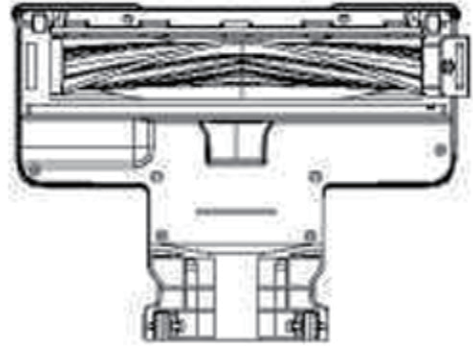

 
3. Remove the roller brush and carefully clean out any hair or foreign material

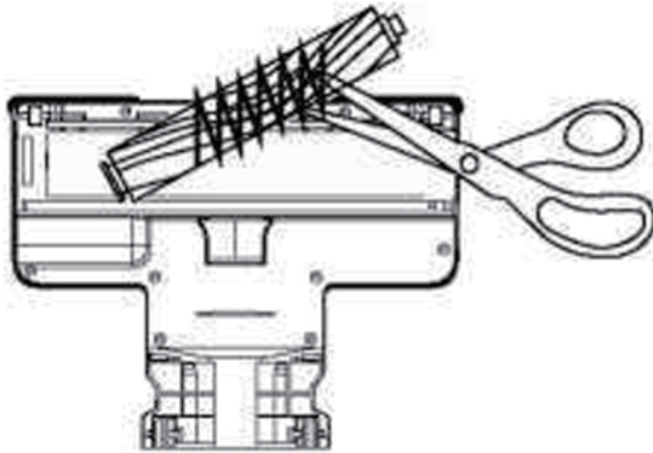


4. Wash the roller brush with water



 5. Dry the roller brush for 24 hours

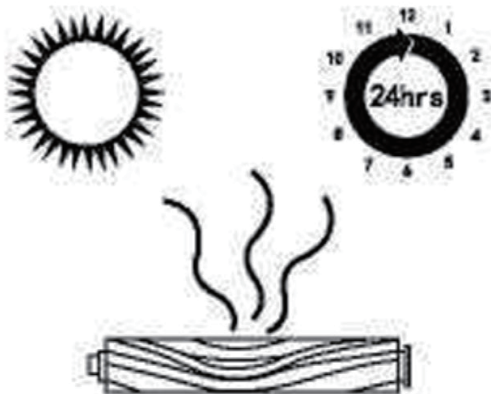

 6. Reinstall the roller brush into the brush head. Slide the brush latch to the left until it is locked.

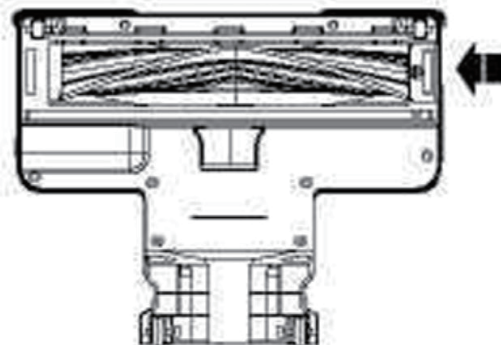

5. MAINTENANCE

MACHINE MAINTENANCE

- Do not carry out any maintenance or repair work other than that shown and described in this Operating Manual.
- Store the machine indoors.
- Do not use or store it below 37.4 degrees F (3 degrees C). Ensure the machine is at room temperature before operating. Clean the machine only with a dry cloth.
- Do not use any lubricants, cleaning agents, polishes or air fresheners on any part of the machine.

VACUUMING

- Do not use without the dust bin and filters in place.
- Fine dirt such as plaster dust or flour should only be vacuumed in very small amounts.
- Do not use the machine to pick up sharp hard objects, small toys, pins, paperclips, etc. They may damage the machine.
- When vacuuming, certain carpets may generate small static charges in the dust bin or wand. These are harmless and won't cause any electrical hazards. To minimize any effect from this, do not put your hand or insert any object into the dust bin unless you have first emptied it. Clean the dust bin with a damp cloth only.
- Use extra care when cleaning on stairs.
- Do not rest the machine on chairs, tables, etc.
- Do not press down on the nozzle with excessive force when using the machine as this may cause damage
- Do not leave the cleaner head in one place on delicate floors.
- On waxed floors, the movement of the cleaner head may create an uneven luster. If this happens, wipe with a damp cloth, polish the area with wax, and wait for it to dry.

EMPTYING THE DUST BIN

- To make emptying the dust bin easier, it is advisable to remove the wand and floor tool.
- To minimize dust/allergen contact when emptying, encase the dust bin tightly in a plastic bag to empty.
- Remove the dust bin carefully from the bag.
- Seal the bag tightly, dispose as normal.

CLEANING THE DUST BIN

- Ensure the machine is disconnected from the charger before removing the dust bin.
- Remove the wand and floor tool.
- Clean the dust bin with a damp cloth only.
- Do not use detergents, polishes or air fresheners to clean the dust bin.
- Do not put the dust bin in a dishwasher.
- Ensure the dust bin is completely dry before replacing.
- To replace the dust bin, align the tabs on the dust bin with the grooves on the main body and slide upwards into place until the catch clicks.

WASHABLE PARTS

- Your appliance has washable parts, which require regular cleaning. Follow the instructions below.

WASHING THE FILTERS

- Wash the Filters at least once a month
- More frequent washing may be required where the user vacuums fine dust or uses the machine intensively.
- Ensure the machine is disconnected from the charger before removing the filter.
- Check and wash the filter regularly according to instructions to maintain performance.
- The filter may require more frequent washing if vacuuming fine dust
- To remove the filter lift it out of the top of the machine.
- Wash the filter with cold water only
- Run water over the outside of the filter until the water runs clear.
- Squeeze and twist with both hands to make sure the excess water is removed.
- Lay the filter on its side to dry. Leave to dry completely for a minimum of 24 hours.
- Do not put the filter in a dishwasher, washing machine, tumble dryer, oven, microwave or near an open flame.
- To refit, place the dry filter back into the top of the machine. Make sure it is seated properly.

WASHABLE PARTS

- Your appliance has washable parts, which require regular cleaning. Follow the instructions below.

6. TROUBLESHOOTING

WASHING THE FILTERS

- Wash the filters at least once a month
- More frequent washing may be required where the user vacuums fine dust or uses the machine intensively.
- Ensure the machine is disconnected from the charger before removing the filter.
- Check and wash the filter regularly according to instructions to maintain performance.
- The filter may require more frequent washing if vacuuming fine dust
- To remove the filter lift it out of the top of the machine.
- Wash the filter with cold water only
- Run water over the outside of the filter until the water runs clear.
- Squeeze and twist with both hands to make sure the excess water is removed.
- Lay the filter on its side to dry. Leave to dry completely for a minimum of 24 hours.
- Do not put the filter in a dishwasher, washing machine, tumble dryer, oven, microwave or near an open flame.
- To refit, place the dry filter back into the top of the machine. Make sure it is seated properly.

7. SPECIFICATIONS

Battery	21.6V/2000mAh
Charging period	≤5hours
Weight	1.47kg
Moter Power	250W
Vacuum	21Kpa(MAX)
Adapter model	SAW15A-270-0500UD
Adapter Input	100-240V~,50/60Hz,0.5A
Adapter Output	27VDC,500mA

LIMITED WARRANTY

WHAT THIS WARRANTY DOES NOT COVER:

Lavex will not warrant coverage for product failure or damages that arise under the following conditions:

- Parts of the vacuum that require replacement under normal use, such as bumpers, brushrolls, belts, and filters.
- Damages or malfunctions caused by negligence, abuse, improper use, or actions not in accordance with the User Manual.
- Equipment used for residential or other non-commercial purposes.
- Defects or damages caused by improper maintenance, use of any replacement parts other than Lavex Janitorial original parts, wear and tear, misuse, abuse, vandalism, or Act of God.

Lavex Janitorial will, at its option, repair or replace a defective vacuum or vacuum part that is covered by this warranty. As a matter of warranty policy, Lavex Janitorial will not refund the consumer's purchase price.

Lavex Janitorial does not recognize third-party sales; the warranty is null and void if the unit is purchased from any non-authorized dealer.

The seller shall in no event be liable for direct, indirect, or consequential damages in connection with Lavex Janitorial products.

This warranty explicitly does not apply to, and Lavex Janitorial is not responsible for, any warranty claims made on products sold or used outside of the United States.

Lavex Janitorial attempts to ensure that their products comply with codes and regulations dictating sales, construction and use. However, Lavex Janitorial cannot guarantee compliance, and cannot be responsible for their products' use. Be sure to review product application as well as local and national codes and regulations to ensure compliance before use.

Any action for breach of this warranty must be commenced within 1 year of the date on which the breach occurred. No modification of this warranty, or waiver of its terms, shall be effective unless approved in a writing signed by the parties. The laws of the Commonwealth of Pennsylvania shall govern this warranty and the parties' rights and duties under it. Lavex Janitorial shall not under any circumstances be liable for incidental or consequential damages of any kind, including but not limited to loss of profits.

FOR WARRANTY INQUIRIES OR SERVICE:

To obtain warranty service, contact the location where you purchased the product:

www.WebstaurantStore.com:

Contact help@webstaurantstore.com. Please have your order number ready.

The Restaurant Store:

If you purchased this product from your local store location, please contact your store directly.

www.TheRestaurantStore.com:

If you purchased this product online, call 717-392-7261.

You must have your order number ready when contacting.

Clark Food Service Equipment, PRO Marketplace, Hometown Provisions:

Please contact your account manager directly. If you do not know your account manager, please call 717-392-7363 for CFSE and Pro Marketplace or 717-464-4165 for Hometown Provisions. Failure to contact the designated location prior to obtaining equipment service may void your warranty.

Lavex Janitorial makes no other warranties, express or implied, statutory or otherwise, and **HEREBY DISCLAIMS ALL IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND OF FITNESS FOR A PARTICULAR PURPOSE.**

