



PRO
SOLUTIONS

SPECIFICATION SHEET Dishwasher Rinse Aid

Finish® Liquid Dishwasher Cleaner

Dual action formula tackles the hidden grease and limescale deep inside your dishwasher



Product Information

Product	Units/Case	Unit Size	Reckitt Item #
Finish® Liquid Dishwasher Cleaner	6	8.45 oz	51700-95315

Shipping Specifications

Reckitt Item #	51700-95315
Package Size	8.45 oz
Case Pack	6
Pallet Cases	240
Tie/High	40/6
Case Weight	4.19 lbs
Case Cube	0.13 cu. ft
Case L x W x H	7.84 x 5.67 x 5.20 in
Item D x W x H	1.26 x 5.39 x 5.00 in
Item Cube	0.020 cu. ft
Item Weight	0.66 lbs
Item UPC	0-51700-95315-8
CSC Case GTIN	10051700953155

Technical Specifications

Technical Data	Finish® Liquid Dishwasher Cleaner
Color/Form	Blue/Liquid
Fragrance	Minty
pH	1.3 to 1.7

USE AREAS

- Dishwashers

DIRECTIONS FOR USE

1 bottle = 1 wash. Use every 3 months. Do not remove cap. Remove sticker from top of bottle to expose wax plug. Place bottle upside down in the bottom dish rack. Keep cap on and make sure the wax plug is exposed. DO NOT USE ANY SOAP OR DISHWASHER DETERGENT. Run the dishwasher empty on the hottest cycle (i.e. pots & pans, sanitization, etc.). Discard empty bottle at the end of the cycle. Fits all dishwashers.

**For additional product information and Safety Data Sheet,
please visit www.rbnainfo.com**

