




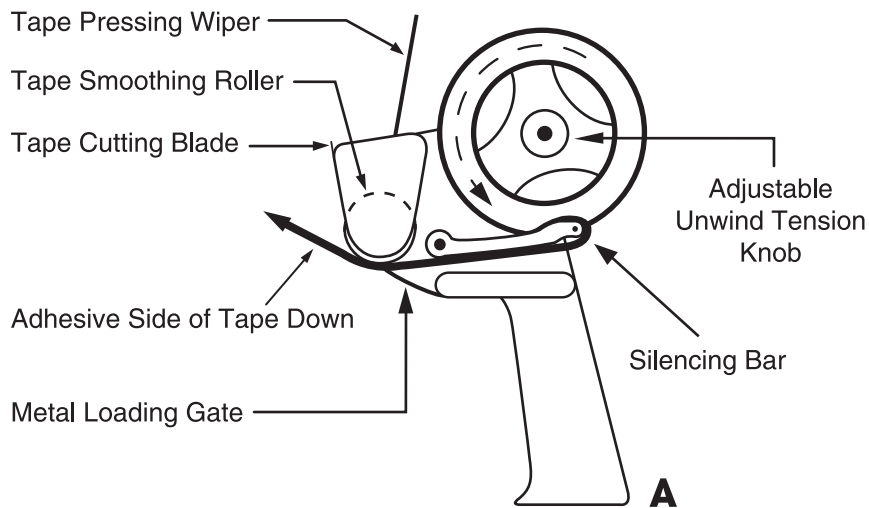

Tension Knob Adjustment

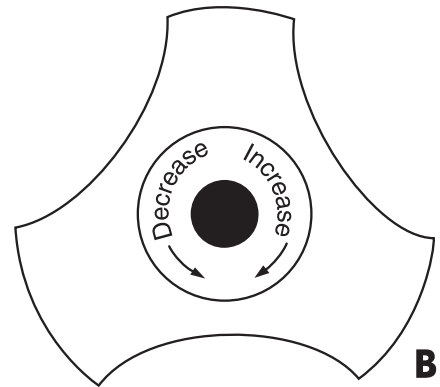


TO LOAD

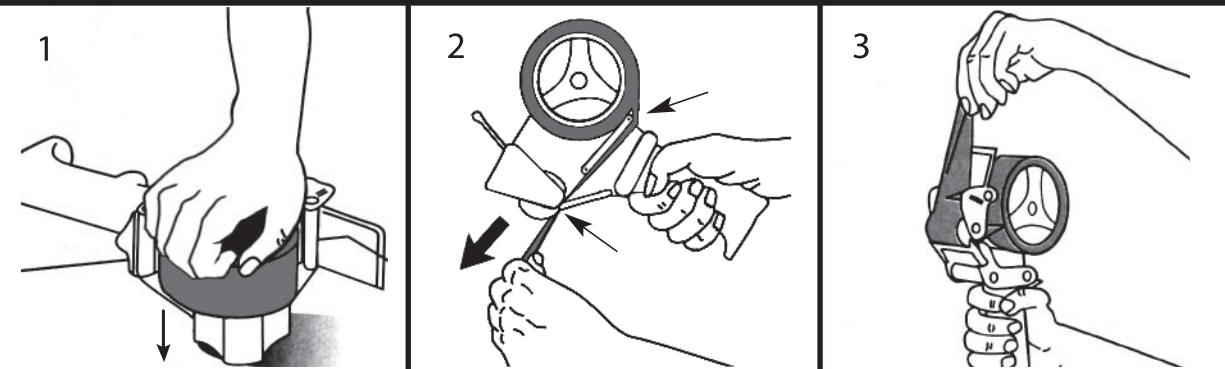

1. Place dispenser on flat surface. Push roll of tape onto tape wheel until fully mounted. Be sure tape unwind orientation has sticky side down (per diagram **A** above).
2. Pull 5~6 inches of tape off and thread under silencing bar (sticky side down), then through smoothing roller and metal loading gate.
3. Pull tape over smoothing roller allowing roll to rotate freely off tape wheel. To increase or decrease unwind tension see diagram **B** above.

TO OPERATE

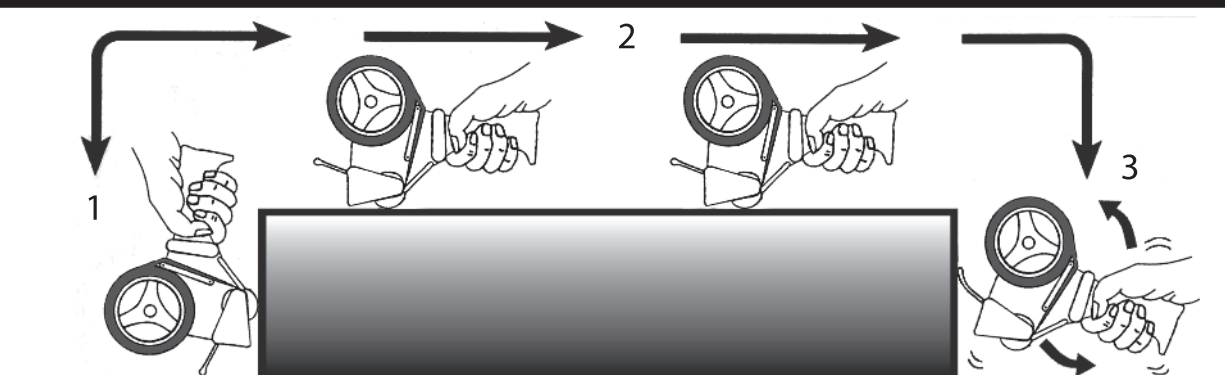

1. Begin application of tape at desired depth on the side of the box.
2. Glide the dispenser across the surface at the carton seam - the smoothing roller automatically presses tape to the package.
3. Continue down the opposite side to desired length. Tilt dispenser forward applying pressure on the tape pressing wiper. The serrated cutting blade will "pop out" to cut tape. Tilt further in the same motion to wipe down end of tape.