Instant Canopy Instruction Manual



Thank you for purchasing a Backyard Pro Canopy! Before you set up your canopy please read these instructions and follow all steps:

It is your responsibility to read and save these instructions before attempting to set up your canopy. We also suggest that you follow these safety precautions, care and maintenance tips when using your canopy.

- 1. Never set up or continue to use in heavy rain, wind or storm conditions, especially lightning storms. Damage can occur to your canopy.
- 2. We suggest that you take your time in order to avoid bending the frame or pinching your fingers or hands while opening and closing the frame.
- 3. Avoid setting up your canopy on steep inclines.
- 4. Do not use your canopy for permanent shelter. It was designed for temporary use only.
- 5. Keep your canopy away from heat and flames at all times. Do not barbecue or build fires under your Backyard Pro Canopy.
- 6. Never leave your canopy unattended.
- 7. Hand wash the canopy using only mild soap and water. Never use harsh detergents, abrasives or bleach. Do not machine wash.
- 8. Never fold or store your canopy when it is wet or damp. Let it dry completely to avoid mildew.
- 9. Always use common sense.
- 10. Warning: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS CANOPY

IMPORTANT NOTES:

· This folding canopy requires two adults to set up.

SET UP INSTRUCTIONS Step 1 - Place the frame


- A) Select a smooth, level site for your canopy.
- B) Stand by the sides and hold both legs of each side of the frame at the same time. Extend the frame to around 50%.

 Do NOT extend it by holding only one leg in the diagonal position, or the frame will be damaged.



Step 2 - Add the top

A) Lay the top over the frame.

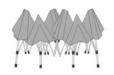

B) Secure the 4 corners of the top by hook and loop straps,
Make sure it is securely attached to the frame.

Please make sure the top of the frame matches exactly with each corner of the top or the top may be damaged after you extend the frame fully.



Step 3 - Extend the canopy (Important!!!)


A) With two people stand one opposite side, each hold up the "V" cross bar, move backwards slowly carefully opening the canopy until it is 95% opened.

Ensure that the frame is above the ground when doing this, or the bottom legs could be damaged.

Be careful not to pinch your fingers.

For 10'x20' canopy, you should stand by the cross bars instead of the sides.

B) Slide the safety lock mechanisms located on upper portion of each leg, toward top corners of roof until roof corners lock into place.

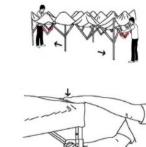

Step 4 - Extend the legs

Lift up both legs of the canopy on one side first. Then place your foot onto the foot plate at the bottom, and step it down to adjust the height. Repeat this on the remaining 2 legs.



Before taking down the canopy, please make sure all the straps on cross bars Are removed, or it will lead to damage.



Step 1

Lift tow outer legs slightly, depress snap button, telescope inner legs up into outer legs.
Repeat on opposite side.

Step 2

Release auto slider at each corner by pushing snap-button to release pressure on slider. Repeat on all four corners.

Step 3

Grasp top of "^" cross bar on opposite sides,

Lift up canopy slightly while stepping towards partner until unit is 50% closed. Grasp two outer legs, push together to fully close (be careful not to pinch fingers).



Remove the top from frame, fold and put it into small outside pocket while frame is stored into roller bag.







