

Use & Care Guide

BOOSTER SEATS



LANCASTER™
TABLE & SEATING



ASSEMBLY/ARRIVAL

1. It is the responsibility of the recipient to inspect the shipment for damage prior to signing the bill of lading. Damages must be reported to your authorized retailer within 5 days of receipt.
2. Please refer to any safety labels on packaging or resources that come with booster seats.
3. Always follow cleaning and maintenance instructions.
4. If applicable, ensure all bolts and screws are tightened, structure is sound, and there are no cracks in wood.
5. Assembly, if applicable, should be conducted by a qualified adult using the applicable instructions.



CLEANING INSTRUCTIONS

WOOD SEATS

1. Do not use abrasive cleaners or products. Clean with a damp cloth and dry with a dry cloth. Recommended: Noble Sunbright (999SUN-BRIGHT), and for deep cleaning, Noble Luster-Plus (148LUSTER+).
2. If you are using a new soap or cleaner, test first on an area that may not be shown. Make sure wood is fully dry after cleaning and before use.


PLASTIC SEATS

1. Clean with mild soap or detergent and water, or clean with mild soap and with a dry, clean, cloth. Recommended: Noble Lemon Lance (147LMNLNRQT) and Noble AllSurf (147ALLSRF2HG).
2. Make sure product is fully dry after cleaning and before use.



HARNESS USAGE

1. (If applicable): Secure seat belt by pushing tabs into buckle until they click into place. Straps are adjustable to fit looser or tighter.

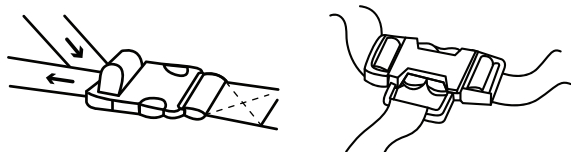

ONGOING MAINTENANCE

1. (If applicable): Inspect all welds and fasteners on booster seats for damage before use.

MONTHLY

2. (If applicable): Tighten all bolts and screws, and ensure structure is sound and there are not cracks/breaks in material. Do not overtighten - this may result in cracks in the material.



CAUTION

1. Keep child in sight at all times.
2. Do not use booster seat unless child can sit upright and unassisted.
3. Harness (if applicable) should be properly secured at all times while in use.
4. Always follow age and weight restrictions.
5. Ensure booster seat is stable on chair or seat that it is on.

WARNING

1. Do not use booster seat if broken or damaged in any way.
2. Do not remove any warning labels.
3. Keep away from open flames and high heat.

Use & Care Guide

BOOSTER SEATS



LANCASTER[™]
TABLE & SEATING



WARNING



Children have suffered **head injuries**, including skull fractures, **after falling** with or from booster seats.

- Check that booster seat is **securely attached** to adult chair before each use.
- **Always use restraints** until child is able to get in and out of booster seat without help. Adjust to **fit snugly**.
- **Never** allow child to **push away from table**.
- **Never lift** and **carry** child in booster seat.
- **Stay near** and **watch** your child during use.



WARNING



Use this product only for children capable of sitting upright unassisted.

Prevent serious injury or death.


Do not use in motor vehicles.

- Weight Capacity - Up to 55 lb.
- Age Range - Up to 5 years.
- To secure the booster seat to the chair, take the two straps on the bottom of the booster seat and fasten underneath or behind the adult sized chair. Ensure the straps are tightened before placing a child in the booster seat.
- Use the three-point harness to secure the child into the booster seat. Tighten the restraints to fit the child snugly.



LANCASTER[™]
TABLE & SEATING

2205 Old Philadelphia Pike, Lancaster, PA 17602
1-800-942-0412

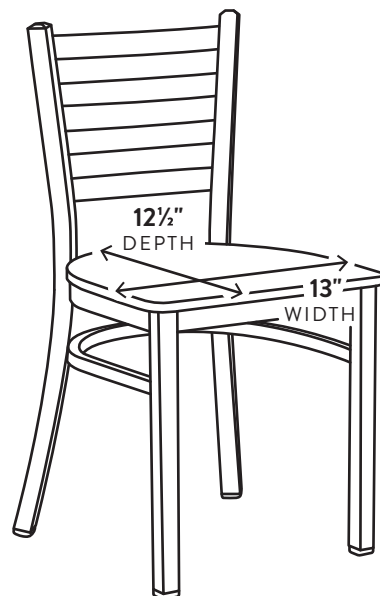

Use booster seat on adult sized chair with a back and a minimum seat depth of 12 ½ inches and a minimum seat width of 13 inches.