



Glass-Sided Wine Merchandiser

Single Section

#193W4GD15

81 Bottles

Note:

Please read this manual in its entirety prior to equipment setup, operation, and maintenance.

Table of Contents

Warnings.....	3
Installation	4
Electrical	5
Safety Information.....	5
Operation	6
Cleaning.....	8
Troubleshooting.....	9

Warnings

DANGER – RISK OF FIRE OR EXPLOSION. FLAMMABLE REFRIGERANT USED. TO BE REPAIRED ONLY BY TRAINED SERVICE PERSONNEL. DO NOT PUNCTURE REFRIGERANT TUBING.

PELIGRO – RIESGO DE INCENDIO O EXPLOSION. REFRIGERANTE INFLAMABLE UTILIZADO. PARA SER REPARADO SOLAMENTE POR PERSONAL DE SERVICIO CALIFICADO. NO PINCHAR LA TUBERÍA REFRIGERANTE.

DANGER – RISQUE DE FEU OU D'EXPLOSION. LE FRIGORIGÈNE EST INFLAMMABLE. CONFIER LES RÉPARATIONS À UN TECHNICIEN SPÉCIALISÉ. NE PAS PERFORER LA TUBULURE CONTENANT LE FRIGORIGÈNE.

CAUTION – RISK OF FIRE OR EXPLOSION. FLAMMABLE REFRIGERANT USED. CONSULT REPAIR MANUAL/OWNER'S GUIDE BEFORE ATTEMPTING TO SERVICE THIS PRODUCT. ALL SAFETY PRECAUTIONS MUST BE FOLLOWED.

ATENCIÓN – RIESGO DE INCENDIO O EXPLOSIÓN. REFRIGERANTE INFLAMABLE UTILIZADO. CONSULTE EL MANUAL DE REPARACIÓN / GUÍA DEL PROPIETARIO ANTES DE INTENTAR DAR SERVICIO A ESTE PRODUCTO. DEBEN CUMPLIR CON TODAS LAS PRECAUCIONES DE SEGURIDAD.

ATTENTION – RISQUE DE FEU OU D'EXPLOSION. LE FRIGORIGÈNE EST INFLAMMABLE. CONSULTER LE MANUEL DU PROPRIÉTAIRE/GUIDE DE RÉPARATION AVANT DE TENTER UNE RÉPARATION. TOUTES LES MESURES DE SÉCURITÉ DOIVENT ÊTRE RESPECTÉES.

CAUTION – RISK OF FIRE OR EXPLOSION DUE TO PUNCTURE OF REFRIGERANT TUBING; FOLLOW HANDLING INSTRUCTIONS CAREFULLY. FLAMMABLE REFRIGERANT USED.

ATENCIÓN – RIESGO DE INCENDIO O EXPLOSIÓN DEBIDO A LA PERFORACION DE LA TUBERÍA REFRIGERANTE; SIGA LAS INSTRUCCIONES DE MANIPULACIÓN CON CUIDADO. REFRIGERANTE INFLAMABLE UTILIZADO.

ATTENTION – RISQUE DE FEU OU D'EXPLOSION SI LA TUBULURE CONTENANT LE FRIGORIGÈNE EST PERFORÉE; SUIVRE LES INSTRUCTIONS DE MANUTENTION AVEC SOIN. LE FRIGORIGÈNE EST INFLAMMABLE.

CAUTION – RISK OF FIRE OR EXPLOSION DUE TO FLAMMABLE REFRIGERANT USED. FOLLOW HANDLING INSTRUCTIONS CAREFULLY IN COMPLIANCE WITH LOCAL GOVERNMENT REGULATIONS.

ATENCIÓN – RIESGO DE INCENDIO O EXPLOSIÓN DEBIDO A REFRIGERANTE INFLAMABLE UTILIZADO. SIGA LAS INSTRUCCIONES DE MANIPULACIÓN CON CUIDADO CONFORME A LAS REGLAS DE LA MUNICIPALIDAD.

ATTENTION – RISQUE DE FEU OU D'EXPLOSION SI LE FRIGORIGÈNE EST INFLAMMABLE. SUIVRE LES INSTRUCTIONS DE MANUTENTION AVEC SOIN CONFORMÉMENT AUX RÈGLEMENTATION GOUVERNEMENTALE LOCAUX.

Installation

This unit is intended for use in a temperature-controlled environment of less than 75°F and 60% relative humidity. Malfunction due to improper conditions is not covered under warranty.

Before Installation

- If the unit has recently been transported on its side, please let unit stand upright for a minimum of 24 hours before plugging it in.
- Failure to install the shelves properly is considered user error and is not covered by warranty.
- To prevent compressor or system damage, do not transport the unit on an incline of more than 45 degrees.
- Do not use the condenser, lid, or hinges as loading or unloading points.
- Make sure that the unit has reached the desired temperature before loading the unit with products. This unit is meant for keeping products cold, not chilling warm products.
- Make sure that there is proper ventilation around the unit in the area where it will operate.
- Make sure all accessories are installed (i.e., shelves, shelf clips, casters) before plugging in the unit.
- Do not attempt to remove or repair any component of the unit. Consult an authorized service technician for servicing/repair.
- Do not hang on doors or stand inside the unit.
- Please read through the manual in its entirety.
- The unit should be located away from doors, air ducts, and fans that could disrupt airflow and negatively impact performance.

Cabinet Location Guidelines

- Install the unit on a strong and leveled surface.
 - If the surface is uneven, the unit may be noisy.
 - The unit may malfunction if the surface is uneven.
- Install the unit in an indoor, well-ventilated area.
 - For best performance, please maintain clearance of 6" on the front and back of the unit.
 - Do not use outdoors. For indoor use only.
 - Avoid direct sunlight.
- Avoid installation in a high humidity and/or dusty area.
 - Humidity above 60% can cause the unit to rust, collect condensation, and may decrease efficiency.
 - Dust collected on condenser coil will cause unit to malfunction.
 - Malfunction due to temperatures above 75 degrees Fahrenheit, humidity above 60%, or improperly maintained condenser coil will void the warranty.
- Select a location away from heat and moisture-generating equipment.
 - Ambient temperatures above 75 degrees Fahrenheit may cause the compressor to malfunction.
 - Malfunction due to ambient temperatures above 75 degrees Fahrenheit will void warranty.
 - Do not install the unit inside a closet or alcove.

Electrical

- Ensure that the required voltage is being supplied at all times.
- The unit should be plugged into a grounded and properly sized electrical outlet with appropriate over-current protection. Refer to the electrical requirements on the unit's nameplate.
- The unit should have its own dedicated outlet.
- DO NOT use extension cords.
- Ensure the unit is not resting on or against the electrical cord.
- If the unit is not in use for a long period of time, unplug from the outlet.
- To avoid shock and fire hazards, DO NOT plug in or unplug the unit with wet hands.
- After unplugging the unit, wait at least 10 minutes before plugging it back in. Failure to do so could cause damage to the compressor.
- In the event of damage to the electric wires or plug, please contact the after-sales service. DO NOT attempt to repair it yourself.
- If the voltage is unstable, please choose the suitable automatic voltage regulator.



Safety Information

Pay close attention to the safety notices in this section. Disregarding these notices may lead to serious injury and/or damage to the unit.

- To minimize shock and fire hazards, be sure to not overload outlet. This unit should be given its own outlet.
- DO NOT use extension cords.
- DO NOT put your hands under the unit while it is being moved.
- When the unit is not in use for a long period of time, unplug the unit from the outlet.
- After unplugging the unit, wait at least 10 minutes before plugging it back in. Failure to do so could cause damage to the compressor.
- To minimize shock and fire hazards, do not plug in or unplug the cord with wet hands.
- Unplug the unit before performing maintenance or cleaning.
- To minimize shock and fire hazards, make sure that the unit is properly grounded.
- DO NOT attempt to remove or repair any component unless instructed by the factory.
- DO NOT allow the unit to rest on or against the electrical cord and/or plug.
- DO NOT hang on the doors.
- DO NOT attempt to alter or tamper with the electrical cord.
- DO NOT use the unit if the power cord is damaged.

Operation

Front Panel Operation

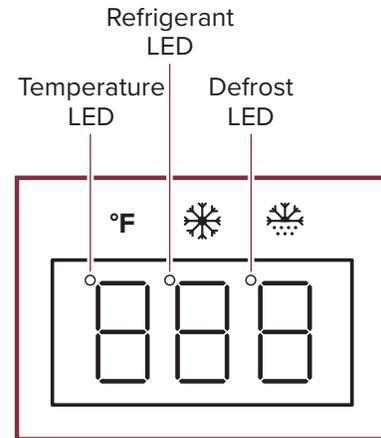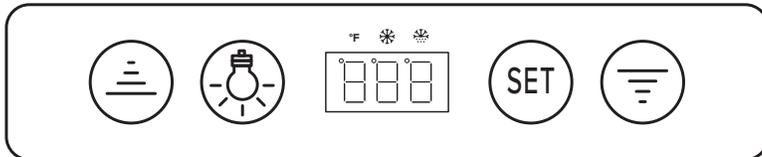

Adjusting the Temperature

1. Press the SET button to begin adjusting temperature.
2. Press the ▲ or ▼ buttons to increase or decrease the temperature inside the unit.
3. Press the SET button again to set the temperature and exit the display controls. The current refrigerator temperature will then be displayed.

Interior Light

1. Press the LIGHT button to illuminate the display.
2. Press the LIGHT button again to turn off illumination.

Manual Defrost

1. Press and hold the LIGHT button for 6 seconds to start or stop defrost cycle.

Digital Controller Reset

1. When the display shows "disorder," press and hold the ▼ button for 2 seconds until the buzzer rings.
2. Quickly press and hold ▲ for 6 seconds until the buzzer rings again.
3. The display will flash for 3 seconds and will then be restored to the factory setting.

Refrigerant LED

- During refrigeration, the refrigerant LED will be illuminated.
- When the refrigeration temperature is constant, the LED will turn off.
- During the delayed start, the LED light will flash.

Defrost System

- Coils are kept below the freezing point (32°F).
- During compressor downtime, the evaporator fan continues to circulate air through the evaporator coil. This air circulation raises the coil temperature above the freezing point, melting any accumulated frost.
- Run-off water is drained into the evaporator pan and evaporated.

Operation


Loading Product

- DO NOT block the air duct/fan at the top of the unit. Always maintain a minimum of 4" of clearance between products and the fan.
- Ensure all shelves are sitting level and properly secured before loading products.
- In order to save energy, limit the number of times the door is opened and the length of time the lid is open.
- DO NOT store flammable and explosive gas or liquids inside the unit.


Layout & Storage

Your merchandiser was designed to be flexible to adapt to your storage requirements. To optimize loading, follow the following tips:



- Spread your bottles out as evenly as possible over the shelves so that the weight is not concentrated in one point.
- Ensure your bottles do not touch the back of the cabinet or the step at the bottom.
- Ensure bottles are not grouped together at the top or bottom of the cabinet.
- Lay the bottles with one row facing forward and staggered with another row facing back to maximize capacity.
- Larger bottles like pinot or Champagne may affect maximum capacity.
- DO NOT try to pull out more than one sliding shelf at a time.

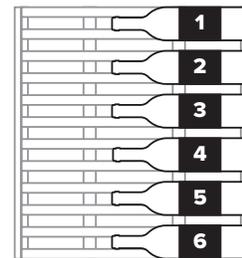

Top View

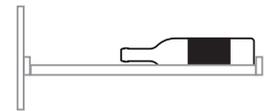

Side View

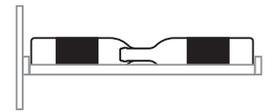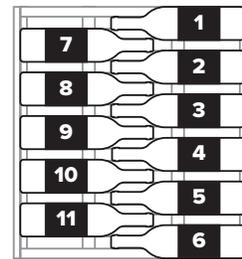

Suggested Wine Temperatures Chart

BEVERAGE TYPE	BODY TYPE	EXAMPLES	STORAGE TEMP. RANGE (°F)	SERVING TEMPERATURE (°F)
White Wine	Sparkling	Non-Vintage Champagne, Prosecco, Asti	40 – 45	43 – 50
	Light & Dry	Pinot Grigio, Sauvignon Blanc, Riesling	45 – 50	45 – 50
	Full Bodied	Chardonnay, Viognier	50 – 55	50 – 55
Rosé Wine	As is	Rosé	50 – 55	48 – 53
Red Wine	Light Bodied	Chianti, Beaujolais	55 – 60	55 – 60
	Medium Bodied	Pinot Noir, Merlot	55 – 60	55 – 60
	Full Bodied	Cabernet Sauvignon, Syrah, Shiraz, Zinfandel, Bordeaux	55 – 65	60 – 65

TIPS

- The lighter in color and style, the more chilled the wine should be.
- Vintage Champagne should be served a bit warmer than non-vintage at 45 – 50 degrees Fahrenheit.

Cleaning

DISCONNECT POWER CORD BEFORE CLEANING ANY PARTS OF THE UNIT.

It is strongly recommended that any servicing of the unit be performed by an authorized service technician.

Fan Blades & Motor

- If necessary, clean the fan blades and motor with a soft cloth.
- If it is necessary to wash the fan blades more thoroughly, cover the fan motor to prevent moisture damage, then use a damp cloth to clean the fan blades.

Interior

- Use warm water and a mild soap with a clean cloth to wipe down the interior of the unit.
- DO NOT use steel wool, caustic soap, abrasive cleaners, or bleach that may damage the interior finish.
- Wash door gaskets on a regular basis, preferably weekly. Simply remove door gaskets from the frame of the door, soak in warm water and soap for thirty (30) minutes, dry with soft cloth, and replace.
- Check door gaskets for proper seal after they are replaced.
- Periodically remove the shelves and pilasters from the unit and clean them with mild soap and warm water. To remove the pilasters, first remove the shelves and shelf brackets. Then, simply lift the pilaster up and out.

Cleaning the Condenser Coil

- A dusty condenser may lead to high energy consumption, less cooling effectiveness, and compressor damage.
- For efficient operation, keep the condenser surface free of dust, dirt, and lint.
- We recommend cleaning the condenser coil at least once per month.
- The condenser coil is located at the bottom behind the panel.

Cleaning the Condenser Coil Instructions

1. Disconnect the electrical power from the unit.
2. Remove the front cover and base cover with a screwdriver.
3. Using a soft brush and/or vacuum, remove the dirt, lint, etc. from the finned condenser coil in a vertical direction.
4. Clean the condenser with a commercial condenser coil cleaner, available from any kitchen equipment retailer. Ex: Noble Chemical Tech Line Coil Cleaners (148TLECCCLNR, 148TLHDCCLNR, 148TLECOILDD, 148TLFMCCCLNR, 147TLEVPCLNR, or 147TLHDCCLNR).
5. After cleaning, straighten any bent condenser fins with a fin comb.
6. When finished, be sure to reinstall the front cover and base cover.
7. Reconnect the electrical power to the unit.

Troubleshooting

Problem	Possible Cause	Possible Solution
Compressor not running.	Fuse blown or circuit breaker tripped.	Replace fuse or reset circuit breaker.
	Power cord unplugged.	Plug in power cord.
	Thermostat set too high.	Set thermostat to lower temperature.
	Cabinet in defrost cycle.	Wait for defrost cycle to finish.
Condensing units run for long periods of time.	Excessive amount of warm product placed in cabinet.	Allow adequate time for product to cool down.
	Prolonged door opening or door ajar.	Ensure doors are closed when not in use. Avoid opening doors for long periods of time.
	Door gasket(s) not sealing properly.	Ensure gaskets are snapped in completely. Remove gasket and wash with soap and water. Check condition of gasket and replace if necessary.
	Dirty condenser coil.	Clean the condenser coil.
	Evaporator coil iced over.	Unplug unit and allow coil to defrost. Make sure thermostat is not set too cold. Ensure that door gasket(s) are sealing properly.
Cabinet temperature is too warm.	Thermostat set too warm.	Set thermostat to a lower temperature.
	Excessive amount of warm product placed in cabinet.	Allow adequate time for product to cool down.
	Fuse blown or circuit breaker tripped.	Replace fuse or reset circuit breaker.
	Dirty condenser coil.	Clean the condenser coil.
	Evaporator coil iced over.	Ensure doors are closed when not in use. Avoid opening doors for long periods of time.
	Low refrigerant levels.	Contact a service technician to check refrigerant levels.
	Door is slightly ajar.	Make sure door is completely closed.
Condensation is collecting on the cabinet and/or floor.	Gasket is not sealing properly.	Clean, repair, or replace the gasket as necessary.
	Relative humidity is above 60%.	Move unit to area below relative humidity or lower humidity level.
Interior light is not working.	Poor switch connection.	Turn off light switch and turn it back on.
	Bulb is not connected.	Make sure the bulb is correctly inserted in the socket.
	Bulb has burned out.	Replace the bulb.