

Step 4:

Install faucet, soap dispenser and drain to sink body.

Step 5:

Plumb connection (top outlet port) from Knee Valve to faucet.

Step 6:

Install sink body onto wall clip. Secure rear Apron flange to wall at keyhole locations. (Hardware not provided).

Step 7:

Connect Hot and Cold water supply to Knee Valve.

Step 8:

Connect drain to waste line.


Step 9:

Remove aerator and flush water system.

Step 10:

Adjust Hot Water at front of valve. See Photo Illustration #3.

Illustration 3

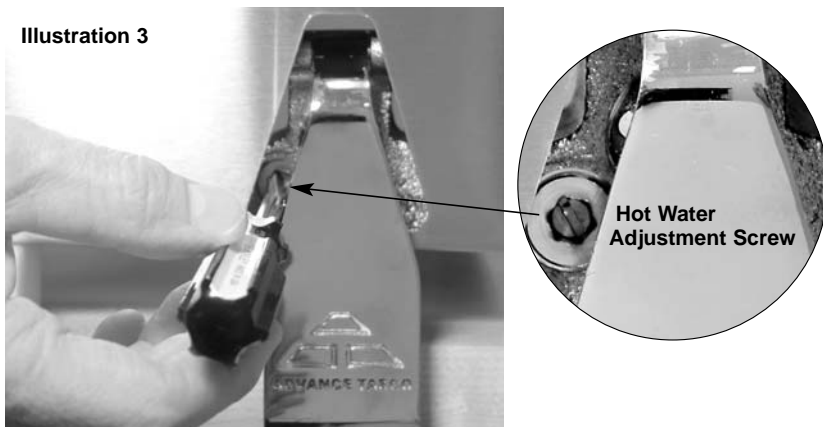**Step 11:**

Check all water and drain connections for leaks.



Edgewood, New York 11717-8380

SEPTEMBER 2002



Installation Instructions for 7-PS-62 HAND WASHING SINK



**CHECK FOR CONCEALED DAMAGE
FILE CLAIM WITH DELIVERING FREIGHT CARRIER**

Sinks manufactured by **ADVANCE TABCO®** are designed and constructed for the use of liquid containment. Suggested applications include Food Preparation, Manufacturing, Cooking, Laboratory and Service and the like. **ADVANCE TABCO®** does not recommend product use for activities employing harsh and active chemicals. Please consult factory regarding unusual applications.

CONTENTS INCLUDE:

- (1) Hand Sink
- (1) Apron
- (1) Knee Valve
- (1) K-121 Gooseneck Faucet
- (1) K-6 Basket Drain
- (4) 1/4"x 20" x 3/4" Nuts & Hex Head Bolts
- (1) Wall Clip

TOOLS REQUIRED:

- Tape Measure
- Screw Driver
- 7/16" Open End Wrench
- Adjustable Wrench
- Drill Motor & Bits
- Level
- Safety Glasses

INSTALLATION INSTRUCTIONS

Step 1:

Position wall clip at 42" A.F.F. (Above Finished Floor). Ensure Wall Clip is level. See Photo Illustrations # 1 & 1A.

(Note: Hardware not provided.)

Illustration 1


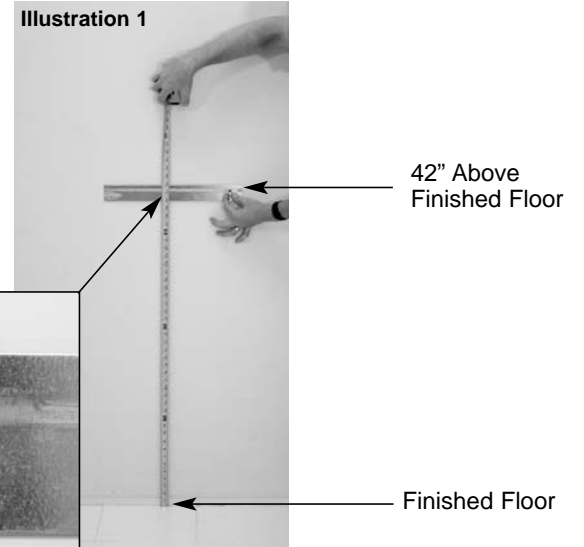


Illustration 1A

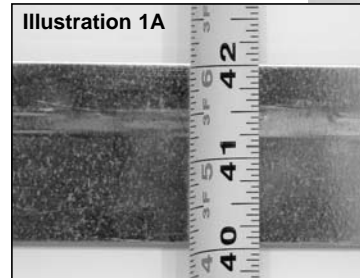

Step 2:

Install Knee Valve to Apron using - 1/4 x 20" x 3/4" hardware provided. See Photo Illustrations # 2 & 2A.

Illustration 2


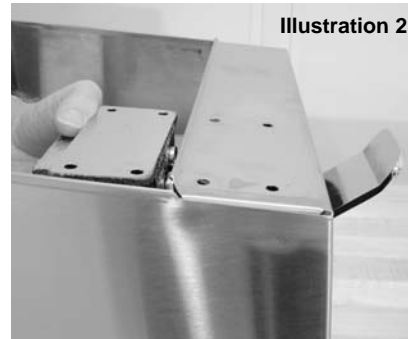


Illustration 2A

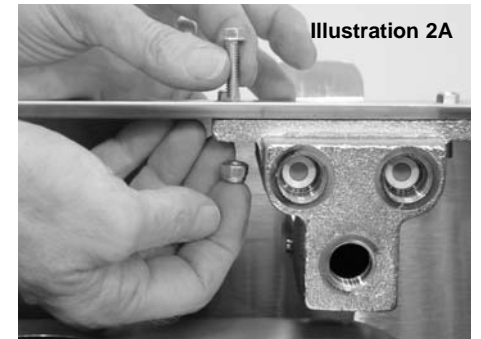

Step 3:

Pre-plumb hot and cold water supply to Knee Valve (at base of valve) according to local plumbing code.

Continued >>