

Black Wire 2 and 3 Compartment Airpot Racks



#234APRK2 | #234APRK3


Assembly Instructions

234APRK2 PARTS

- | | |
|---------------------------|--------------------------------|
| A Wire Leg (2) | E Sign Holder (1) |
| B Support Bar (1) | F Wired Frame (1) |
| C Wire Divider (2) | G Back Support Wire (1) |
| D Drip Trays (2) | |

234APRK3 PARTS

- | | |
|----------------------------|--------------------------------|
| A Wire Legs (2) | E Sign Holder (1) |
| B Support Bar (1) | F Wired Frames (1) |
| C Wire Dividers (2) | G Back Support Wire (1) |
| D Drip Trays (3) | |

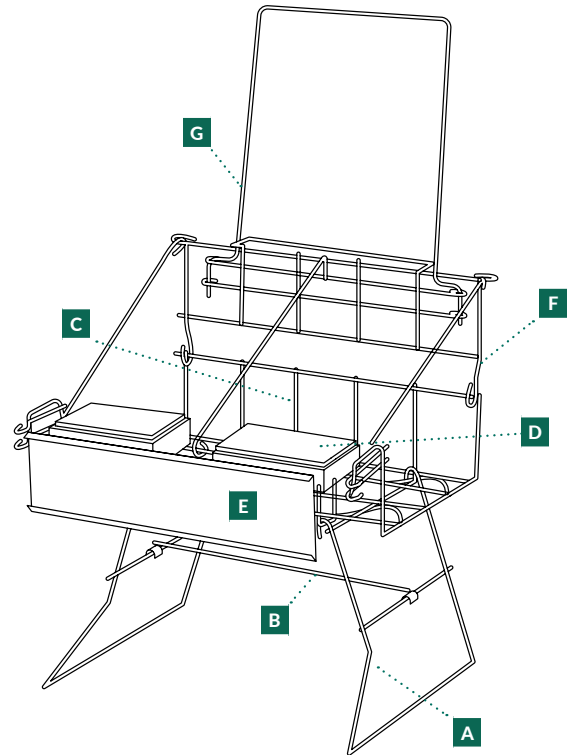

INSTRUCTIONS

1. Unbox and ensure all parts are present.
2. Swing the two support bars forward, inserting them into the wire loops on opposite sides of the frame.
3. Attach one of the wire legs to the second bar in from the left, ensuring that the hooks are facing inwards.
4. Attach the other wire leg to the second bar in from the right, ensuring that the hooks are facing inwards.
5. Position the single support bar horizontally across the bottom legs.
6. Thread the wire divider diagonally (top first) through the holes in of the front and back sections. For 234APRK3, repeat this step with the second divider.
7. Insert the back support wire at an angle into the double wire loops on the backside of the airpot frame.
8. Place the drip trays into the holders on the front of the frame.
Optional: Place the black sign holder in front of the drip trays or on the back support wire above the airpot.
9. Place your airpots onto the rack and serve!