


#257SCHT440

Aluminum Stair Climber Hand Truck with Loop Handle


ASSEMBLY TIPS

- Read instructions thoroughly before proceeding.
- Tighten all parts by hand. Don't use power tool.
- For you safely, please do not overload.


PARTS LIST

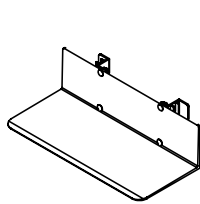

A Toe Plate (x1)

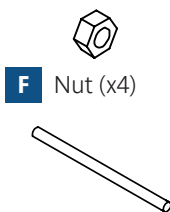

B Axle (x1)

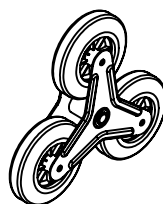

C Wheel Bracket (x2)



G M8 x 55 Screw (x8)



D Small Screw (x4)




H Pin (x2)



E Washer (x4)



STEP 1

Secure the toe plate to the support brackets using the included screws and nuts. Avoid overtightening.

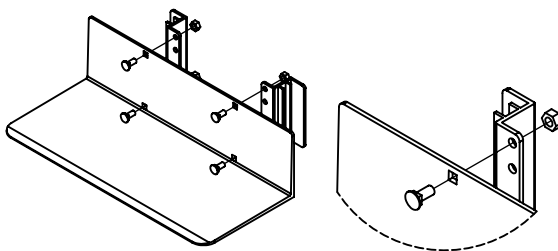


STEP 2

First, attach the toe plate and both wheel brackets to the frame using the M8 x 55 screws as shown above. Then, insert the axle into the brackets. Ensure both brackets are fully tightened.

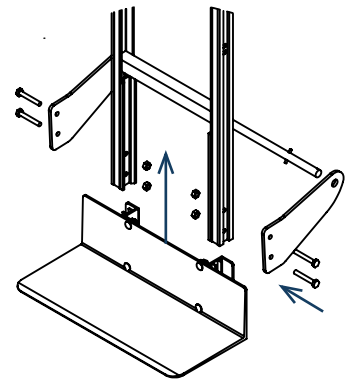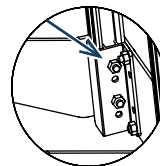

STEP 3

Place a washer over the axle, then the first wheel, followed by another washer as shown above. Insert the pin into the axle hole to secure the wheel in place. Repeat for second wheel.

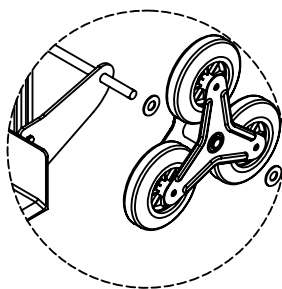

STEP 4

Insert the handle and secure in place using the included locking screws and nuts as shown above.

