


ASSEMBLY INSTRUCTIONS

- 1) PLACE STACKING FRAME (ITEM #2) ON TOP OF 3 FT OVEN (ITEM #1) AND LOCATE CORNERS OF FRAME AS SHOWN WITH DOTTED LINE
- 2) USE FRAME AS TEMPLATE TO LOCATE AND DRILL (8) .152 DIA HOLES (FOR #10 X 1/2" S.M.S.)
- 3) SCREW FRAME TO TOP OF 3 FT OVEN
- 4) PLACE 2 FT OVEN (ITEM #3) ON FRAME WITH LEGS SITTING IN FRAMEWORK

* NOTE: 2 FT UNIT MUST BE MOUNTED ON LEFT SIDE AS SHOWN.

2802256

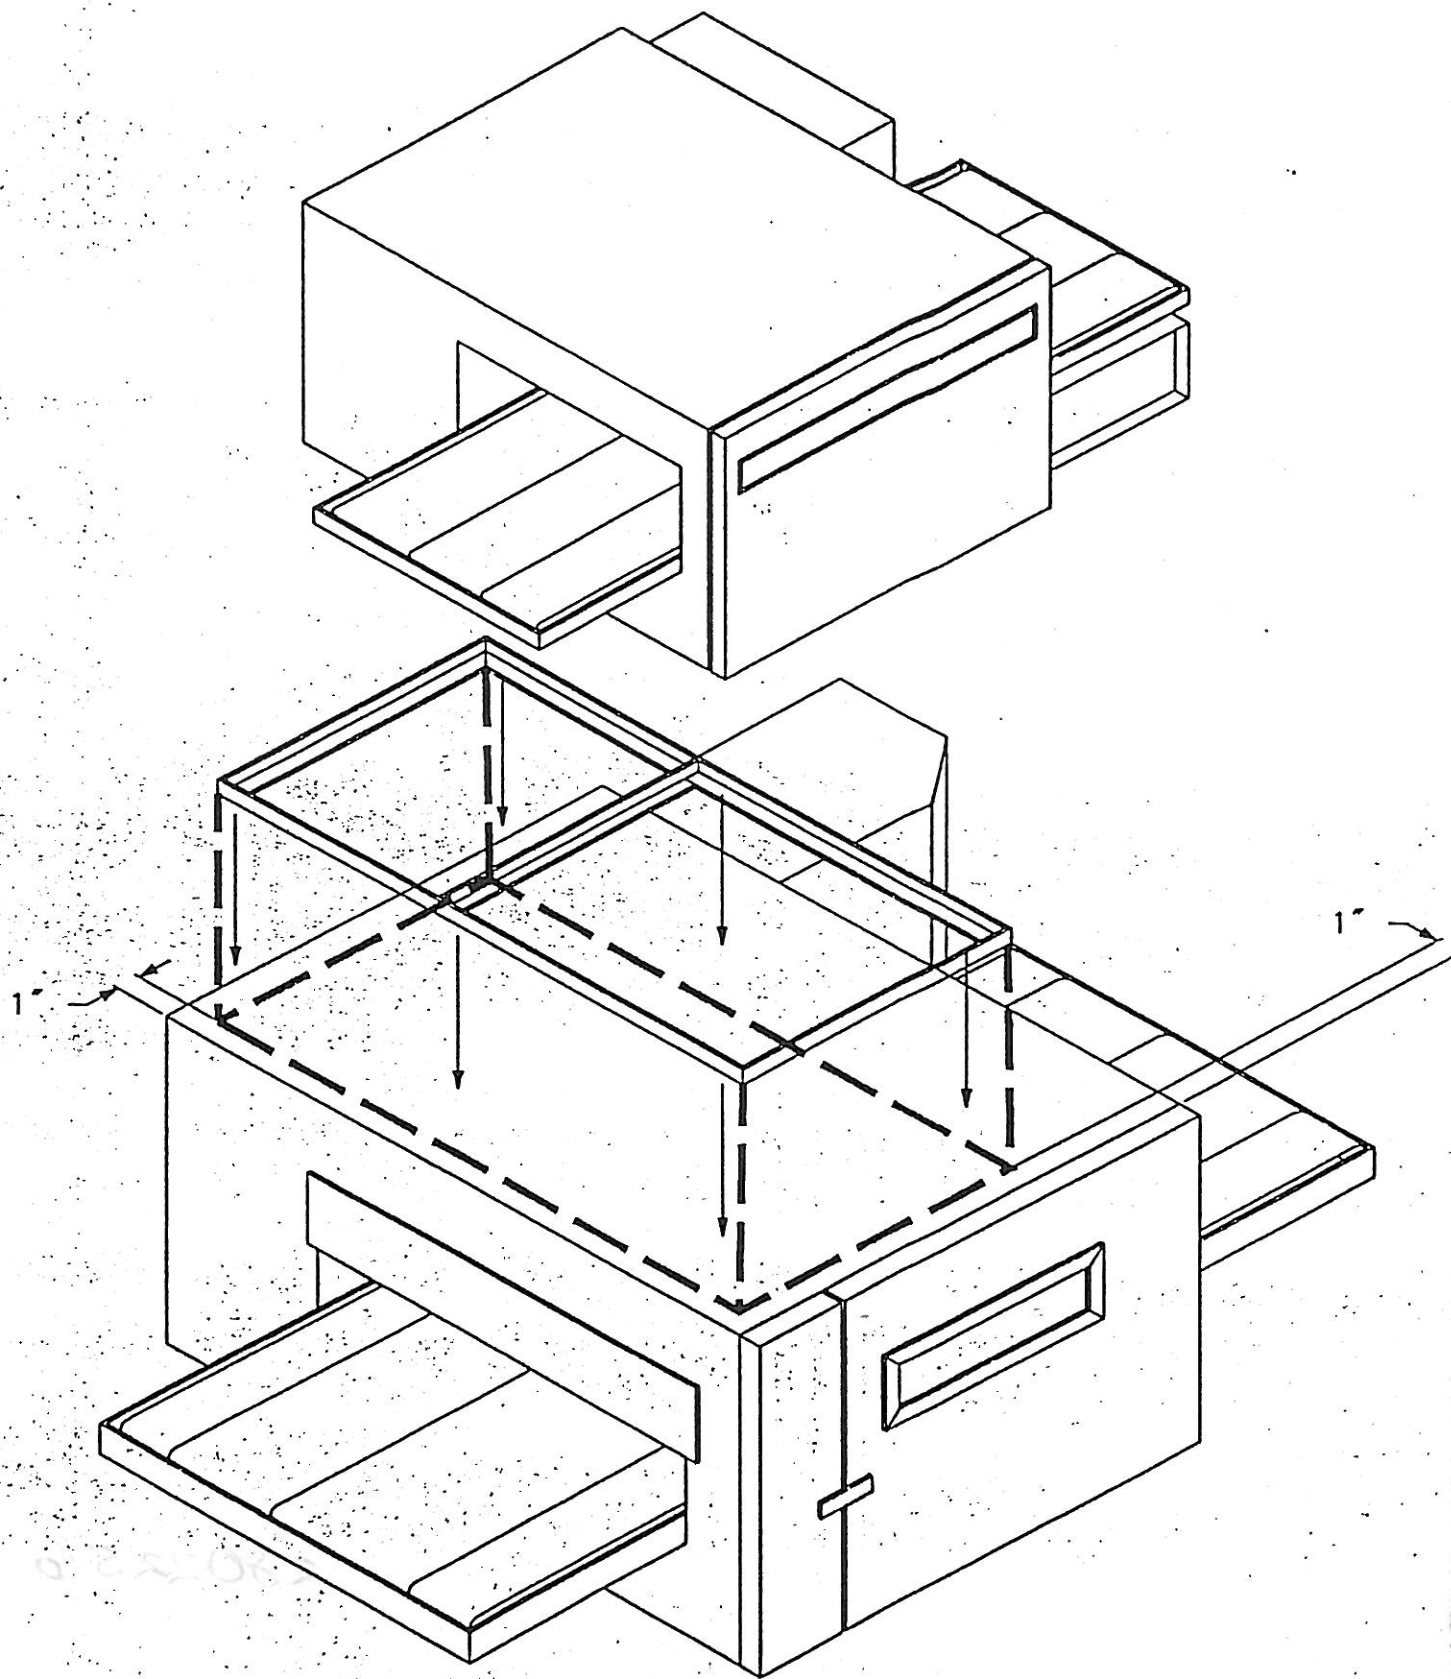

IF THE BOTTOM OVEN HAS A FLUE
AND THE TOP OVEN DOES NOT
HAVE A FLUE, YOU MUST CLOSE
THE FLUE TO PREVENT DAMAGE
TO THE TOP OVEN.

FLUE CAP INSTALLATION

1. SLIDE CAP OVER FLUE.
2. DRILL $1/8"$ HOLE
3. FASTEN CAP TO FLUE
WITH #8 SHEET METAL
SCREW.

$1/8"$ DRILL THROUGH
AFTER CAP IS ON. FASTEN
WITH #8 SHEET METAL SCREW.

OVEN FLUE

FLUE CAP

