

For Video instructions

http://www.hadrian-inc.com/Tech-Data/Installation/Toilet-Partitions.aspx

5999STD-INSTRUCTION





Table of Contents (Select Step to go to page)	Page
General Notes and Tools Required	3
STEP 1: Establish Floor Bracket Locations	4
STEP 2: Fasten Floor Brackets	4 & 5
STEP 3: Erect Panels	6
STEP 4: Erect Wall Pilaster	7 & 8
STEP 5: Prepare Pilaster for Door	8 & 9
STEP 6: Fasten "U" Brackets to Pilaster	9
STEP 7: Erect Pilaster	10
STEP 8: Prepare Door for Hanging	11
STEP 9: Hang Door	12
STEP 10: Erect Remaining Compartments	13
STEP 11: Secure Headrail Brackets	13
STEP 12: Place Headrail	14 & 15
Appendix A: Alcove Units	16
Appendix B: Continuous Channels	17 & 18
Appendix C: Hinge Filler and Continuous Stop	19
Appendix D: Surface Mounted Latches	20
Appendix E: Indicator Latch	21
Appendix F: Continuous Hinges	22
Appendix G: Wrap Hinges	23
Appendix H: Ceiling Hung Mounted Partitions	24
Appendix I: Floor Mounted Partitions	25
Appendix J: Floor to Ceiling Mounted Partitions	26
Appendix K: Post Mount Headrail Braced	27
Appendix L: Post Mount Floor Mounted	28
Appendix M: Post Mount Ceiling Hung	29
Appendix N: Post Mount Floor to Ceiling	30

www.hadrian-inc.com



General Notes

The following installation instructions are based on headrail braced compartments in the most common unit arrangement. Other arrangements will be encountered, i.e. units contained between two walls or between two free-standing panels. For details on ceiling hung and floor to ceiling connections, refer to the appendix. Always adhere to applicable building codes.

Ceiling hung and floor to ceiling toilet partitions require an overhead structural member (normally a channel). This member is supplied, installed and drilled by others. Stud assemblies are available from Hadrian, but Hadrian does not install them. Stud assemblies should be in place prior to application of finished ceiling.

FINAL LAYOUT DRAWINGS. For dimensional information, refer to your plan layout and dimensional details. Note in particular the relationship of the panels to the pilasters (panels do not necessarily fall on the center line of the pilaster).

Recommended Safety Equipment

Safety Glasses

Safety Gloves

Safety Shoes

Hard Hat









hadrian®

Tools Required

4 ft. level

Chalk line

Tape Measure

Hammer

Hammer drill

5/16" (8mm) masonry bit

Miscellaneous drill bits, including 4mm (5/32" & 8mm (5/16")

6mm (1/4") masonry bit

11mm (7/16") & 13mm (1/2") wrench

Miscellaneous screw driver bits

Adjustable wrench

Hacksaw

318mm (12") shim block to rest panels on for easier installation

6-lobe security driver bits

"C" Clamp




STEP 1: Establish Floor Bracket Locations

Establish the front centerline by taking the overall compartment dimension and deducting 16mm (5/8").

Use final layout drawings to determine locations.


See page 16 for Alcove Partitions instructions.

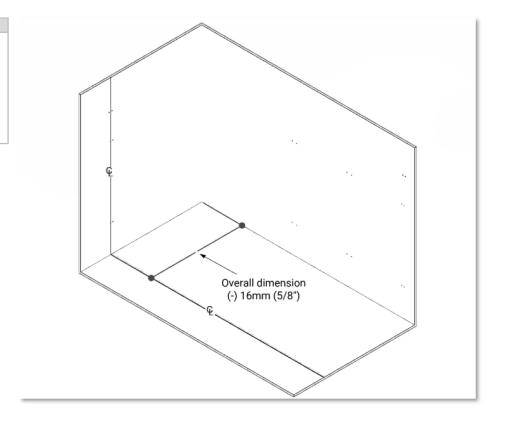

STEP 2: Fasten Floor Brackets

Drill holes for the floor brackets 22mm (7/8") in from edge of pilaster locations as indicated on the layout drawing.

See page 23 for ceiling hung mounted partition instructions.
See page 24 for floor mounted partition instructions.
See page 25 for floor to ceiling mounted partition instructions.

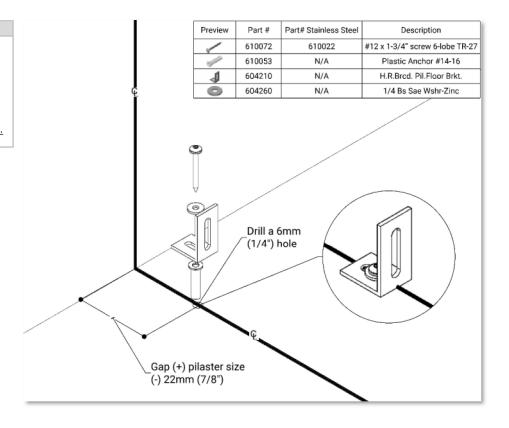




STEP 2.1: Fasten Floor Brackets

Follow the layout drawings for pilaster locations.

Gap (+) pilaster (+) door opening (+) 22mm (7/8") Drill 6mm (1/4") hole Pilaster width (-) 44mm (1 3/4") Drill 6mm (1/4") hole


STEP 2.2: Fasten Floor Brackets

Fasten floor brackets to the floor.

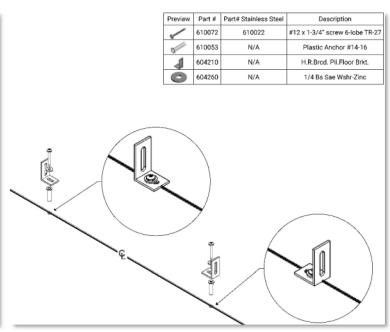

STEP 2.3: Fasten Floor Brackets

Follow the layout drawings for pilaster locations.

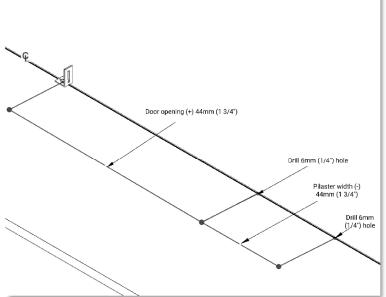

STEP 2.4: Fasten Floor Brackets

Fasten floor brackets to the floor. Repeat steps 2.3 & 2.4 if needed.

Preview	Part #	Part# Stainless Steel	Description
	610072	610022	#12 x 1-3/4" screw 6-lobe TR-27
0	610053	N/A	Plastic Anchor #14-16
4	604210	N/A	H.R.Brcd. Pil.Floor Brkt.
0	604260	N/A	1/4 Bs Sae Wshr-Zinc




STEP 3: Erect Panel

Using your centerline locations, fasten two 2-ear panel brackets to wall, per panel. Bracket centers should be approximately 457mm (18") and 1626mm (64") from floor*.

Note: Corner units will be provided with single ear brackets.


*Adjust based on masonry lines as necessary

See page 17 & 18 for continuous channel mounting instructions.

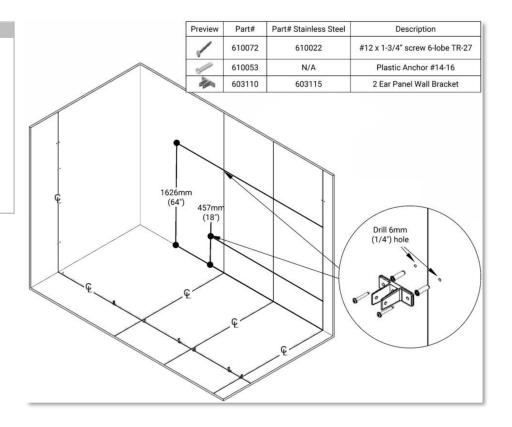

STEP 3.1: Erect Panel

Rest panel on 305mm (12") block and position in brackets. Drill one hole through top bracket and fasten. Keep panel on stabilizer block until pilaster has been installed.

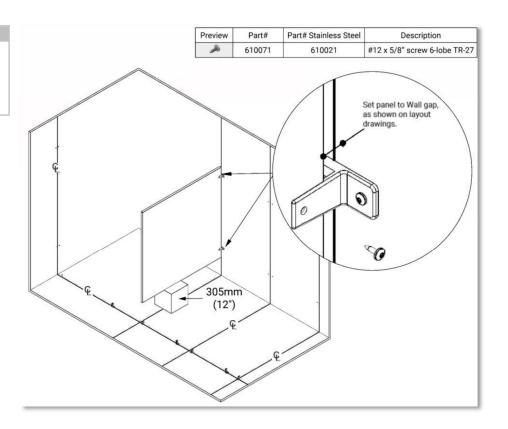




STEP 4: Erect Wall Pilaster

Fasten two single ear pilaster "F" brackets to the wall. Bracket centers should be approximately 457mm (18") and 1626mm (64") from floor*.

*Adjust based on masonry lines as necessary


See page 17 & 18 for continuous channel mounting instructions.

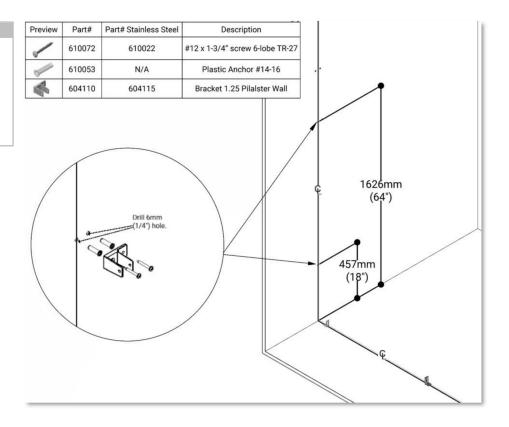

STEP 4.1: Erect Wall Pilaster

Slide shoe onto the pilaster. Position the pilaster in wall brackets and over floor brackets. Install levelling device.


Note: For a better pilaster shoe fit, ensure that the front and back edges of the shoe are parallel to each other. If they are not, then apply hand pressure to the back seam of the shoe until the front and back edges are parallel.

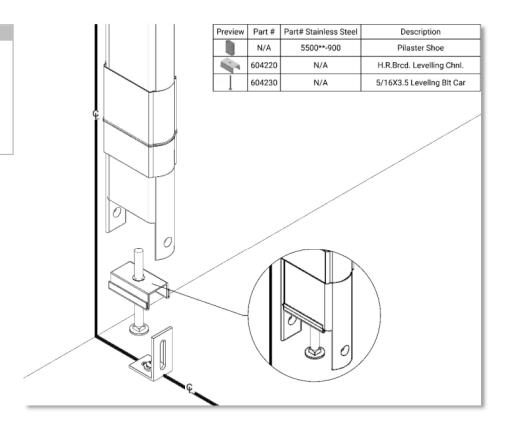




STEP 4.2: Erect Wall Pilaster

Install the floor bracket hardware and tighten.

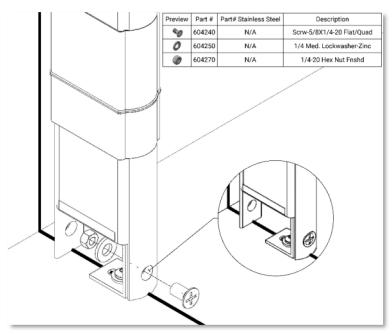

STEP 4.3: Erect Wall Pilaster Plumb pilaster and fasten to the pilaster brackets

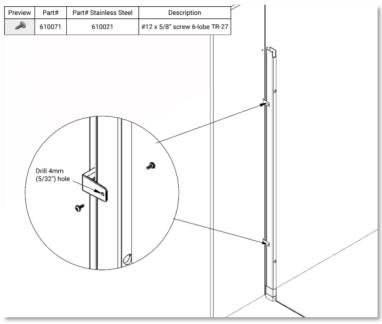


STEP 5: Prepare Pilaster For Door

Fasten lower hinge to the wall pilaster.

Note: When assembling the hinge hardware, set the wing nut to the bottom of the screw. Position the hinge assembly on a 45deg angle into the pre-drilled hinge hole.

See page 19 for Continuous Stop & Hinge Filler instructions.
See page 21 for Continuous Hinge instructions.
See page 22 for Wrap Hinge instructions

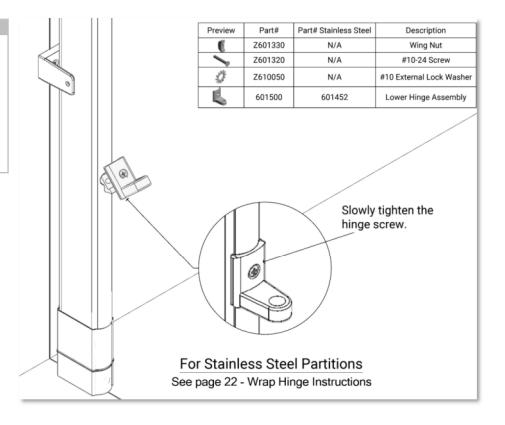




STEP 5.1: Prepare Pilaster For Door

Install and fasten the male cam to lower hinge.

Preview Part# Part# Stainless Steel Description 601630 N/A 5/16"-18 Hex Nut & Washer 601620 N/A 5/16' Ext. tooth Lockwasher 601611 N/A Male Cam Insert

STEP 5.2: Prepare Pilaster For Door


Fasten the upper hinge to pilaster.

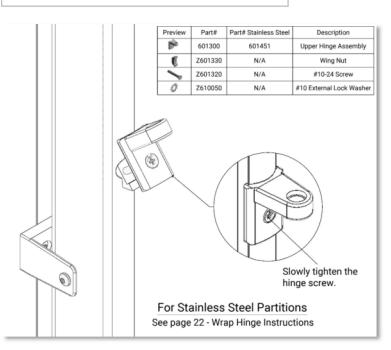

STEP 6: Fasten "U" Brackets To Pilaster

Place next pilaster on floor brackets and mark centerline of panel on the back. Mark bracket centers at 457mm (18") and 1626mm (64") from floor. Using the brackets as templates, mark and drill holes.

Remove pilaster from floor brackets and fasten "U" brackets.

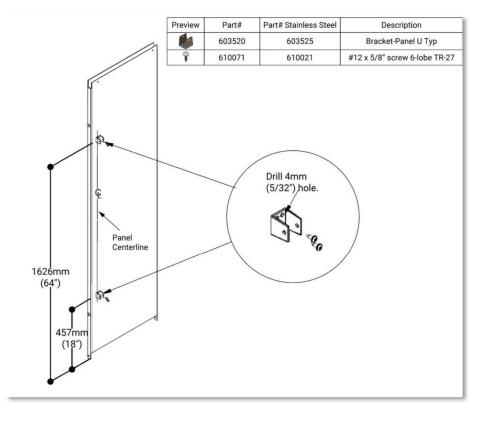




STEP 7: Erect Pilaster


Slide shoe onto the pilaster. Position pilaster over the floor brackets. Adjust pilaster location so the alcove channel grasps panel. Install floor bracket hardware, levelling device and tighten.

Note: For a better pilaster shoe fit, ensure that the front and back edges of the shoe are parallel to each other. If they are not, then apply hand pressure to the back seam of the shoe until the front and back edges are parallel.

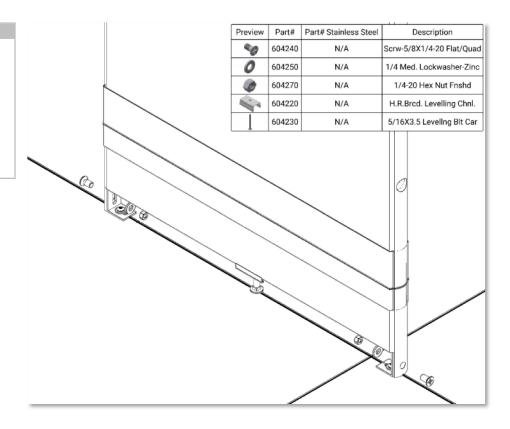

STEP 7.1: Erect Pilaster


Plumb panel and pilaster. Secure panel to the pilaster "U" brackets.

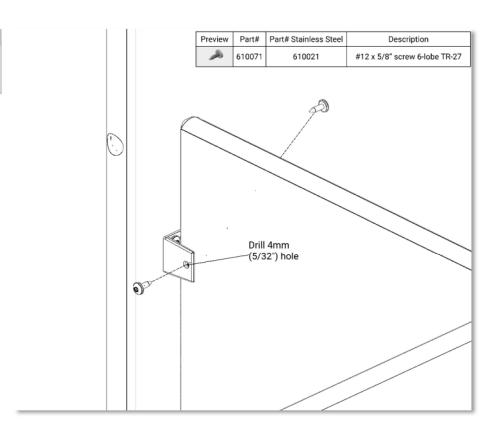



STEP 8: Prepare Door For Hanging

Insert female cam into the bottom-door hinge casting.

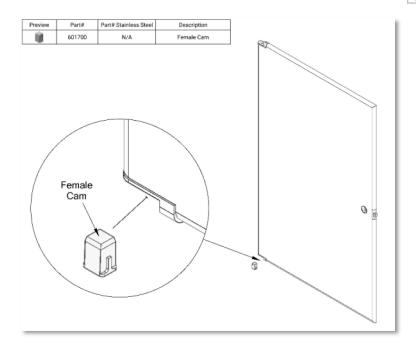


STEP 8.1: Prepare Door For Hanging

Install inner and outer knobs on the door.

See page 20 for Surface Latch instructions

See page 21 for Indicator Latch instructions


NEW Threaded Inner / Outer Knob

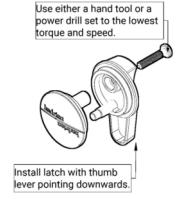

Preview	Part#	Part# Stainless Steel	Description
•	601150	901150	Kit Inner / Outer Knob
9	601150	901150	Kit Inner / Outer Knob


STEP 8.2: Prepare Door For Hanging

Install the door pulls. For outswing & accessible doors only.

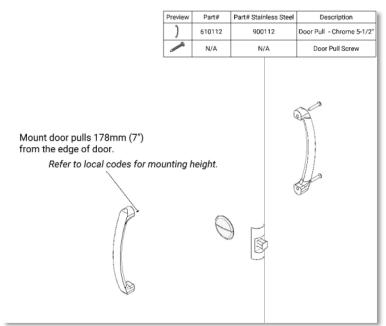

STEP 8.3: Prepare Door For Hanging


Fasten coat hook and bumper to door.

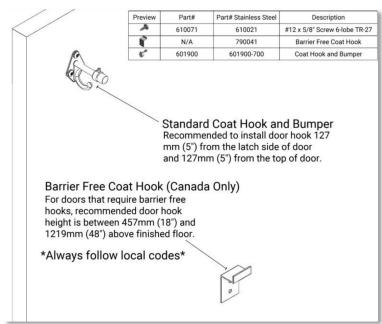



STEP 9: Hang Door


Lower door onto the male cam of the lower hinge. Install threaded upper hinge pin. To set door at required angle, loosen the nut of the male cam assembly, set door at required angle and tighten nut.

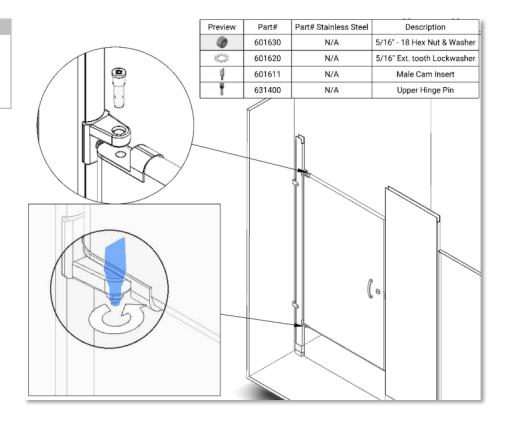

STEP 9.1: Hang Door

Fasten Stop & Keeper on the pilaster, ensuring it lines up with the door latch. Reverse Stop & Keeper for inswing doors.

See page 19 for Continuous Stop & Hinge Filler instructions.
See page 20 for Surface Latch instructions
See page 21 for Indicator Latch instructions

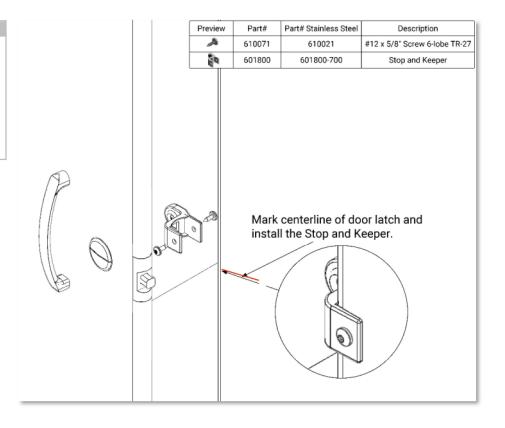





STEP 10: Erect Remaining Compartments

Ensure all pilasters are fastened to floor brackets, add all remaining fasteners and repeat steps 3-10 (as necessary) for all remaining compartments.


Note: Hadrian recommends installing one compartment (including door) at a time.

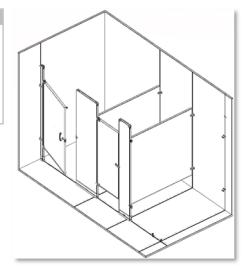

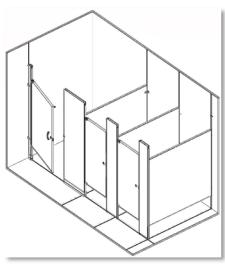

STEP 11: Secure Headrail Brackets


Fasten Headrail brackets to the wall approximately 2070mm (81-1/2") above floor (some adjustments may be necessary due to varying floor conditions).

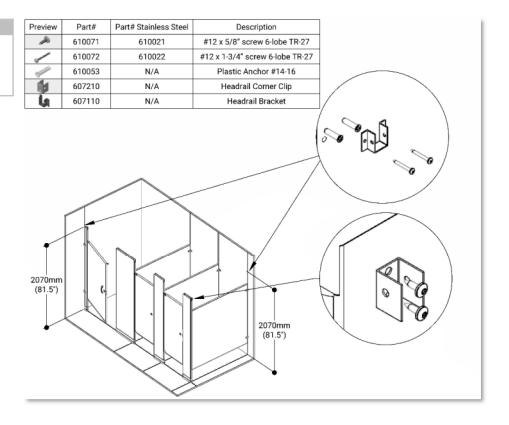



STEP 12: Place Headrail


Place Headrail into tops of pilasters and slide into Headrail brackets. Due to the width of some configurations, two or more pieces of Headrail may be required. Splice sections of Headrail on top of pilaster.

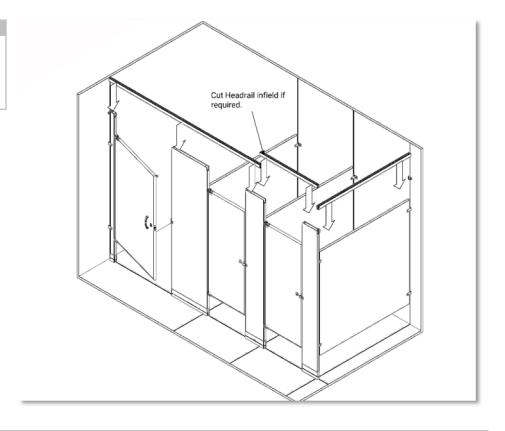

STEP 12.1: Place Headrail

Fasten Headrail to the Headrail wall brackets. Install Headrail end cap if required.


Adjust levelling devices to level all compartment components and tighten.

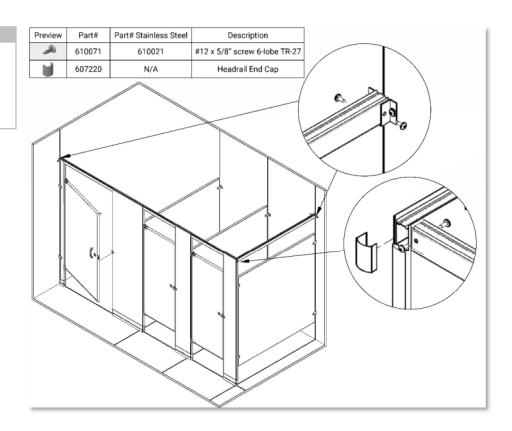




STEP 12.2: Place Headrail

Fasten Headrail to pilasters. Use one screw for pilasters under 8" wide and two screws for pilasters over 8" wide. Fasten screws on interior of partitions only.

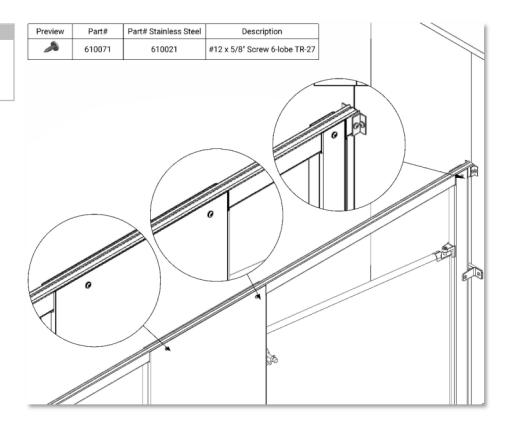

STEP 12.3: Place Headrail


Drill all remaining panel and pilaster holes and fasten to brackets.

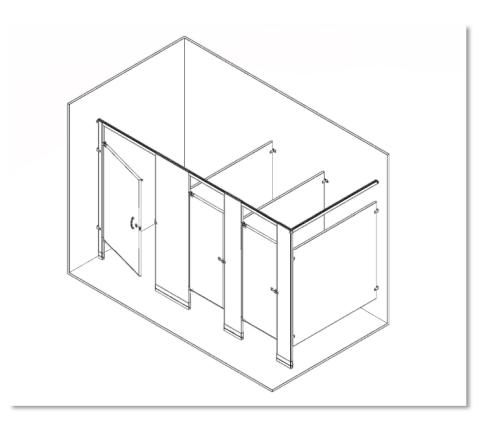




Appendix A-1 - Alcove Unit

Rest panel on 305mm (12") block and position in brackets. Drill one hole through top bracket and fasten. Keep the panel on stabilizer block until middle pilaster has been installed.

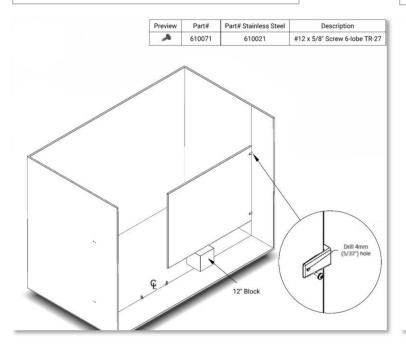


Appendix A-2 - Alcove Unit

Position alcove channel 311mm (12 1/4") from bottom of the pilaster. Concave side of alcove channel mounts to pilaster. Secure with a minimum of three screws. Follow Step 7 for pilaster mounting instructions.

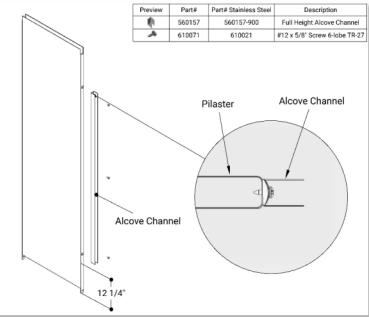


Appendix A-3 - Alcove Unit

Plumb panel and pilaster. Secure panel to the alcove channel with a minimum of three screws on the inside of the unit.

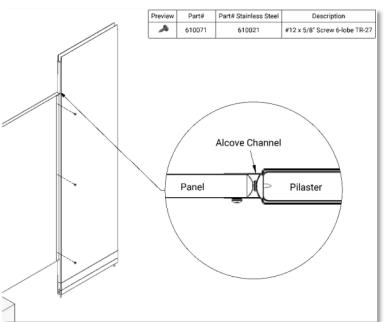

Appendix A-4 - Alcove Unit

Fasten Headrail to the Headrail wall brackets. Adjust levelling devices to level all compartment components and tighten. Follow Steps 4, 5, 8 and 9 for pilaster and door mounting instructions.

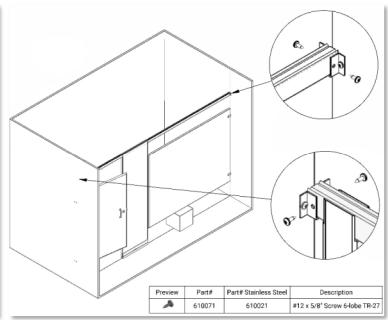




Appendix B-1 - Continuous Channel Option

Using your centerline locations, measure, pre-drill and install plastic anchors.


*Adjust based on masonry lines as necessary

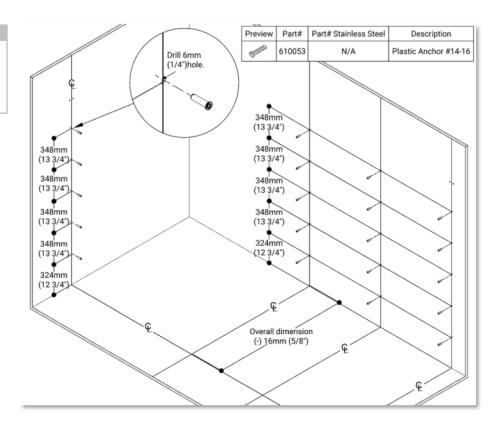

Appendix B-2 - Continuous Channel Option

Fasten wall channels to wall. The bottom of the channel should be 314mm (12-3/8) from the floor.


Note: Stainless Steel channels are pre-drilled.

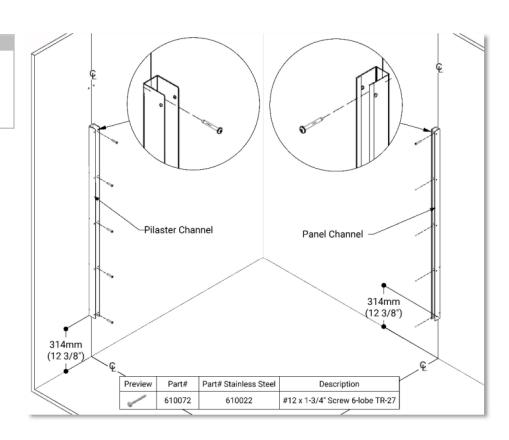




Appendix B-3 - Continuous Channel Option

Fasten wall channels to wall pilaster and panel.

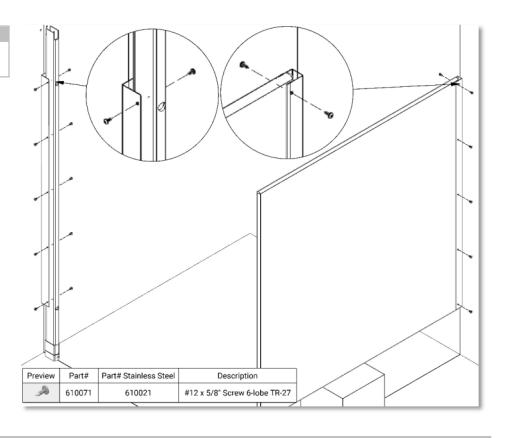

Appendix B-4 - Continuous Channel Option

Place pilaster on floor brackets and mark centerline of panel on the back. Mark channel centers starting at 314mm (12-3/8") from finished floor. Using the channel as a template, mark and drill holes.

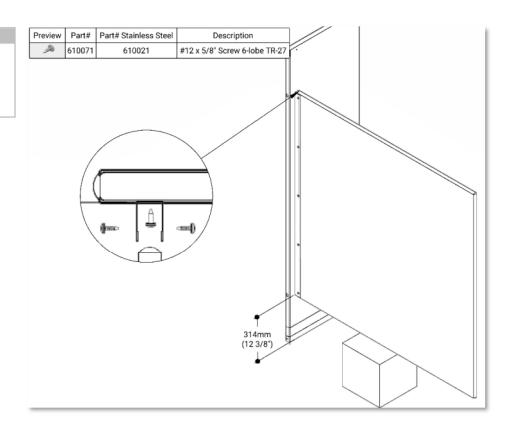




Appendix C-1 - Doors With Hinge Side Filler

Fasten upper and lower hinges to pilaster. (As shown in Step 5).

Place hinge side filler between hinges, pre-drill pilaster with 4mm (5/32") pilot holes and install fasteners.

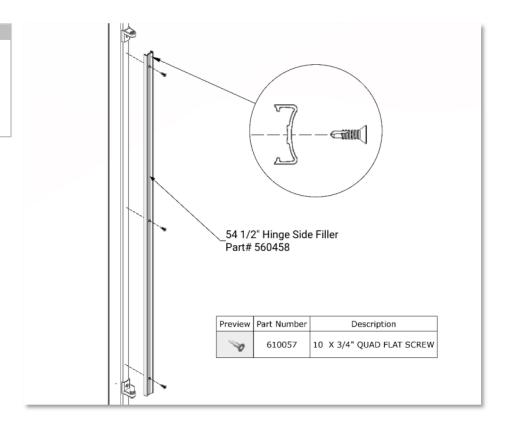


Appendix C-2 - Doors With Continuous Stop

Place continuous stop on pilaster, ensuring the top lines up with the locking bar (trim) seam on the top of the door.

Pre-drill pilaster with 4mm (5/32") pilot holes and install fasteners.

Note: The arrow on the Stop Keeper **must** point upwards for the latch to line up with the keeper.

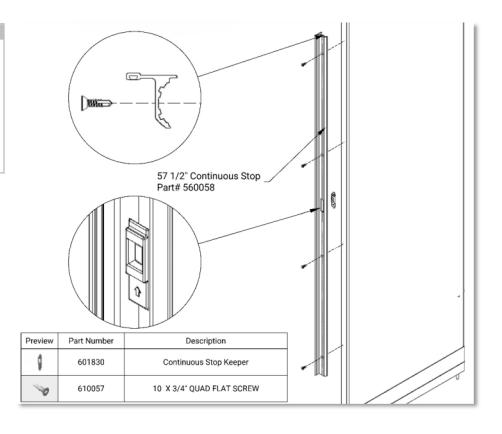




Appendix D-1 - Surface Mounted Latches (Out-swing)


Install surface mounted latch 13mm (1/2") from the door edge and install the Stop & Latch Keeper so it catches a maximum of 10mm (3/8"). The catch position is important to allow the door to lift for emergency access.

Note: Fasten the surface mounted latch with Barrel Screw & Barrel Nut. Part #'s 620123 & 620124.

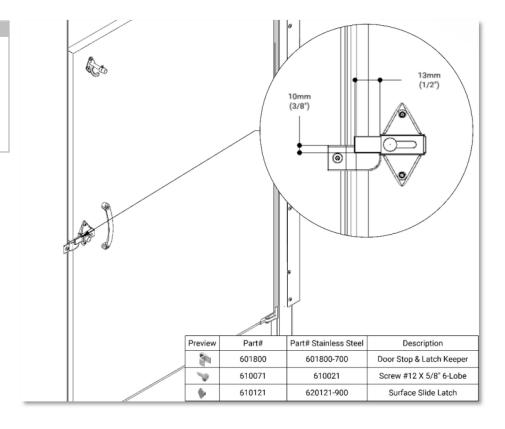

Appendix D-2 - Surface Mounted Latches (In-swing)

Install surface mounted latch 13mm (3/8") from the door edge and install the Stop & Latch Keeper so it catches the top of Keeper. The catch position is important to allow the door to lift for emergency access.

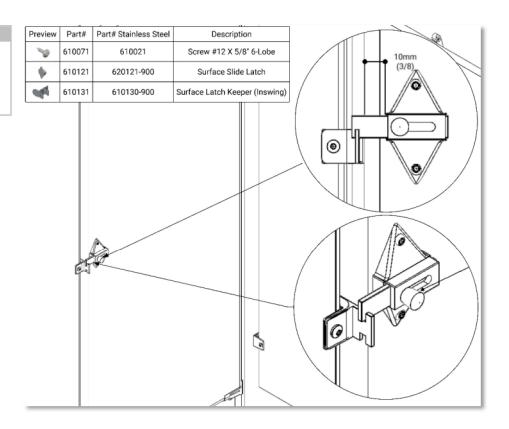





Appendix E-1 - Indicator Latch

Install indicator latch keeper as shown below. When installing indicator face plate to the pin, set the indicator plate to show red in the window and have the latch in the locked position.

Appendix E-2 - Indicator Latch (Out-swing)

Out-swing doors will use the continuous stop as the keeper. Out-swing spacer to be installed to allow the latch to clear the continuous stop.

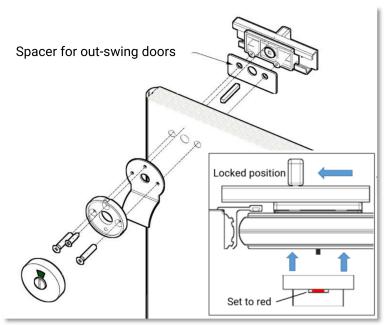


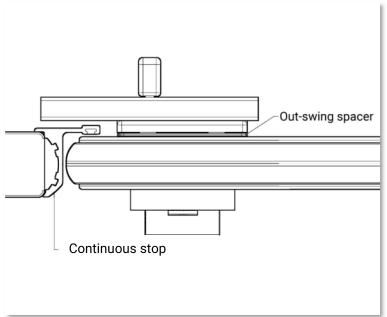


Appendix E-3 - Indicator Latch (In-swing)

Line up the in-swing keeper with the latch.

Before fastening the keeper to the pilaster, ensure the door does not hit the keeper when opening. The door should clear the keeper by 1/32".

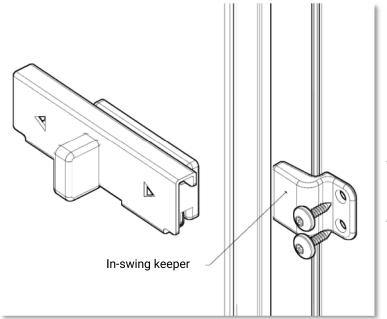

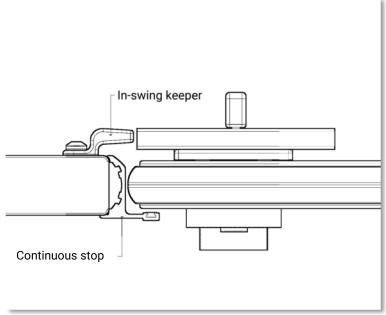




Appendix F-1 - Continuous Hinge

Mount hinge 311mm to pilaster (12 ¼") above the finished floor. Align the hinge notch with the seam edge of pilaster. Plumb the hinge and fasten.

Note:

Fasten the screws starting at the top of the hinge and finish at the bottom. The hinge must be installed plumb to work correctly.

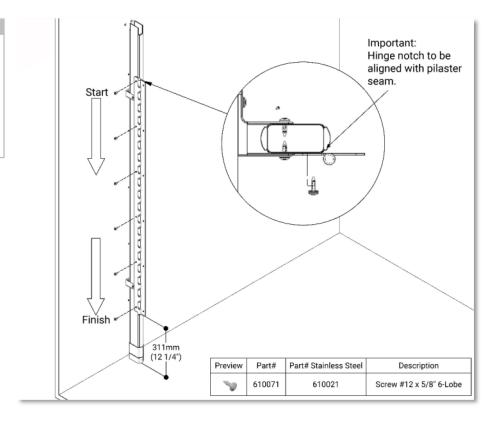


Appendix F-2 - Continuous Hinge

Use a 305 mm (12") block to position the door. Align the top of the hinge 6 mm (1/4") from the top of the door edge and 3 mm (1/8") from the pilaster edge. Plumb door and fasten the door to the hinge.

Note:

The hinge must be installed plumb to work correctly.

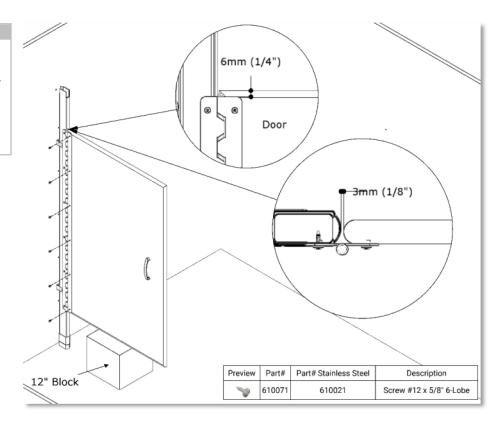




Appendix G-1 - Wrap Hinge

Install lower hinge by lining up the guide pins with the pre-drilled hinge hole on the pilaster and fasten.


Note:

Stainless Steel pilaster will have two small guide holes vs powder coated, which has a 7/8" hole.

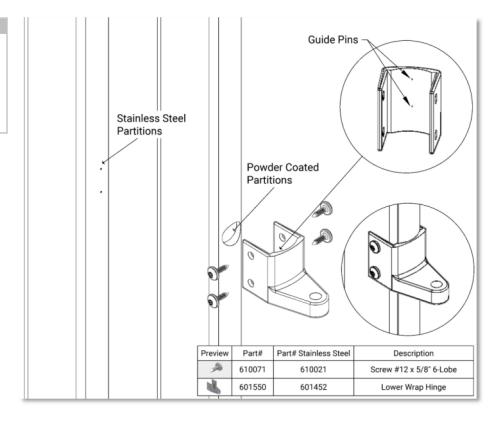

Appendix G-2 - Wrap Hinge


Install upper hinge by lining up the guide pins with the pre-drilled hinge hole on the pilaster and fasten.

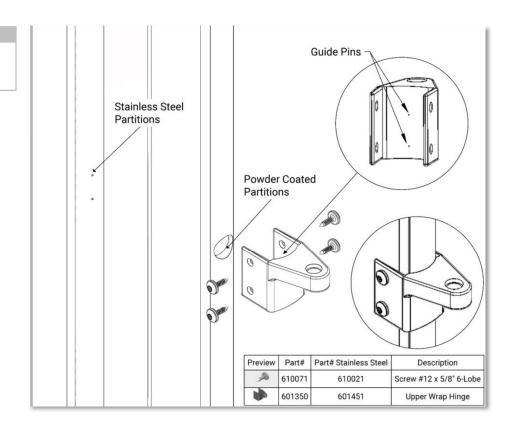




Appendix H-1 - Ceiling Hung Pilaster Establish Ceiling Stud Locations

Establish front centerline by taking the overall compartment dimension and deducting 16mm (5/8"). Use final layout drawings to determine locations.

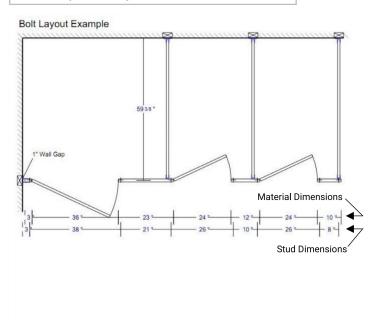


Appendix H-2 - Ceiling Hung Pilaster Establish Ceiling Stud Locations

Drill holes for ceiling studs 25mm (1") in from edge of pilaster locations as indicated on layout drawings.

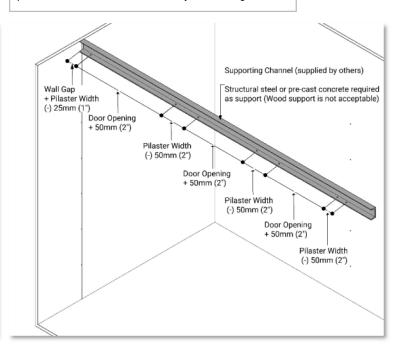


Appendix H-3 - Ceiling Hung Pilaster - Erect Pilaster

Install ceiling stud hardware.

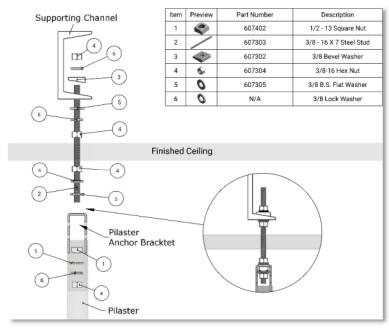

Appendix H-4 - Ceiling Hung Pilaster - Erect Pilaster

Position pilaster on ceiling studs, plumb and tighten. Hadrian recommends the supporting channel should be 25mm (1") above the finished ceiling.

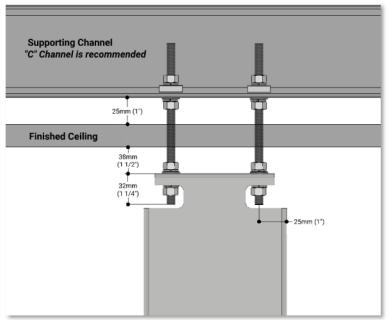




Appendix I-1 - Floor Mounted Pilasters Establish Floor Stud Locations

Establish front centerline by taking the overall compartment dimension and deducting 16mm (5/8"). Use final layout drawings to determine locations.

Bolt Layout Example Material Dimensions Stud Dimensions


Appendix I-2 - Floor Mounted Pilasters Establish Floor Stud Locations

Drill 57mm (2 ¼") deep holes for floor studs and position 25mm (1") in from edge of pilaster locations as indicated on layout drawings.

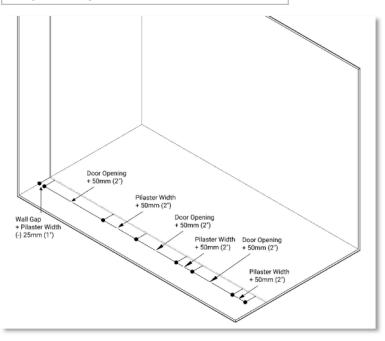


Appendix I-3 - Floor Mount Pilasters - Erect Pilaster

Install floor stud hardware.

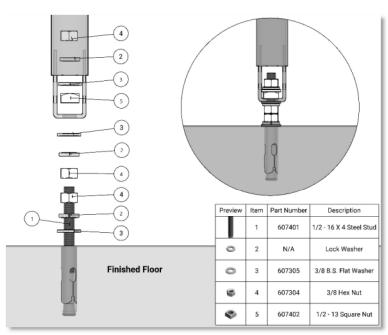

Appendix I-4 - Floor Mount Pilasters - Erect Pilaster


Position pilaster on floor studs 25mm (1") above finished floor, plumb and tighten.

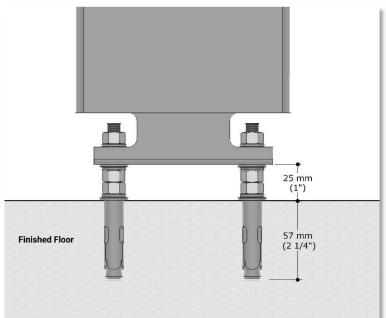




Appendix J-1 - Floor to Ceiling Pilaster Ceiling Connection

Follow Appendix H-1 to H-4 for ceiling connectioninstructions.

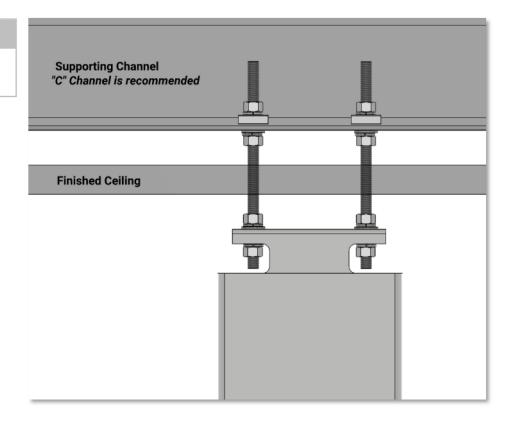


Appendix J-2 - Floor to Ceiling Pilaster Floor Connection


Follow Steps 1, 2 and 7 for floor connection instructions

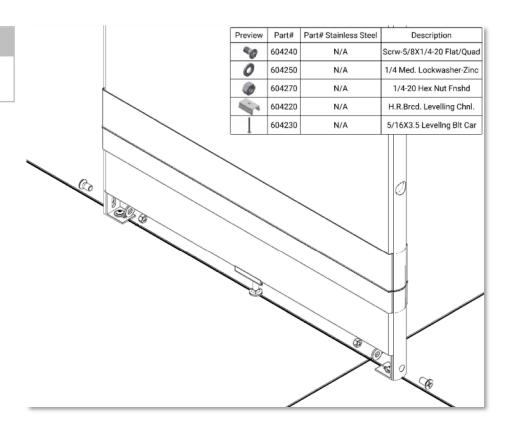




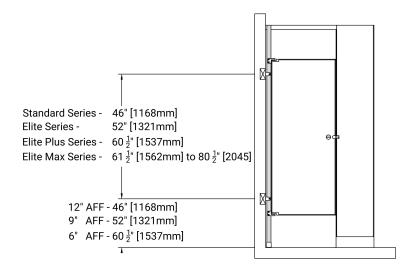


In-Line Mounted Post

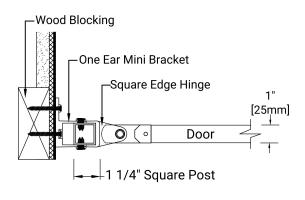

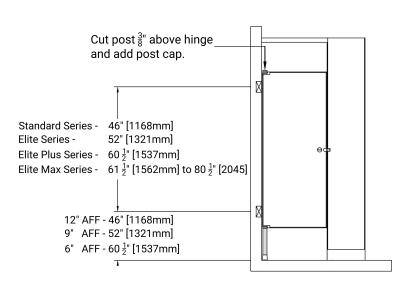


Rear Mounted Post

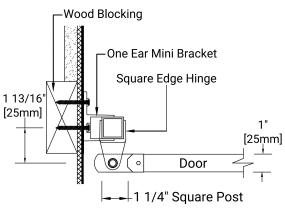


Cut post $\frac{3}{8}$ " above hinge and add post cap. Standard Series - 46" [1168mm] Elite Series - 52" [1321mm] Elite Plus Series - 60 $\frac{1}{2}$ " [1537mm] Elite Max Series - 61 $\frac{1}{2}$ " [1562mm] to 80 $\frac{1}{2}$ " [2045] 12" AFF - 46" [1168mm] 9" AFF - 52" [1321mm] 6" AFF - 60 $\frac{1}{2}$ " [1537mm]


Front Mounted Post

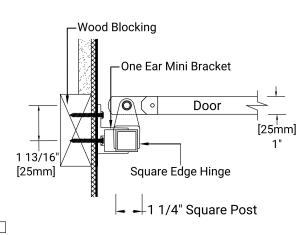





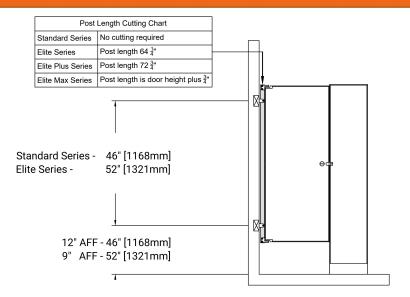

In-Line Mounted Post

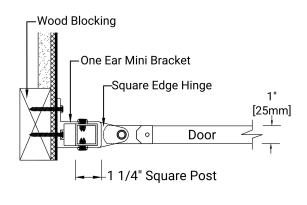

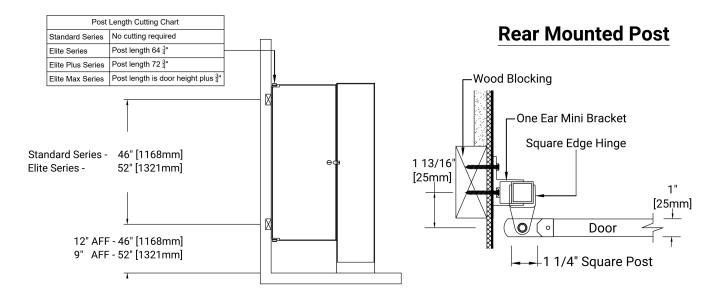

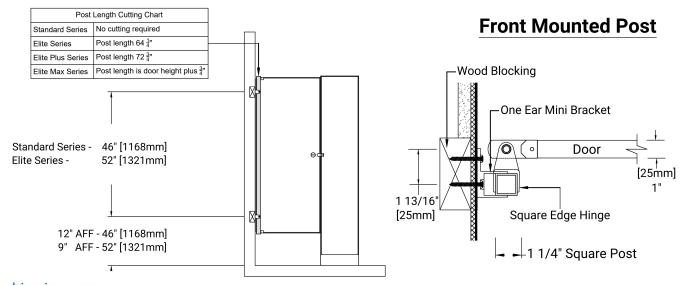


<u>www.hadrian-inc.com</u>


Back to Table of Contents


P a g e 28



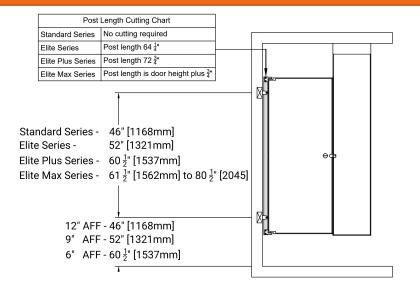



In-Line Mounted Post

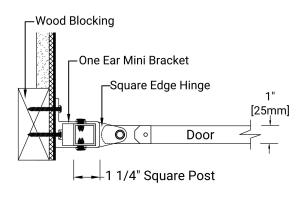

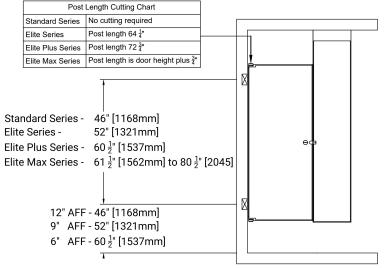


Rear Mounted Post

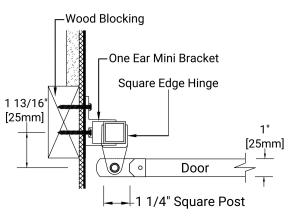

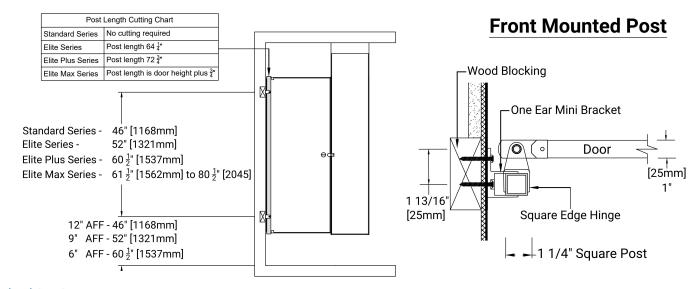



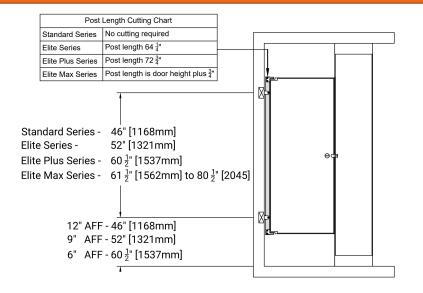

In-Line Mounted Post

