

# Black Wire 4 and 6 Compartment Airpot Racks



#234APRK4 | #234APRK6


## Assembly Instructions

### 234APRK4 PARTS

- |                           |                                |
|---------------------------|--------------------------------|
| <b>A</b> Wire Legs (2)    | <b>E</b> Sign Holder (1)       |
| <b>B</b> Support Bar (1)  | <b>F</b> Wired Frames (2)      |
| <b>C</b> Wire Divider (2) | <b>G</b> Back Support Wire (1) |
| <b>D</b> Drip Trays (4)   |                                |

### 234APRK6 PARTS

- |                            |                                |
|----------------------------|--------------------------------|
| <b>A</b> Wire Legs (2)     | <b>E</b> Sign Holder (1)       |
| <b>B</b> Support Bar (1)   | <b>F</b> Wired Frames (2)      |
| <b>C</b> Wire Dividers (4) | <b>G</b> Back Support Wire (1) |
| <b>D</b> Drip Trays (6)    |                                |

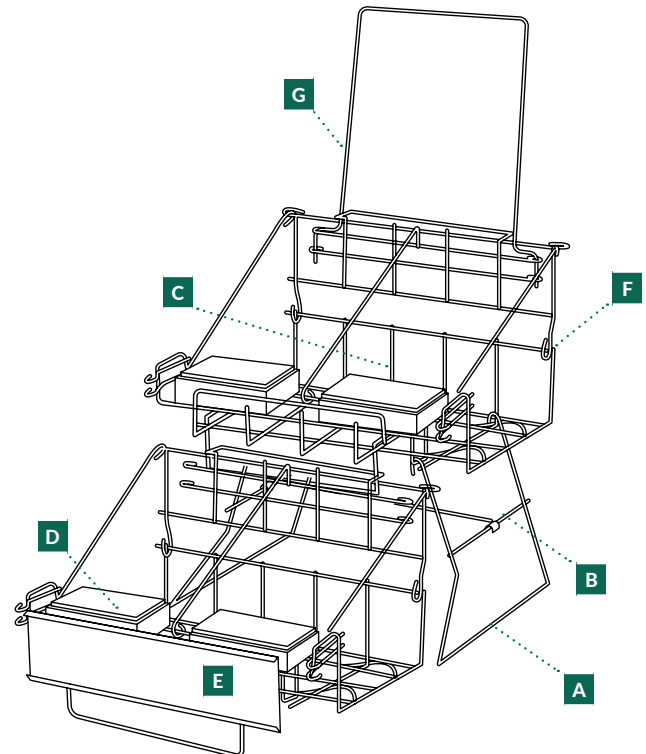

## INSTRUCTIONS

1. Unbox and ensure all parts are present.
2. Starting with one frame, swing the two support bars forward, inserting them into the wire loops on the front of the frame.
3. Attach one of the wire legs to the second bar in from the left, ensuring that the hooks are facing inwards.
4. Attach the other leg to the second bar in from the right, ensuring that the hooks are facing inwards.
5. With outward tension on the legs, position the single support bar horizontally across the bottom legs.
6. Thread the wire dividers diagonally through the holes in the front and back sections. For 234APK6, repeat this step for the second divider.
7. Insert the back support wire at an angle into the double wire loops on the backside of the airpot frame. Assembly of the first airpot rack is complete.
8. Take the second wired frame and swing the two support bars forward, inserting them into the wire loops on opposite sides of the frame.
9. Thread the wire dividers through the hole in the center of the front and back sections.
10. Position the second wired frame in front of the standing airpot frame.
11. Tilt the bottom frame backwards and insert the connecting bar into the standing frame.
12. Place the drip trays into the holders on the front of the frame.  
**Optional:** Place the black sign holder in front of the drip trays on the bottom frame or on the back support wire above the airpots.
13. Place your airpots onto the rack and serve!