


ASSEMBLY INSTRUCTIONS

CHZZ001: 32-Phone Storage Cabinet • **CHZZ002:** 32-Phone Storage Cabinet with Wall Mount Kit

PARTS KEY:

Included with Cabinet

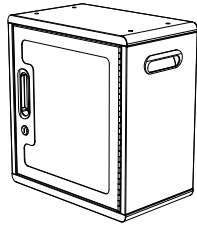

A x 1


Pre-Assembled Cabinet with
Foam Insert



B x 2

Door Key

Included with Wall Mount Bracket (CHZZ002 Only)

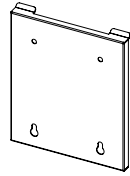

C x 1

Wall-Mount Plate



D x 4

ST4.8 x 39mm Pan Head
Self-Tapping Screw



E x 4

M5 Flat Washer



F x 4


D8 x 40mm Expanding
Drywall Anchor




G x 2

M5 x 12mm
Pan Head Screw

Tools Required



Screwdriver
Phillips Head

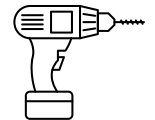


Drill
with 5/16" Drill Bit

WALL-MOUNT INSTRUCTIONS (CHZZ002 Only)


1

Hold the wall-mount plate (C) in desired position on the wall, mark the center of the four mounting holes.

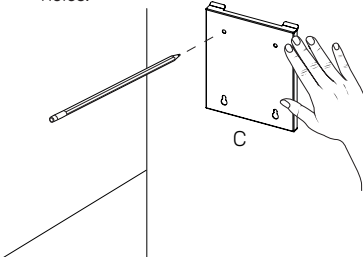


2

Pre-drill four 5/16" holes and insert drywall anchors (F).

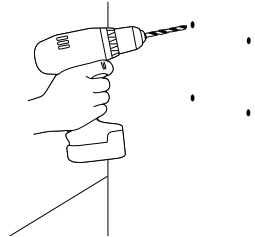


3

Once drywall anchors (F) have been inserted, attach the wall-mount plate (C) to the wall using four washers (E) and four self-tapping screws (D).

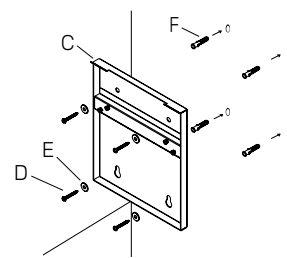


4

Carefully remove the foam insert from the cabinet (A). **TIP:** Pull GENTLY while wiggling the insert up and down.

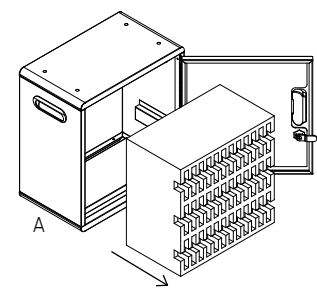


5

Tilt cabinet (A) and hang onto wall-mount plate (C).

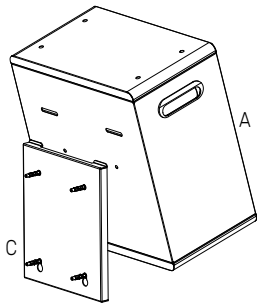


6

Secure cabinet (A) to wall-mount plate (C) from the inside of the locker using two pan head screws (G).

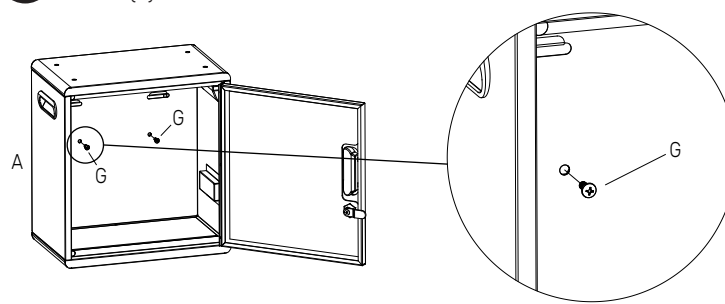

7

Carefully replace the foam insert inside the cabinet.

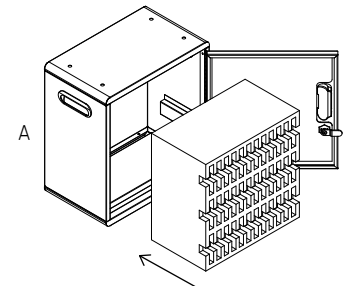

LUXOR

2245 Delany Road, Waukegan, IL 60087
Phone: (800) 323-4656 | Email: customerservice@luxorworkspaces.com | Web: www.luxorworkspaces.com