


ASSEMBLY INSTRUCTIONS




ITEM NO.

164WAITRS4WL
164WAITRS4BK


PART LIST:

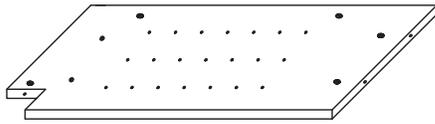


(1)/1PC
Left Side Board
SIZE: 31in x 22in

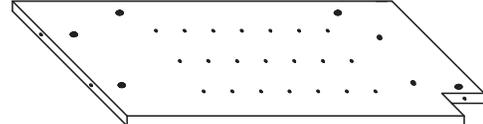


(2)/1PC
Right Side Board
SIZE: 30in x 22in

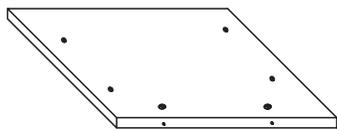


(3)/1PC
Top Board
SIZE: 24in x 23in




(4)/1PC
Kick Board
SIZE: 24in x 3in

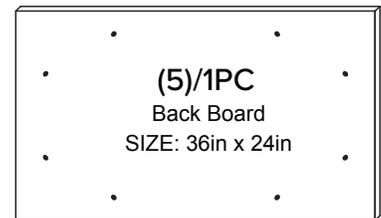

(5)/1PC
Back Board
SIZE: 36in x 24in

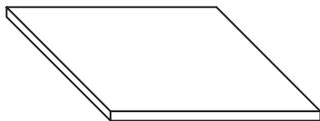


(6)/1PC
Shelf
SIZE: 22in x 22in

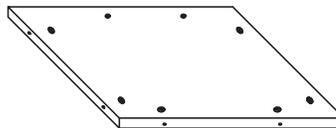


(7)/1PC
Bottom Board
SIZE: 22in x 22in




(8)/1PC
Shelf Bottom
SIZE: 20in x 12in




(9)/1PC
Right Drawer Side
SIZE: 12in x 4in



(10)/1PC
Left Drawer Side
SIZE: 12in x 4in



(11)/1PC
Front Drawer Side
SIZE: 24in x 4in



(12)/1PC
Back Drawer Side
SIZE: 20in x 4in

HARDWARE LIST:



(A)
Cam Lock
Screw (26PCS)



(B)
Small Cam
Lock (2PCS)



(C)
Screws
(12PCS)



(D)
Shelf Pin
(6PCS)




(E)
Machine
Screw (2PCS)



(F)
Cam Lock
(26PCS)



(G)
Drawer
Track (1PC)

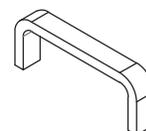

(H)
Handle
(1PC)

TOOLS REQUIRED:




Phillip's Head
Screwdriver
(not included)

STEP 1.

Screw cam lock screws (Ax16) onto side boards (1 and 2), top board (3), and back board (5).

a. Attach tracks onto predrilled holes on side 1 and 2 using the pilot holes to guide you.

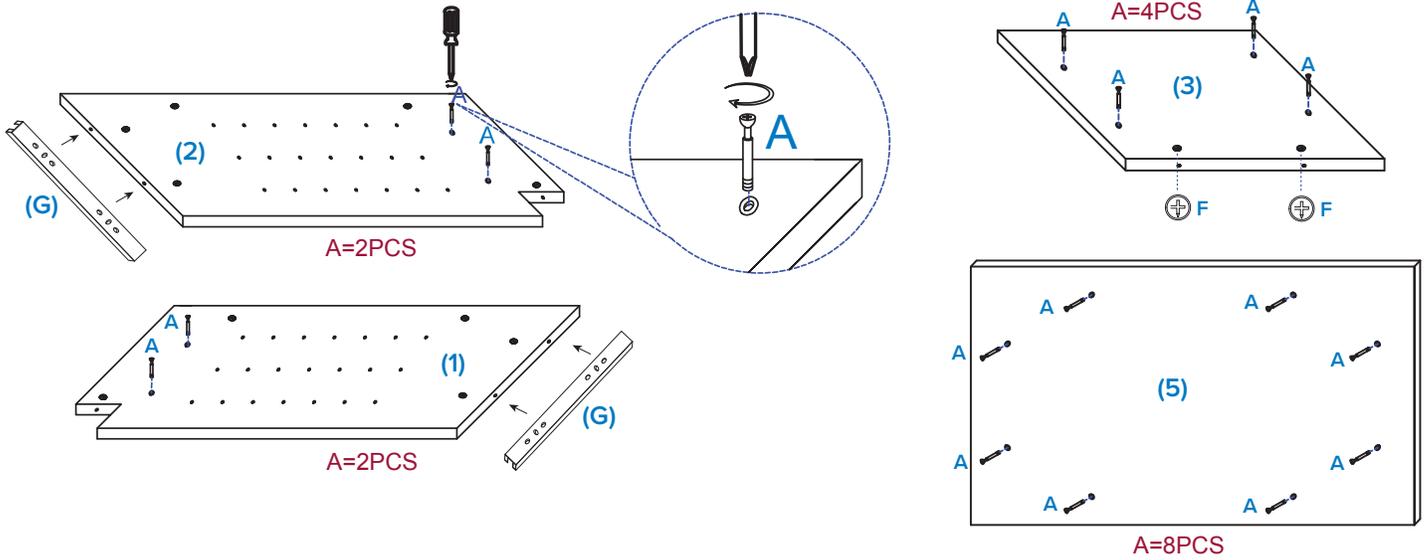


STEP 2.

Insert cam lock (Fx18) into bottom board (7), top board (3), side boards (1 and 2).



Arrow on cam lock should face outer edge where screw will be inserted.

a. Insert cam lock screws (Ax2) into bottom board (7).

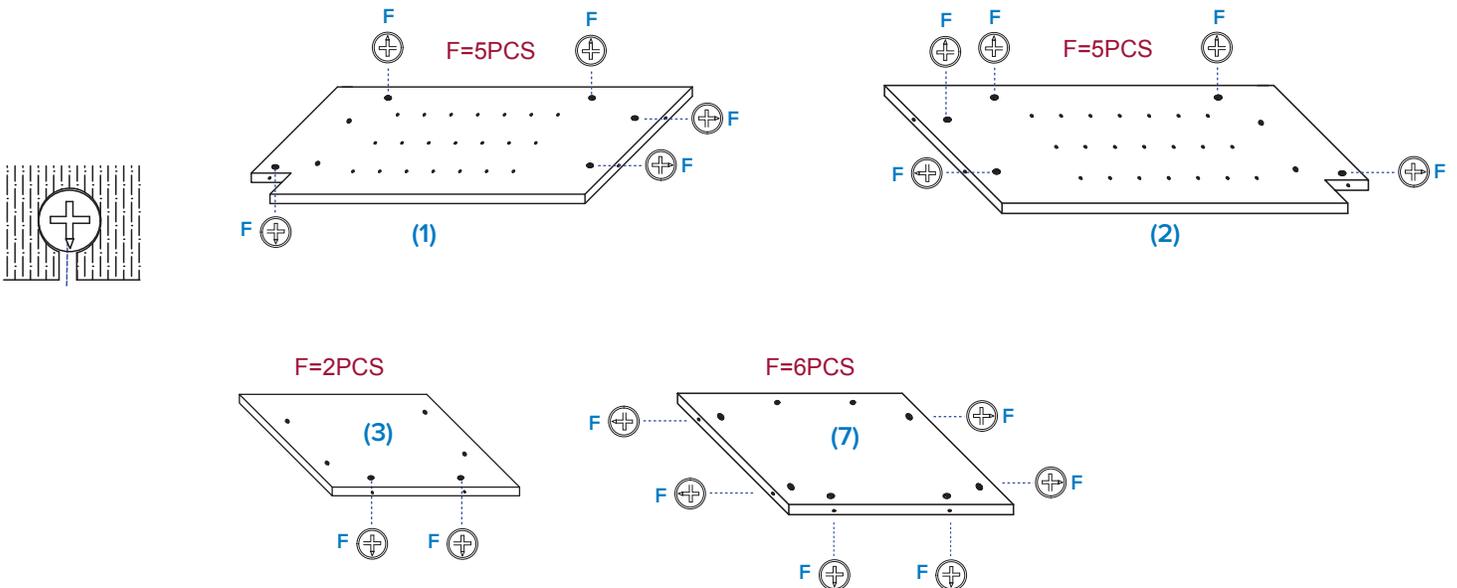


STEP 3.

1. Lay top board (3) on ground. Add sideboards (1 and 2); line up cam lock screw (Ax4) and cam lock (Fx4). Tighten cam lock (Fx4) with screwdriver once boards are in place.
2. Align bottom board (7) with remaining cam lock screws t(A). Tighten cam locks with screwdriver.

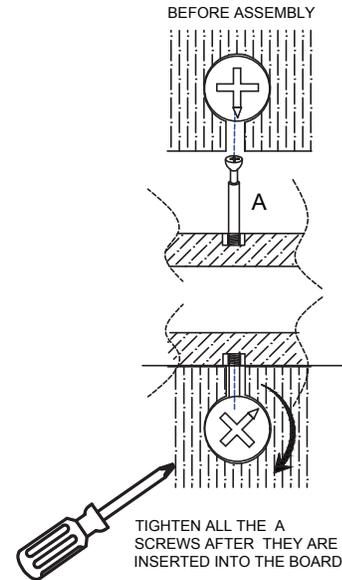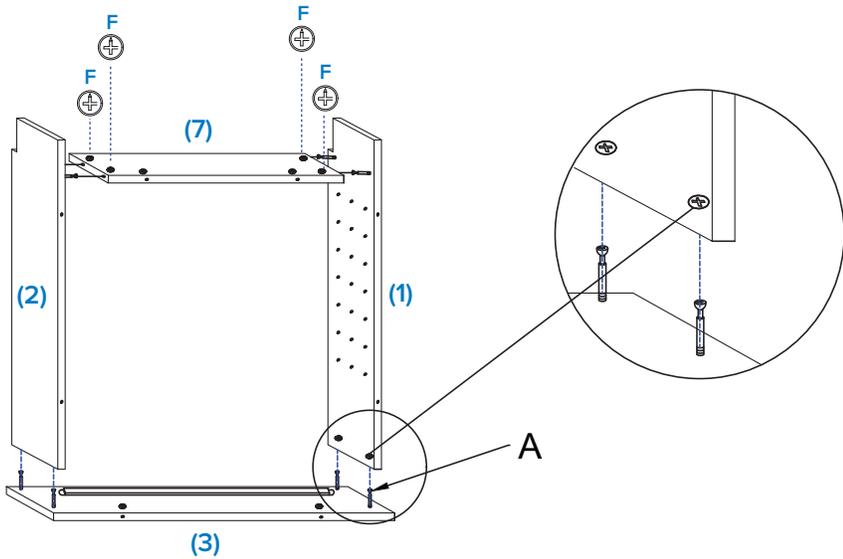


STEP 4.

1. Rotate the rectangle made in step 3 so that right side side (1) is touching the ground. Then place the back board (5) onto the back side of the rectangular piece. Align the large cam lock screws (Ax8) in the corresponding holes. Tighten the cam lock (Fx5) with screwdriver.
2. Place 2 small cam lock screws (Bx2) in the predrilled holes on the underside of bottom board (7).

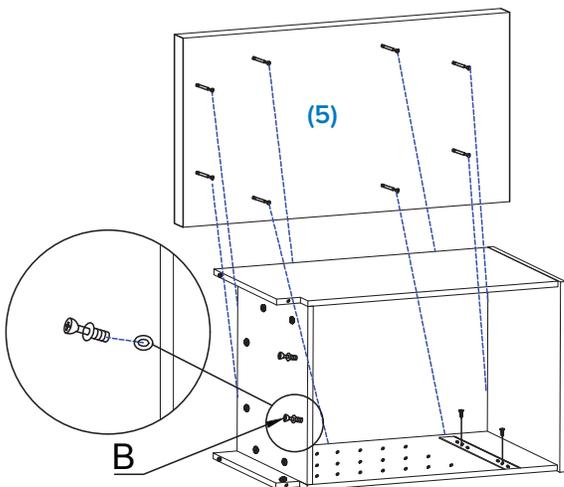


STEP 5.

- Align 2 screws (B) on bottom board (7) with holes on kick board (4), press kickboard onto screws.

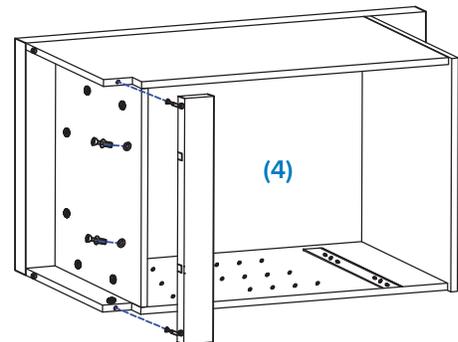

STEP 6.


1. Place cam locks (Fx4) into back drawer (12) and place cam lock screws into front drawer (11).
2. Place cam locks (Fx2) and cam lock screws into right and left drawer sides (9 and 10).

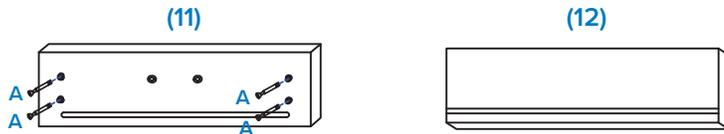

STEP 7.

Align all 3 panels outside of drawer (10, 12 and 9). Tighten cam locks.

- a. Slide bottom of drawer (8) into notches.
- b. Put piece (11) on front and tighten cam locks.
- c. Attach handle (G) to predrilled holes on the front of board (11) with (Cx2).
- d. Attach tracks to the outside of right and left drawer sides (9 and 10).
- e. Insert drawer into tracks on assembled waitress station.

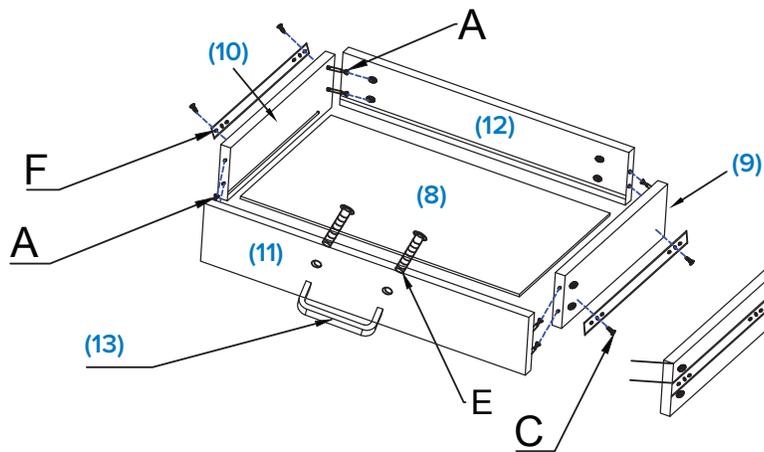

STEP 8.

1. Insert shelf pins (Dx6) on each side of the waitress station at desired height. Place the shelf (6) on pins.
2. Adjust drawer track to ensure tight fit if needed.

