





ASSEMBLY INSTRUCTIONS

TEAK AND BLACK ROPE STACK DINING CHAIR-TNA2233






STOP! PLEASE READ FIRST:



Thank you for purchasing this item from Outdoor Interiors. Please verify all the hardware and components are included as you unpack the carton. Place the items in a safe area to avoid losing and damaging contents. Use a soft area or the empty box to assembly the item.

PARTS LIST:

	1 piece
	1 piece
	1 piece
	1 piece

HARDWARE LIST:

A		6x70 mm	2 pieces
B		6x60 mm	2 pieces
C		6x45 mm	1 piece
D		6x60 mm	2 pieces
E		Allen key	1 piece

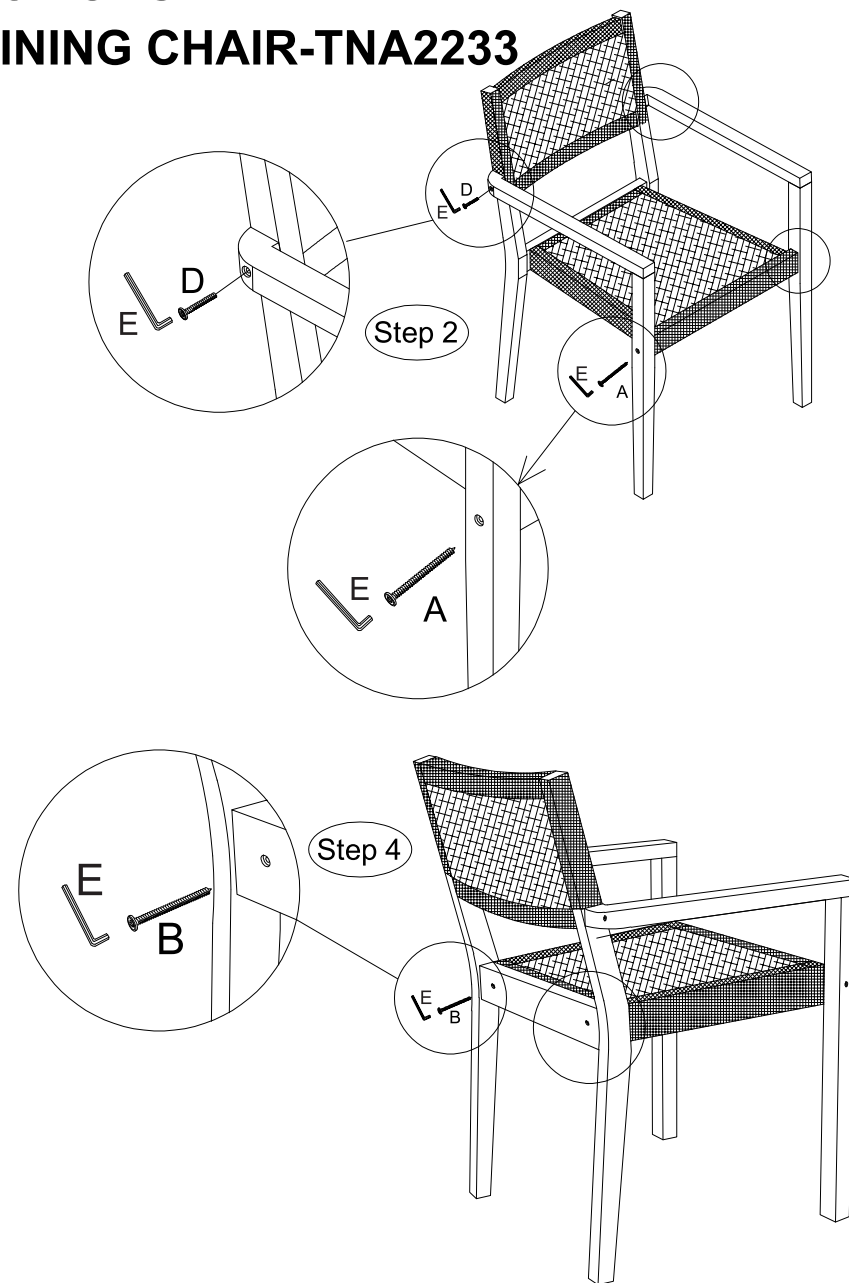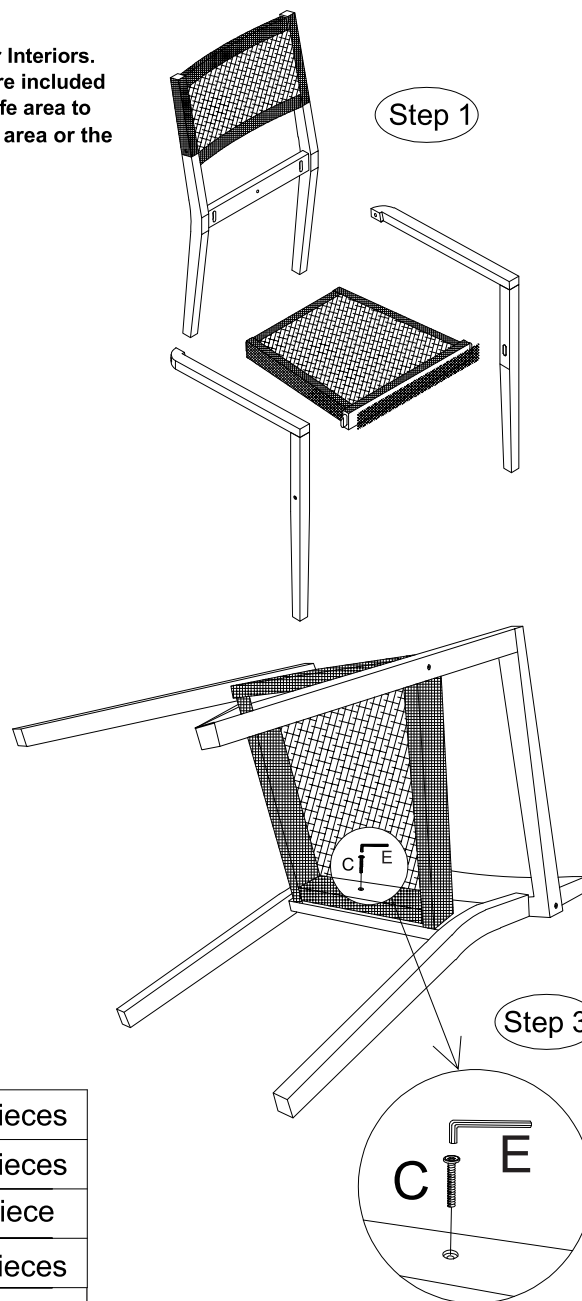

ASSEMBLY TIP:

Use patience when inserting bolts to find the matching holes before locking down to avoid unnecessary damage. Assemble on a soft surface to avoid damaging Teak and Rope. Do not fully tighten until partially connecting all bolts/screws.