


# 72" Thermoplastic Expanded or Perforated Outdoor Bench w/Back



## ASSEMBLY INSTRUCTIONS


### PARTS LIST

**A-E** Back & Seat (2)



OR

**A-P** Back & Seat (2)



**C** Leg(2)

Right Leg (1)  
C-R



Left Leg (1)  
C-L



**D** V-Link (2)



### HARDWARE

**AA** Head Screws and Nuts  
M8 x 30mm (11)  
Washers (22)



**BB** Anchor (2)



**CC** Concrete Screws  
M6 x 30mm (4)



**DD** Drill Bit  
M5 x 80mm (1)



### EXPANDED METAL



### PERFORATED METAL




# 72" Thermoplastic Expanded or Perforated Outdoor Bench w/Back

**LifeYard**

## ASSEMBLY INSTRUCTIONS

### STEP 1

Assemble of the Legs(C) & Table Top(A-E or A-P)

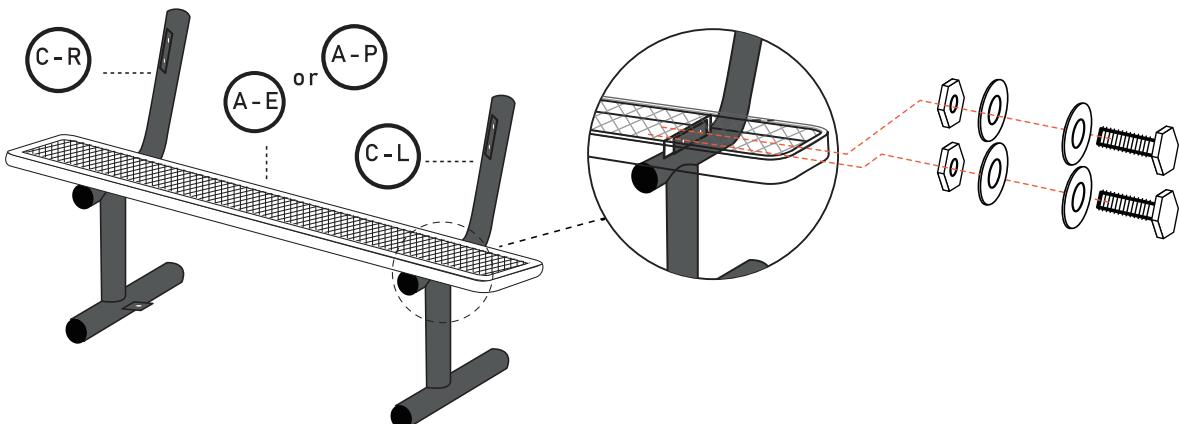


### STEP 2

Assemble of the V-Link (D) onto the 2 Legs



### STEP 3

Assemble of the Back onto the top of Legs

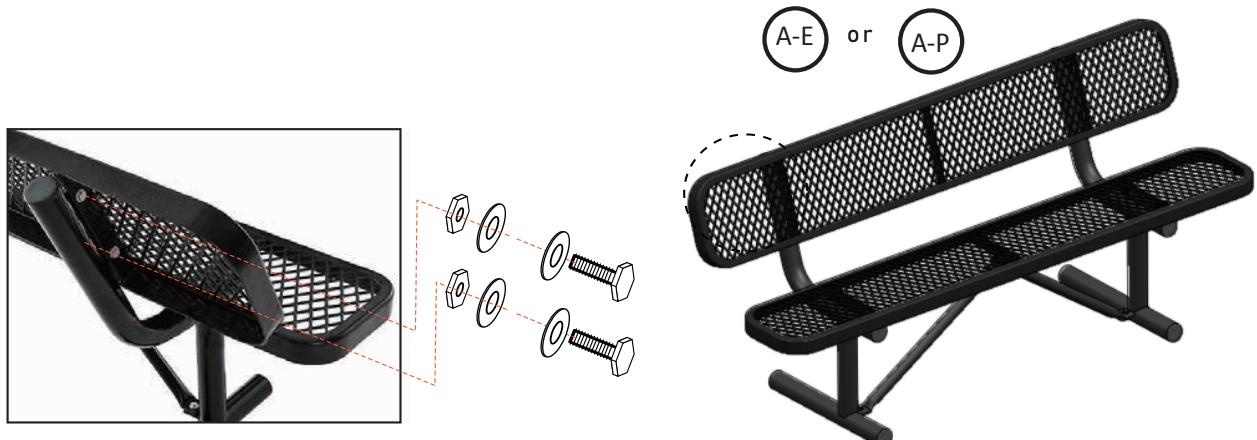

# 72" Thermoplastic Expanded or Perforated Outdoor Bench w/Back



## ASSEMBLY INSTRUCTIONS

### STEP 4      Mounting Hardware Instruction

1. Using provided drill bit, drill hole into the concrete, block or stone to a depth of 2-1/2"
2. Blow out the dust in the hole
3. Place anchor over tubing
4. Secure screw flush with anchor into drill hole.
5. Repeat on remaining screws.

