


**realoffice**

**MAYLINE**

Aberdeen Series™  
Conference Table 96" x 48"  
Model No. ACTB8

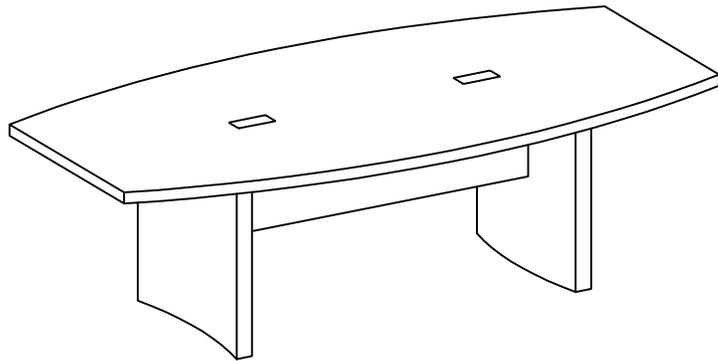


ASSEMBLY INSTRUCTIONS

CALL 1-800-822-8037 FOR ASSISTANCE

P/N **ACTB8** REV 07 08/09/10

[www.mayline.com](http://www.mayline.com)


# PARTS LIST

Name	Part	Qty.	Spare Qty	Name	Part	Qty.	Spare Qty
<b>A</b>	 <b>REALS004</b> Wood Dowel	<b>8</b>	<b>2</b>	<b>E</b>	 <b>REALS099</b> Grommet	<b>2</b>	
<b>B</b>	 <b>REALS003</b> Cam Post	<b>18</b>	<b>2</b>	<b>F</b>	 <b>REAL067</b> Leveler	<b>4</b>	
<b>C</b>	 <b>REALS001</b> Cam Fastener	<b>18</b>	<b>2</b>		 <b>ACTBHB</b>		
<b>D</b>	 <b>REALS102**</b> Cam Sticker	<b>18</b>	<b>2</b>				

Items with HB are in hardware box.

\*\*Denotes Color Code

# PARTS LIST

Name	Part	Qty.	Name	Part	Qty.
<b>J</b>	 <b>ACLG**</b> Table Leg	<b>2</b>	<b>L</b>	 <b>ABT8**</b> Top	<b>1</b>
<b>K</b>	 <b>ACM8**</b> Modesty Panel	<b>2</b>			



## IMPORTANT!

**Review ALL instructions before beginning assembly .** These instructions are provided to avoid problems that may occur from improper assembly or installation. Mayline and/or its distributor are not responsible for failure resulting from improper assembly or installation of this product. Moreover, all warranties are void for failure to follow these assembly instructions.

\*\*Denotes Color Code

**2**

- 1** **DO NOT** assemble table with top to floor. Table must be assembled in an upright position only.
- 2** Insert Wood Dowels (A) and Cams (C) into Modesty Panels (K). Install Leveler (F) and Cams (C) into Legs (J). Install Cam Posts (B) into threaded inserts in Table Legs (J). Secure Modesty Panels (K) to Table Legs (J) by turning Cams (C).

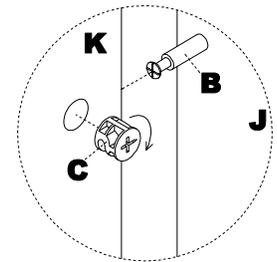
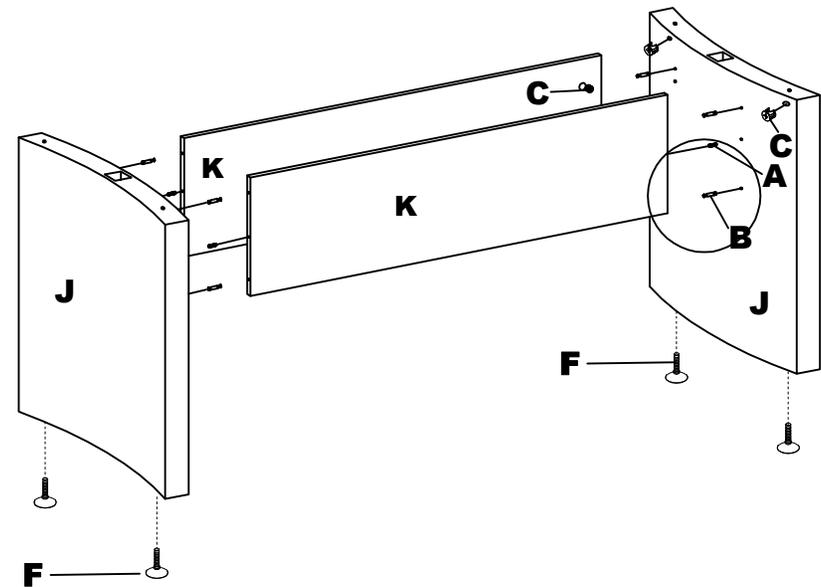


NOTE: The arrow on the face of the Cam (C) should point towards the Cam Post (B) for proper alignment.

**3**

**3**

Insert Wood Dowels (A) into the top of the Table Legs (J) and Modesty Panels (K). Insert Cams into the Modesty Panels (K). Install Cam Posts (B) into threaded inserts in the underside of the Top (L). Secure Top (L) to Modesty Panels (K) by turning Cams (C). Apply Cam Stickers (D) to exposed Cams (C). Install Cap and Grommet (E).

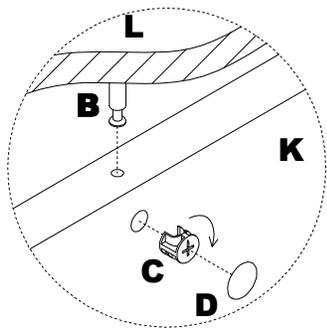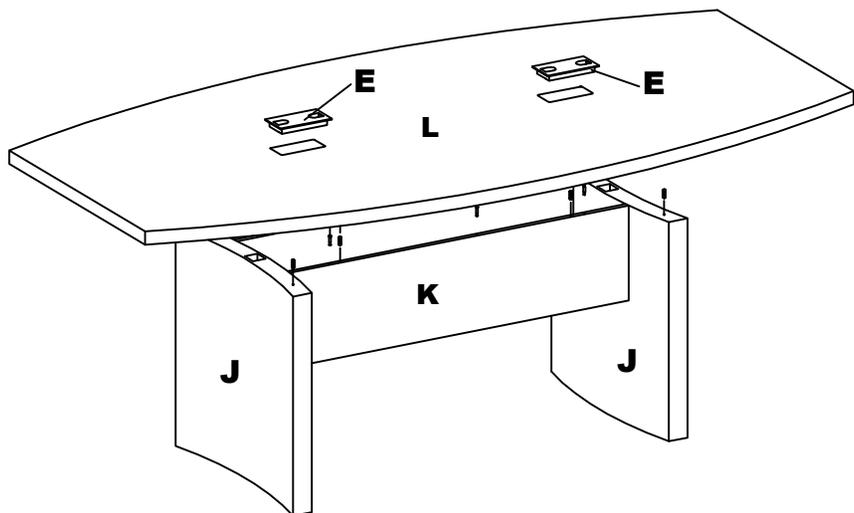

NOTE: The arrow on the face of the Cam (C) should point towards the Cam Post (B) for proper alignment.