



4 bolts




4 screws




8 washers

PER EACH CASTER

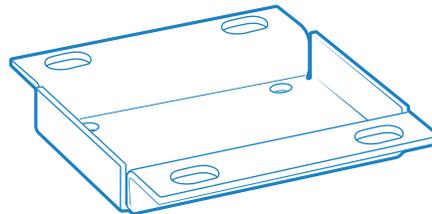


1 retrofit plate

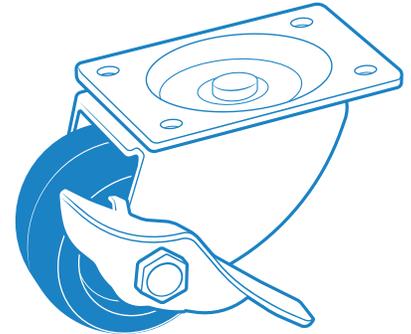


1 plate caster

1. Unscrew the unit's existing caster
2. Use the bolts and washers to fasten the retrofit plate onto the unit's existing cavity

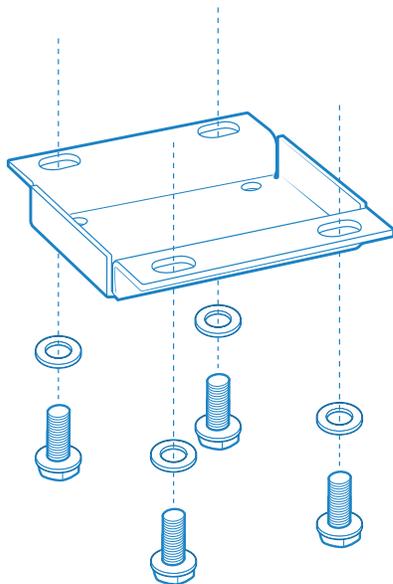

3. Use the screws and washers to fasten the new caster onto the retrofit plate

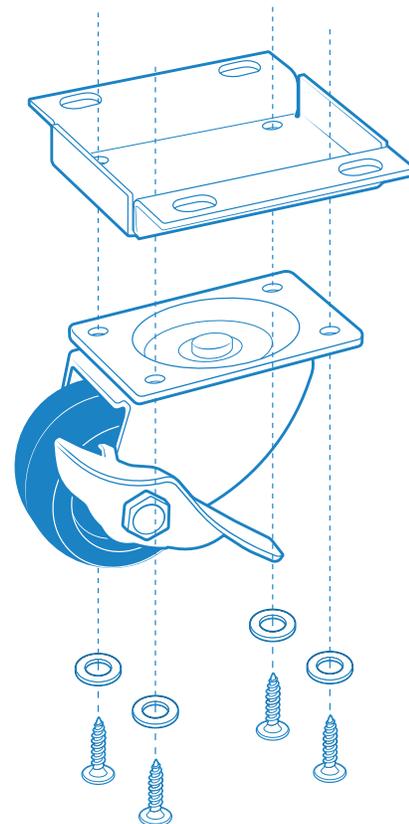

CAUTION! Never lay unit on its back! Unit should only be plugged in when it has rested in the correct upright position for at least 24 hours. Failure to meet this requirement will void warranty coverage if compressor damage ensues.