

**Figure 4**

**Step 4:**

Insert Rubber Gland over 2" I.P.S. Stub Pipe (Use liquid soap on Gland for easy installation). Thread Brass Compression Nut over Rubber Gland.

Insert Drain Key into Brass Compression Nut (**Figure 3**).

Using flat blade screw driver, tighten Compression Nut to ensure tight seal between Rubber Gland and 2" Pipe Stub as shown in **Figure 4**.

Remove Drain Key and secure Strainer Plate to top of Drain.



Edgewood, New York 11717-8380

© ADVANCE TABCO MARCH 2007



## Installation Instructions for Floor Mounted Mop Sinks



**CHECK FOR CONCEALED DAMAGE  
FILE CLAIM WITH DELIVERING FREIGHT CARRIER**

Mop Sinks are designed and constructed for the use of mop cleaning and associated activity. **Advance Tabco** does not recommend product use for any food preparation or activities employing harsh and active chemicals. Please consult factory regarding unusual applications.

**Contents:**

- (1) Mop Sink
- (1) "Z" Mounting Bracket
- (1) Drain


**Tools Required:**

- (1) Drain Key (Included with Drain)
- (1) Large Flat Screw Driver

**Step 1:**

Install "Z" Mounting Bracket 2-1/4" above finished floor shown in **Figure 1**.

**NOTE:** Hardware not included.

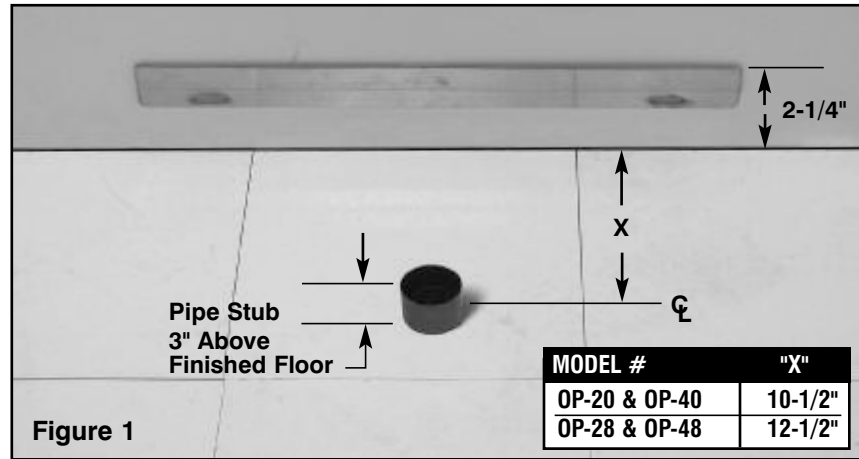

**Figure 1**

**Step 2:**

Assemble Mop Sink Drain to Mop Sink.

**NOTE:** Do Not install top Strainer Plate, Rubber Gland or Brass Compression Nut at this time.

**Step 3:**

Position Mop Sink over 2" I.P.S. stub Pipe while securing rear strap onto "Z" Mounting Bracket (**Figure 2**).

**NOTE:**

2" Pipe Stub must protrude 3" above finished floor for proper installation. Recommend using Silicone Sealant between bottom of Mop Sink Apron and floor.



**Figure 2**

**SECTION VIEW OF DRAIN ASSEMBLY**