

Atlas A-Frame Bar Height

Assembly Instructions




215-289-5411


Parts			Hardware			Required Assembly Tools		
A	1	Lower Brace	H1	12	Large Flat Head Allen Screw	T1		Allen Wrench (Included)
B	2	Side Frame	H2	4	Washer	T2		Rubber Hammer
C	2	Upper Brace	H3	4	Adjustable Glide			

TWO ADULTS REQUIRED FOR ASSEMBLY


STEP 1

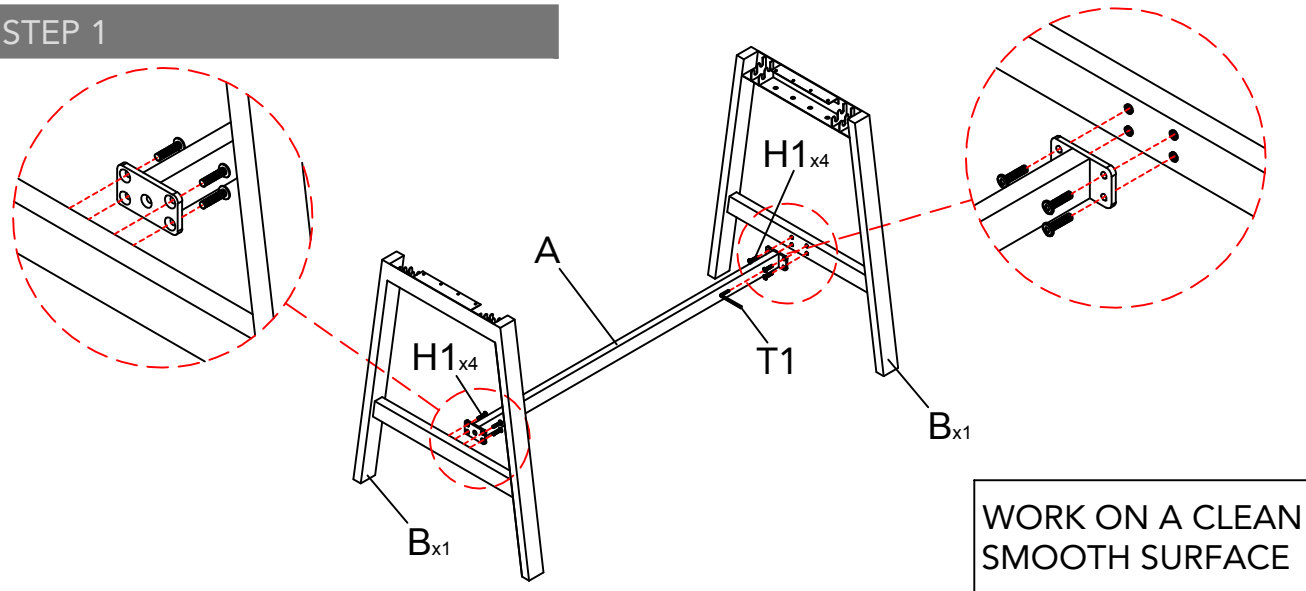

STEP 2

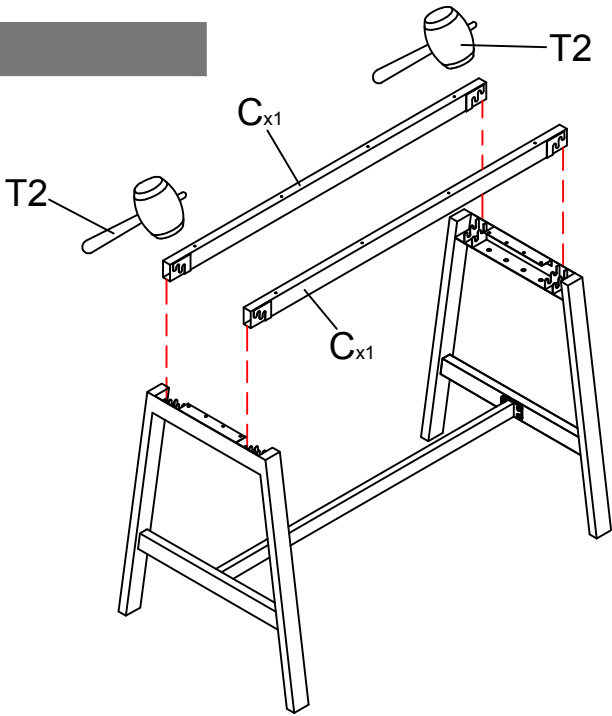

STEP 3

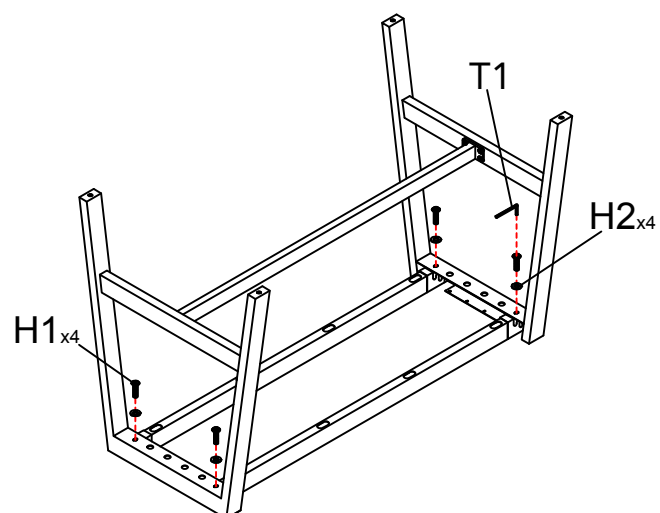

STEP 4

