

Urban Loop Frame - Dining & Bar Height

Assembly Instructions




215-289-5411

Parts			Hardware			Required Assembly Tools		
A	2	Side Frame 	H1	4	Large Flat Head Allen Screw 	T1	 Allen Wrench (Included)	
			H2	4	Washer 			
B	2	Upper Brace 	H3	4	Adjustable Glide 	T2	 Rubber Hammer	


TWO ADULTS REQUIRED FOR ASSEMBLY

STEP 1

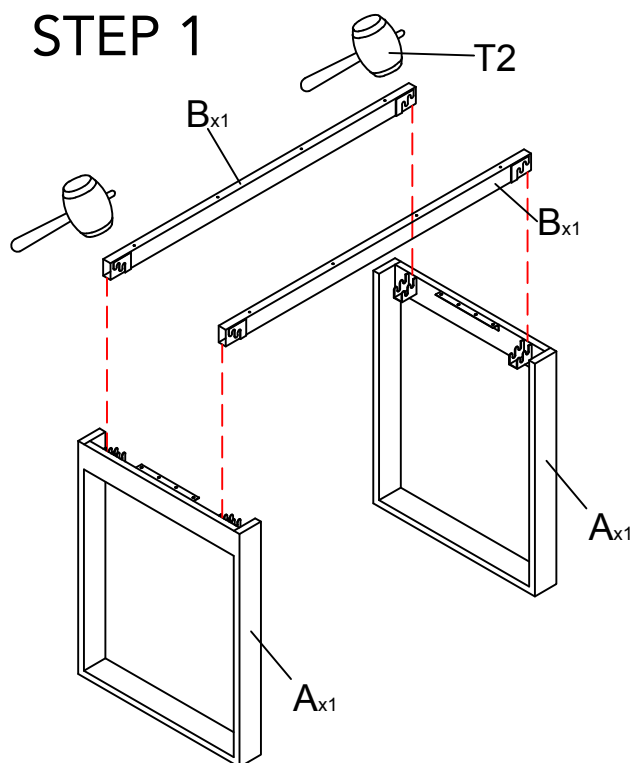

WORK ON A CLEAN
SMOOTH SURFACE

STEP 2

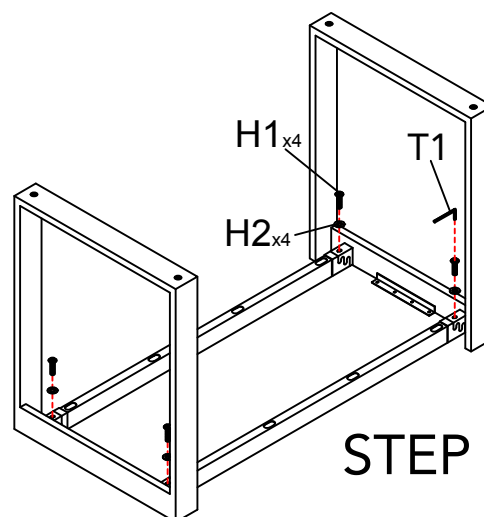

STEP 3

