












MODEL NO.:N114




4 DRAWER LATERAL FILE

TUN021AG	TUN006MH	TUN005MH	TUN001PC				
A  Adjustable Glide 4 Pcs	B  96mm Metal Scallop Shape Handle 1 Sets	C  32mm Metal Scallop Shape Handle 3 Sets	D  File Clip 8 Pcs+2Pcs(spare)	E  672*16*3mm Aluminium Bar 1 Pcs	F  378*16*3mm Aluminium Bar 2 Pcs	G  298*16*3mm Aluminium Bar 1 Pcs	H  Keys 1 Set

STEP1

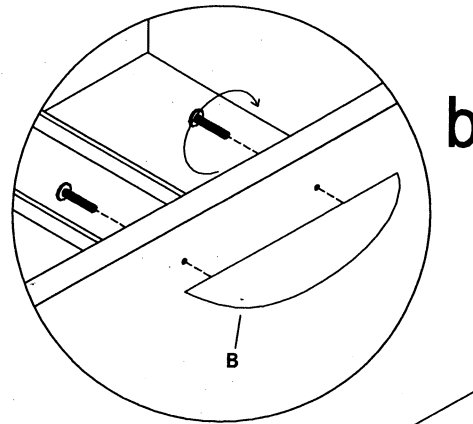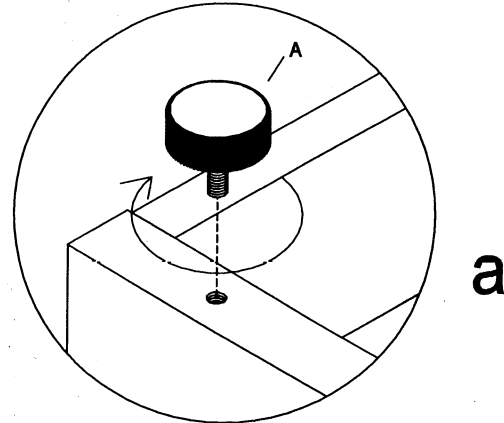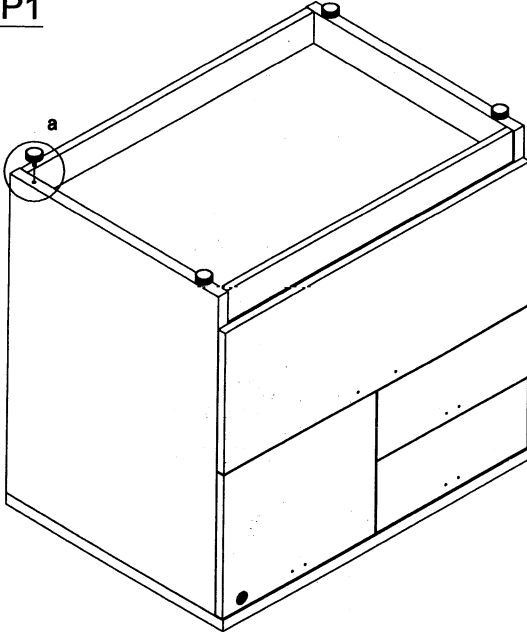

STEP2

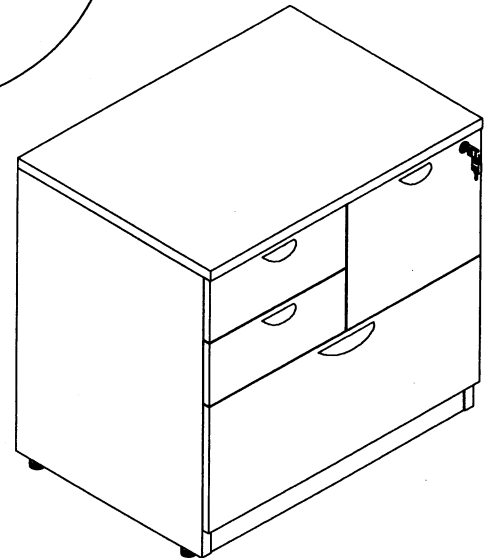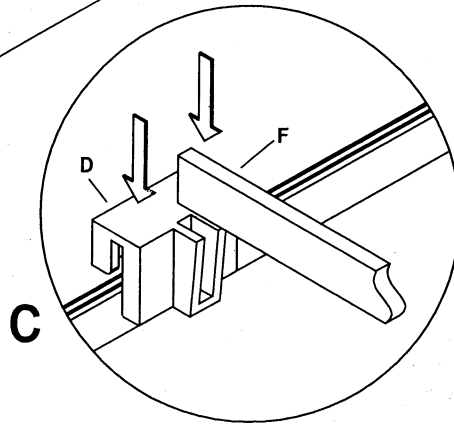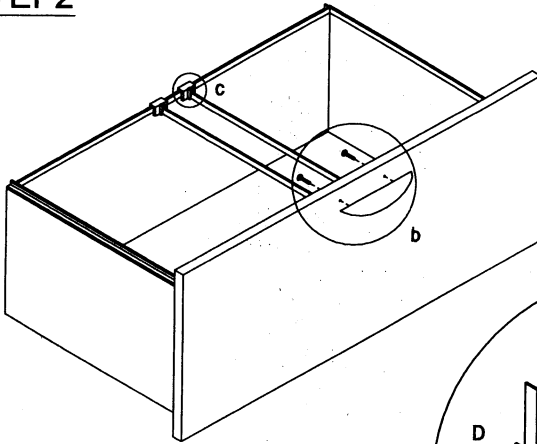

COMPLETED ASSEMBLY

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children.