
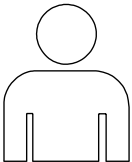


# Z-Rack - Industrial Rack with Included Add-On Hangrail

Item # RZK8DH, RZK8RNGDH

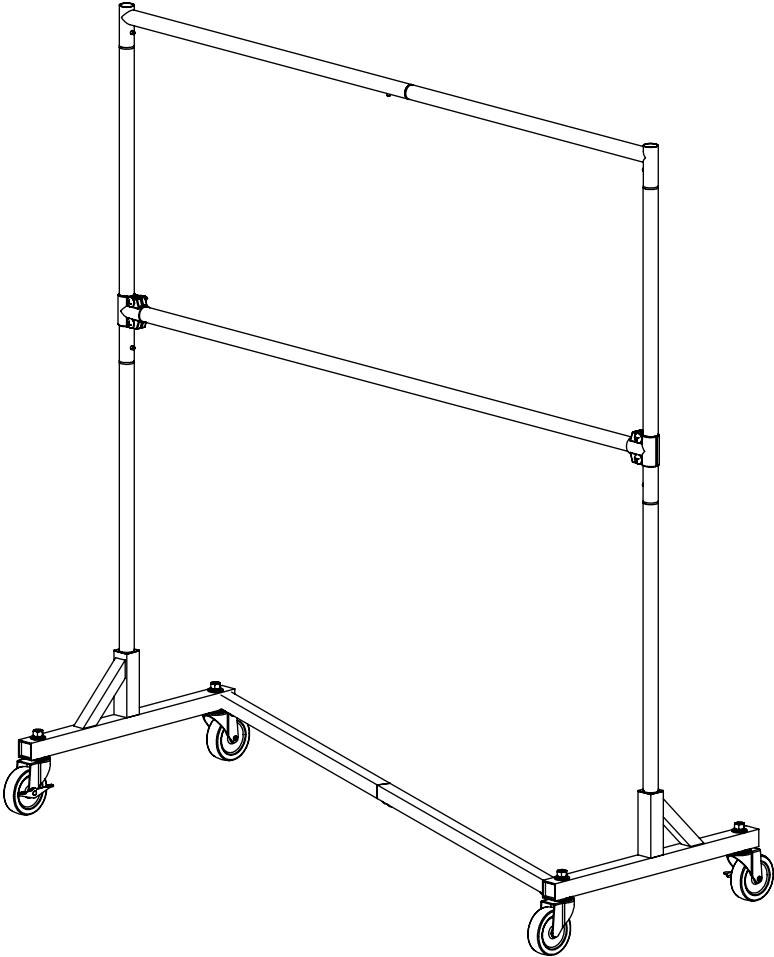

**2 PEOPLE  
REQUIRED  
FOR  
ASSEMBLY**

## INCLUDED HARDWARE




**6X**  
3/8"-16 x 0.5" LONG  
BUTTON HEAD SOCKET  
SCREW



**6X**  
3/8" LOCK WASHER



**6X**  
3/8" FLAT WASHER

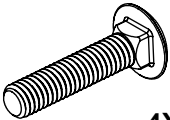

**4X**  
3/8" x 1 3/4" LONG  
CARRIAGE BOLT




**4X**  
1/2"-12 HEX NUT



**4X**  
1/2" LOCK WASHER



**4X**  
1/2" WIDE FLAT  
WASHER

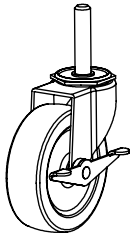


**4X**  
4" CASTER  
-2 LOCKING  
-2 NON-LOCKING




**4X**  
3/8" SERRATED LOCKNUT

## TOOLS REQUIRED

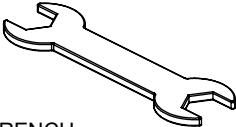

WRENCH




ALLEN KEY

1

ASSEMBLE THE LOWER CROSS BAR HALVES WITH 3/8" BUTTON HEAD SCREWS, 3/8" LOCK WASHERS AND 3/8" WASHERS AS SHOWN. TIGHTEN WITH ALLEN KEY.


JOIN THE (2) SIDE FRAMES WITH THE ASSEMBLED CROSS BAR IN THE SAME MANNER AS SHOWN. TIGHTEN WITH ALLEN KEY.

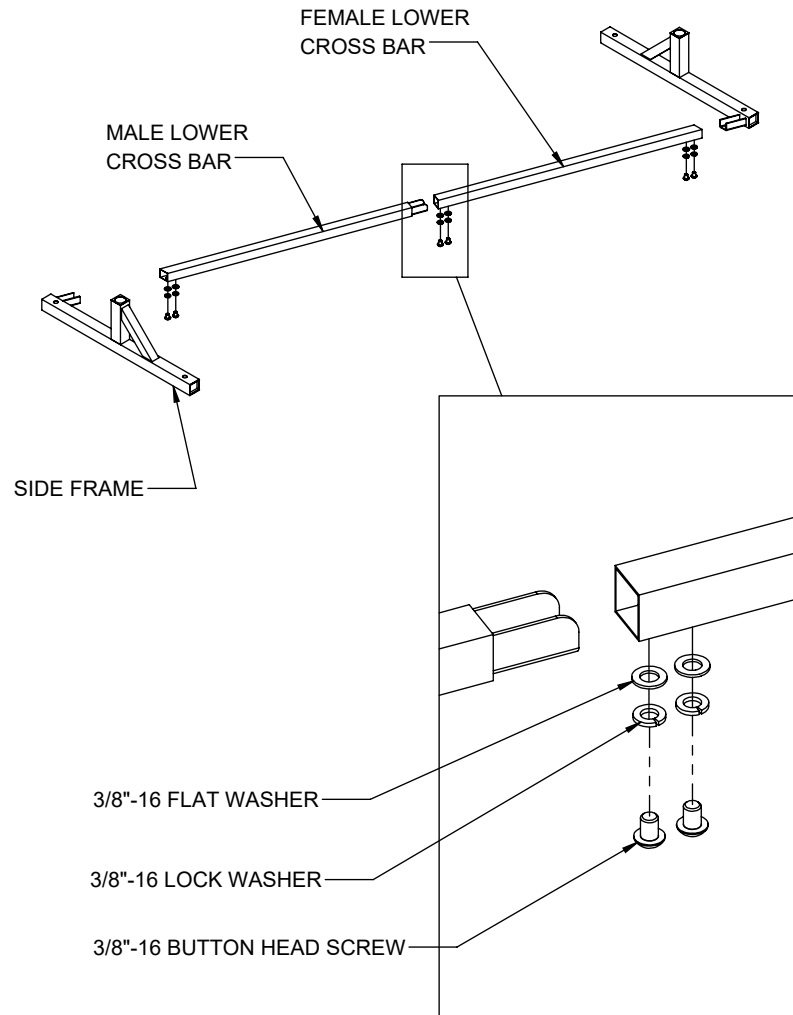

2

ASSEMBLE CASTERS TO THE ASSEMBLED BASE WITH 1/2" WASHERS, 1/2" LOCK WASHERS, 1/2"-12 HEX NUTS AS SHOWN. USE THE WRENCH TO TIGHTEN THE NUT.


**NOTE: CASTERS WITH BRAKES SHOULD BE INSTALLED IN OPPOSITE CORNERS AS SHOWN.**

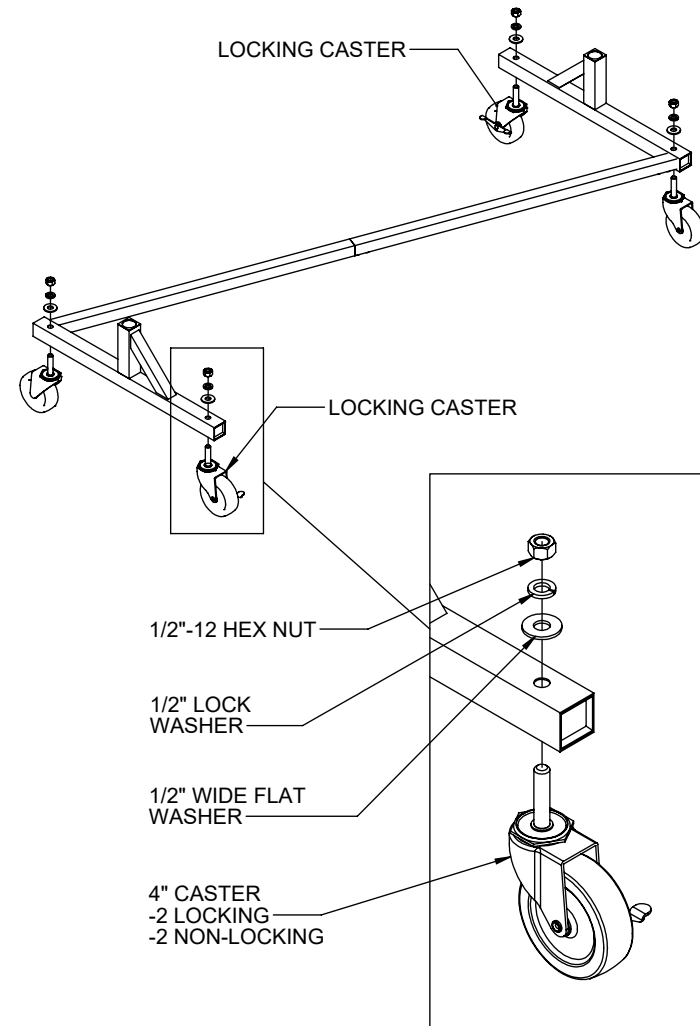

**3**

DEPRESS THE PUSH BUTTON ON THE BOTTOM UPRIGHT HALF AND JOIN WITH THE TOP UPRIGHT HALF. REPEAT FOR THE OTHER UPRIGHT.


INSERT UPRIGHTS INTO THE SIDE FRAMES AND ALIGN THE PUSH BUTTON TOWARDS THE CENTER.

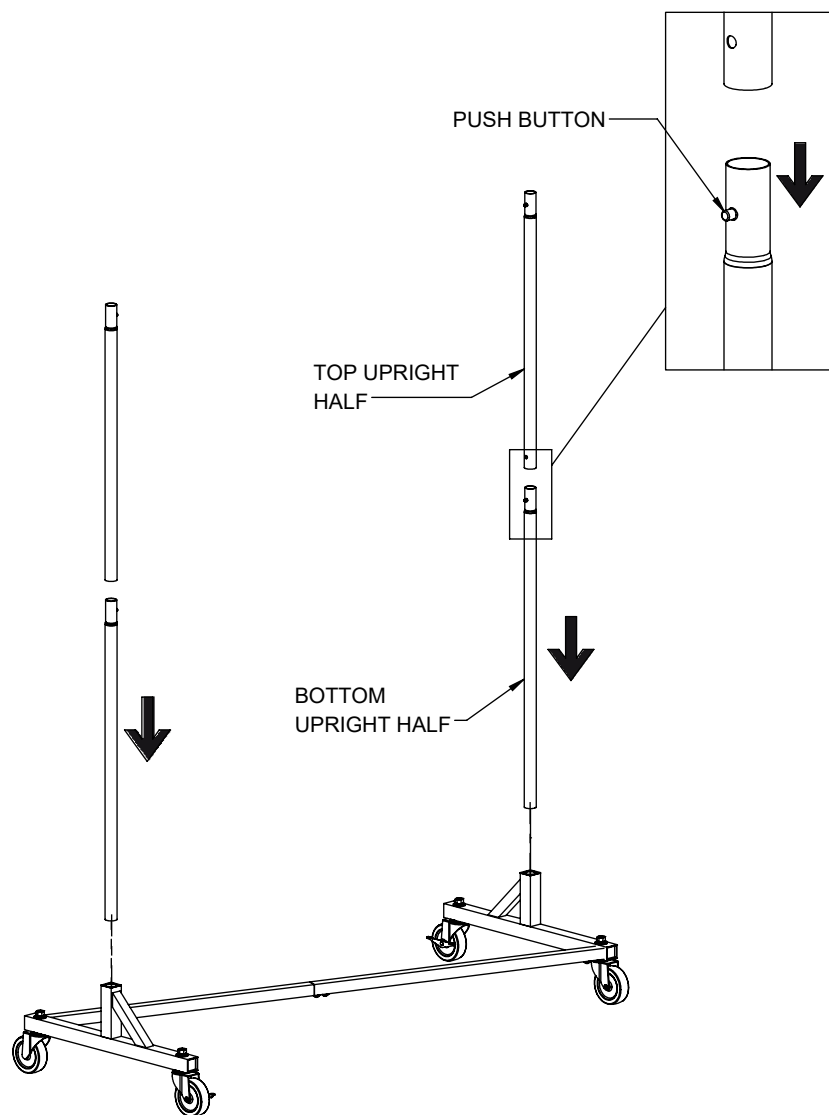

**4**

DEPRESS THE PUSH BUTTON ON THE MALE HANG BAR HALF AND JOIN WITH THE FEMALE HANG BAR HALF AS SHOWN.

DEPRESS THE PUSH BUTTONS ON THE UPRIGHTS AND INSTALL THE ASSEMBLED HANG BAR ON THE UPRIGHTS AS SHOWN.

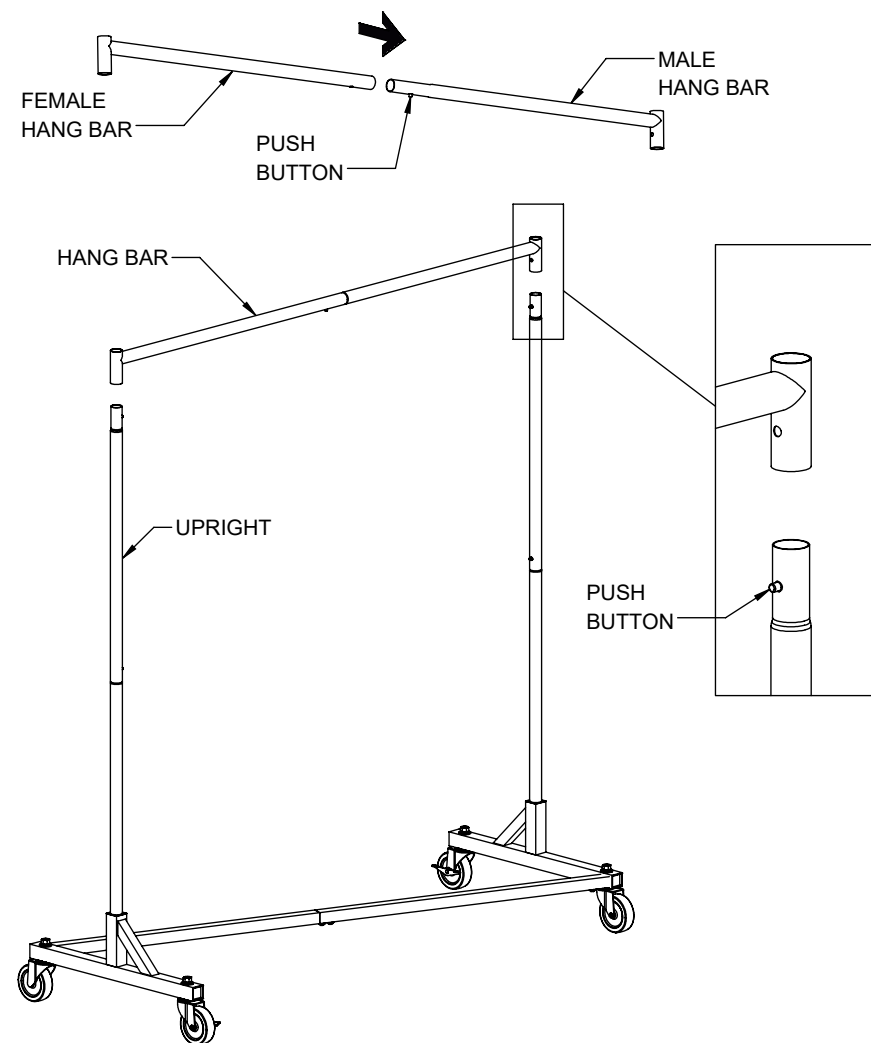

## 5

HOLD THE HANG BAR AT THE REQUIRED HEIGHT AND POSITION THE HANG BAR CLAMPS AS SHOWN BELOW.

INSERT THE CARRIAGE BOLTS THROUGH THE SQUARE HOLES IN THE CLAMPS AND THREAD ON THE SERRATED LOCK NUTS.

TIGHTEN THE PIECES TOGETHER WITH THE INCLUDED WRENCH.

