
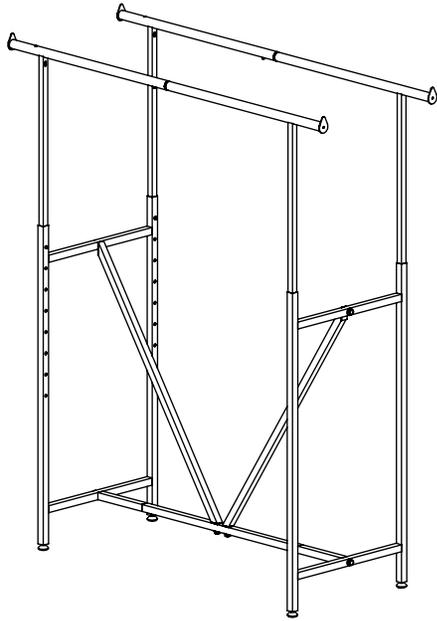



**ASSEMBLY
INSTRUCTIONS FOR:
K41**

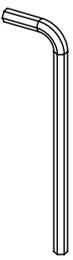

INCLUDED HARDWARE


- | | | | | |
|---|--|---|---|---|
| 
4x
3/8"-16 x 1.5" LONG
HEX HEAD CAP
SCREW | 
4x
5/16"-18 x .5"
HEX HEAD CAP
SCREW | 
2x
3/8"-16 x 2" LONG
HEX HEAD CAP
SCREW | 
ALLEN KEY | |
| 
4x
3/8" SPRING
LOCK WASHER | 
4x
5/16" SPRING
LOCK WASHER | 
2x
3/8" SPRING
LOCK WASHER | | 
LEVELERS |
| 
4x
3/8"
WASHER | 
4x
5/16"
WASHER | 
2x
3/8"
WASHER | | |

1

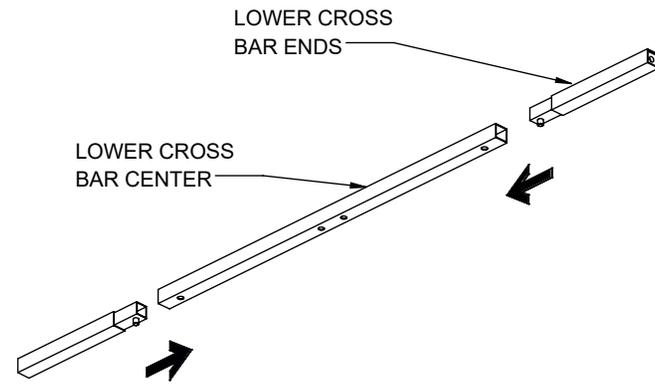


ASSEMBLE THE LOWER CROSS BAR BY DEPRESSING THE PUSH BUTTONS AND JOINING THE COMPONENTS AS SHOWN.

2

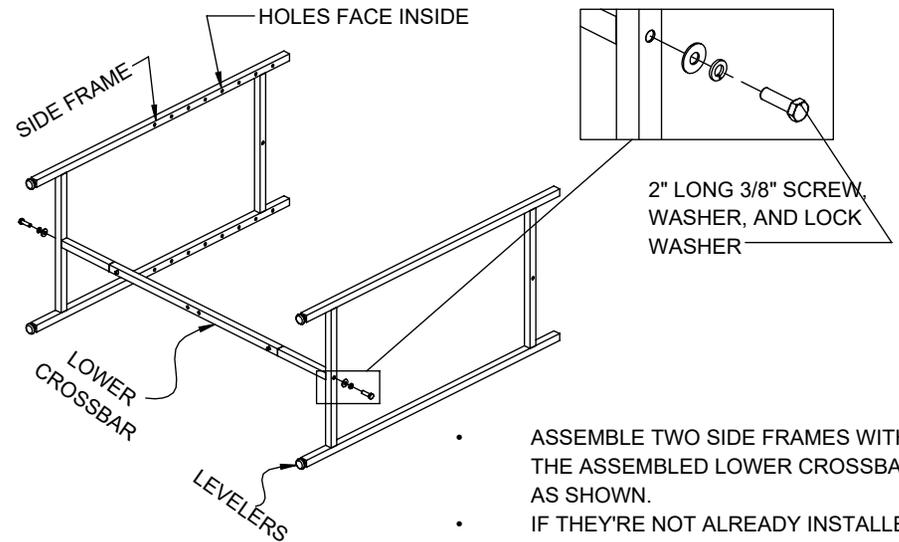

- ASSEMBLE TWO SIDE FRAMES WITH THE ASSEMBLED LOWER CROSSBAR AS SHOWN.
- IF THEY'RE NOT ALREADY INSTALLED, SCREW IN THE LEVELERS TO THE SIDE FRAMES.


3

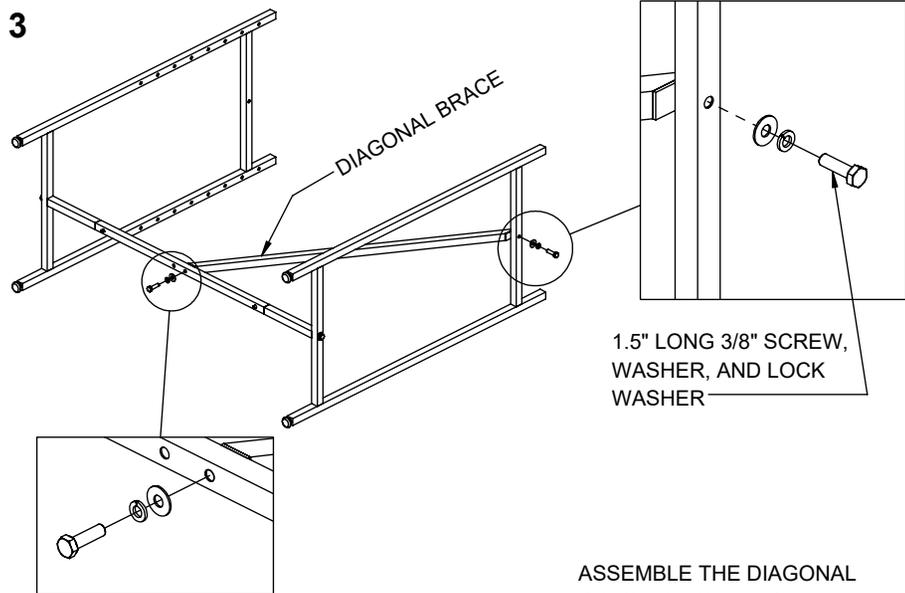

1.5" LONG 3/8" SCREW,
WASHER, AND LOCK
WASHER


ASSEMBLE THE DIAGONAL
BRACE ON ONE SIDE.

4

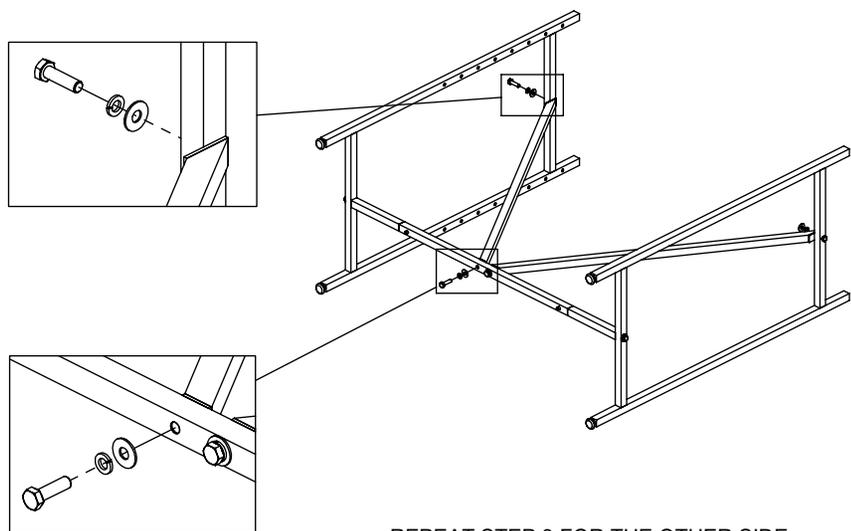

REPEAT STEP 3 FOR THE OTHER SIDE.


5

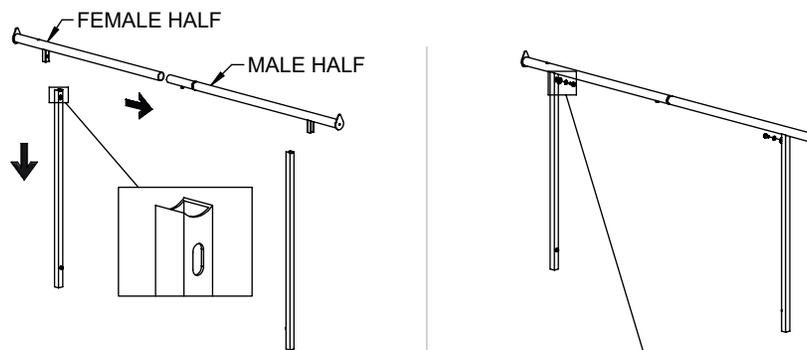

- ASSEMBLE THE HANG BAR BY DEPRESSING THE PUSH BUTTONS ON THE MALE HALF AND INSTALL IT INTO THE FEMALE HALF.
- SLIDE HANG BAR UPRIGHTS IN PLACE.
- SECURE WITH HARDWARE AS SHOWN.
- REPEAT FOR SECOND HANG BAR.

1/2" LONG 5/16"
SCREW, WASHER,
AND LOCK WASHER

6

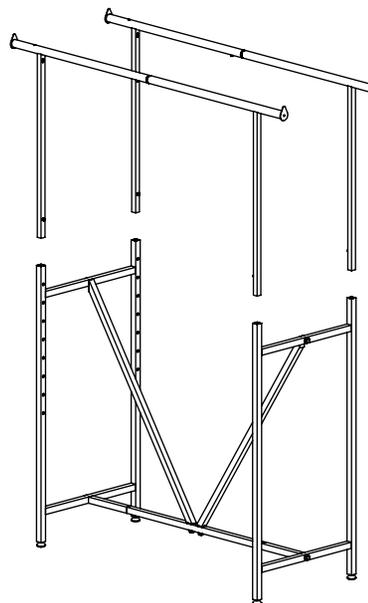

DEPRESS PUSH BUTTONS AND
INSTALL HANG BARS ONTO THE
UNIT.