
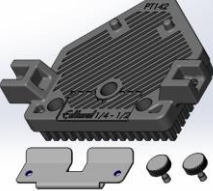
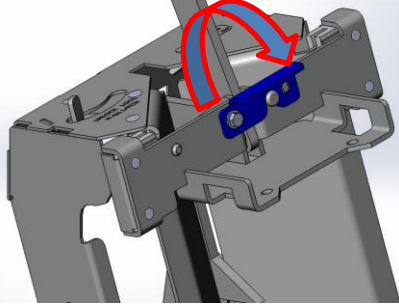
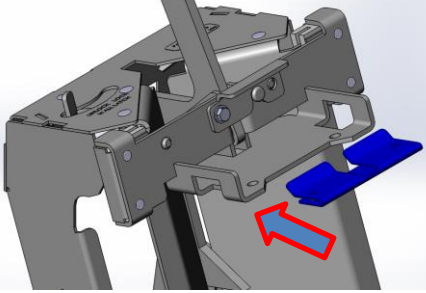
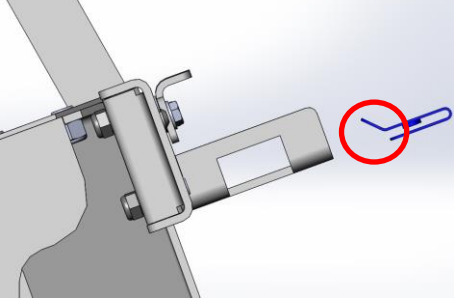
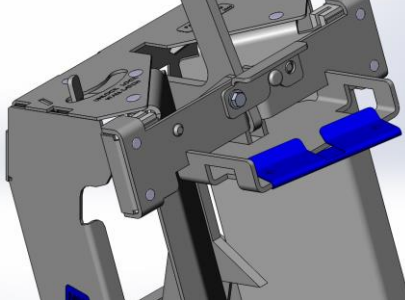


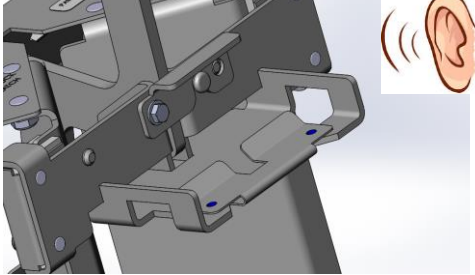

Edlund Titan Retrofit Pusher Instructions

Part List: New Pusher Retrofit clip 2 screws	1. Lock Titan with handle in “up” position	2. Press retrofit Clip onto pusher weldment
		
3. Keep tabs up	4. Start 1 side, then the other. Clip is spring loaded, bend slightly	5. Ensure to “snap” extrusion into both holes. Holes should line up
		
6. Completely thread 2 bolts into clip from the top until loose	7. Install pusher, note pusher orientation. Line up tabs	8. Thread both bolts into pusher
