
Adirondack Footrest

ASSEMBLY INSTRUCTIONS



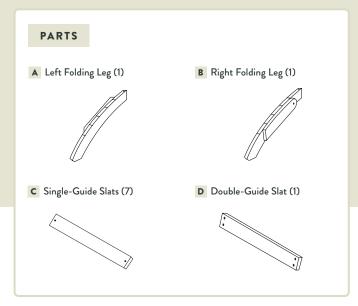




NOTES

- Before assembly, make sure all components are free from defects.
- Do not assemble if anything is broken or damaged.
- A screwdriver is required.


STEP 1

Lay the closed folding legs (A, B) on a flat surface with the guide holes facing upward and the leg extenders facing each other.

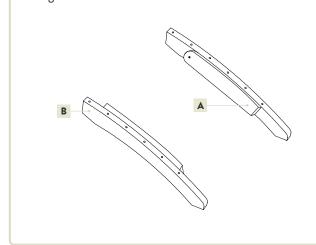

STEP 2

Starting from the top (where the joint of the leg extender is), attach 6 single-guide slats (C) using the 12 screws (AA). Use a screwdriver. Do not overtighten.

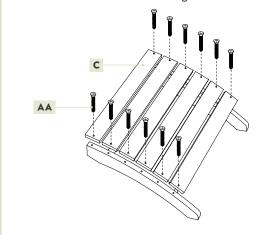


Adirondack Footrest

ASSEMBLY INSTRUCTIONS




STEP 3

Gently flip the footrest over and with the legs still closed, attach a single-guide slat (C) to the top to reinforce connection using the 2 screws (AA). Use a screwdriver. Do not overtighten.

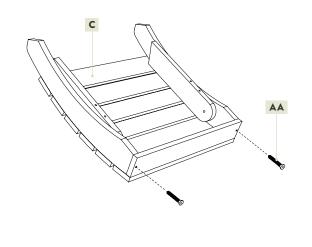

STEP 4

With the item still flipped over, gently extend the legs until they are facing out and attach the double-guide slat (D) to each leg using 4 screws (AA) to reinforce the connection. Use a screwdriver. Do not overtighten.

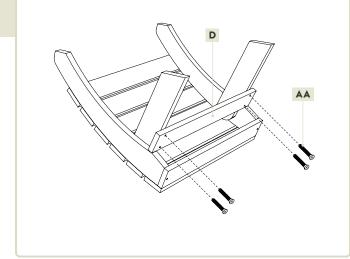

STEP 5

Ensure all screws are tight before using. Assembly complete.

