



ASSEMBLY INSTRUCTIONS

COUNTERTOP FRY CUTTER MOUNT


Tools Required

Screw Driver
(Not Included)


Parts

- (A) Base
- (B) Back Plate
- (C) (4) Suction Cups
- (D) (10) Bolts


(A)

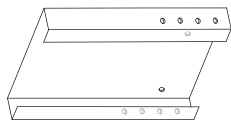

(B)

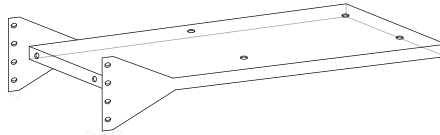


(C)

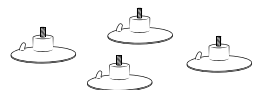

(D)




STEP 1

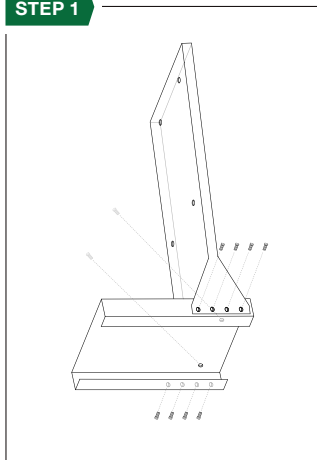


Secure the back plate to the base using the included bolts.

STEP 2

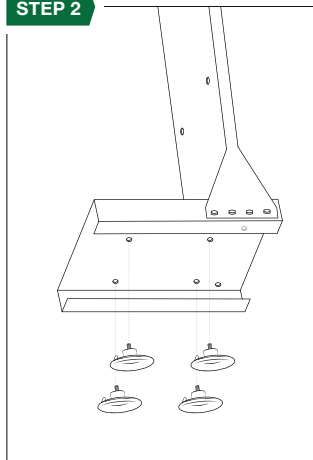


Screw the four suction cup feet into the bottom of the base.

STEP 3

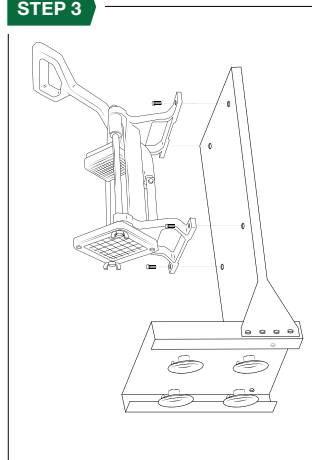

Mount your fry cutter to the countertop mount by screwing it into the back plate.

STEP 4

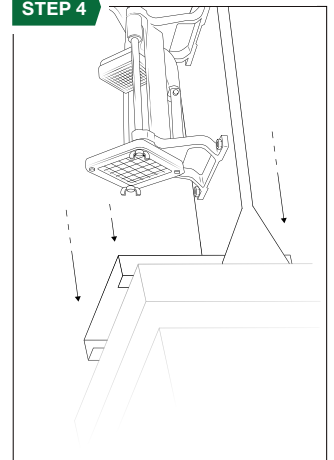

Place unit on countertop and apply force to activate suction cup feet.

Assembly complete.