


#257HS1009

2-in-1 Convertible Hand Truck with Pneumatic Wheels


ASSEMBLY TIPS

- Read instructions thoroughly before proceeding.
- Tighten all parts by hand. Don't use power tool.
- For you safely, please do not overload.
- For pneumatic wheel: Please check air pressure in tires. Maintain (30) PSI.

PARTS LIST

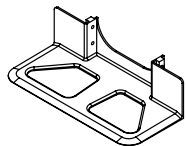

A Toe Plate (x1)

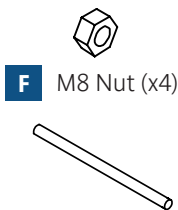


F M8 Nut (x4)


B Axle (x1)



C Wheel Bracket (x2)



G M6 x 45 Screw (x4)



D M8 x 60L Screw (x4)




H Pin (x2)



E Washer (x4)


STEP 1

- Assembling toe plate and bracket.
- Attach one of the wheel brackets and one side of the toe plate to the reinforcing support using the M8 x 60L screw and M8 nut as shown above. Wait to fully tighten until next step.

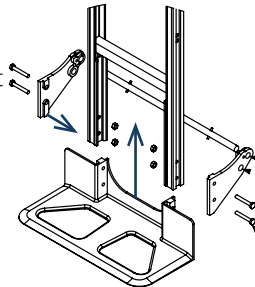


STEP 2

- Assembling Axle and second wheel of bracket.
- Repeat step 1 for the second wheel bracket, then insert the axle into the brackets. Fully tighten both brackets.

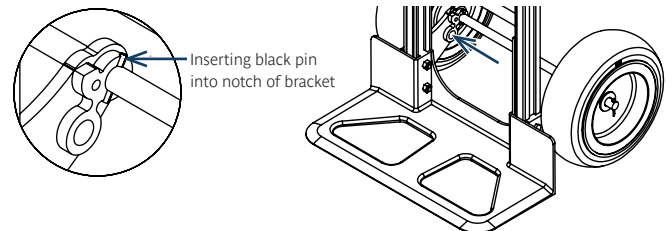

STEP 3

- Assembling the wheels.
- Place a washer over the axle, then the first wheel, followed by another washer as shown above. Insert the pin into the axle hole to secure the wheel in place. Repeat for second wheel.

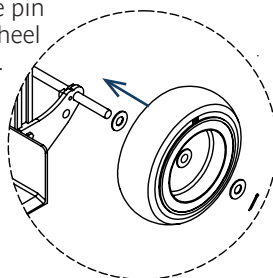

STEP 4

- Assembling the handle.
- Loosen the M6 x 45 screws on the handle, position the handle correctly, then lock into place by tightening the screws as shown above.

