


#257HS1018

2-in-1 Convertible Hand Truck


ASSEMBLY TIPS

- Read instructions thoroughly before proceeding.
- Tighten all parts by hand. Don't use power tool.
- For you safely, please do not overload.
- For pneumatic wheel: Please check air pressure in tires. Maintain (30) PSI.

PARTS LIST

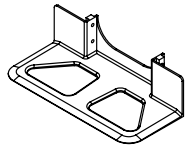


A Toe Plate (x1)

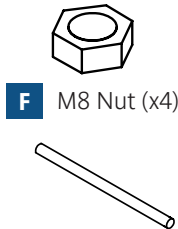


F M8 Nut (x4)


B Axle (x1)

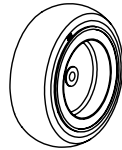

C Wheel Bracket (x2)

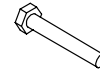

G M6 x 45 Screw (x4)

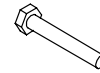

D M8 x 60L Screw (x4)




H Pin (x2)



E Washer (x4)


STEP 1

Attach one of the wheel brackets and one side of the toe plate to the reinforcing support using the M8 x 60L screw and M8 nut as shown above. Wait to fully tighten until next step.

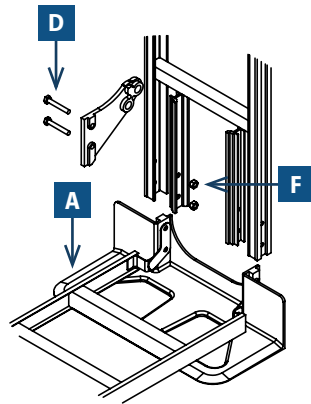


STEP 2

Repeat step 1 for the second wheel bracket, then insert the axle into the brackets. Fully tighten both brackets.

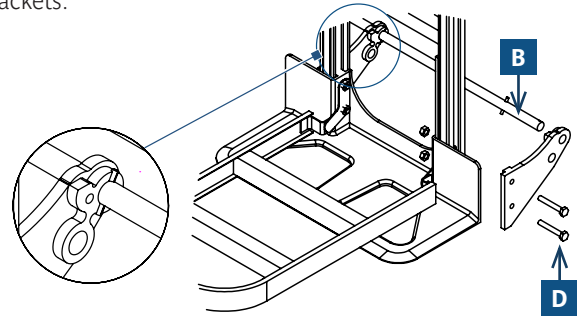

STEP 3

Place a washer over the axle, then the first wheel, followed by another washer as shown above. Insert the pin into the axle hole to secure the wheel in place. Repeat for second wheel.

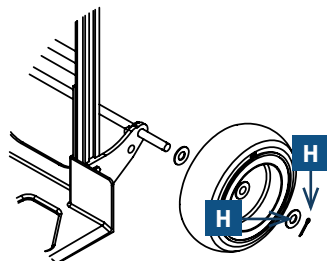

STEP 4

Insert the handle, then lock the screw.

