

Instruction Sheet for the fitting of Double Stacking Kit 240533 to H Series Holding Cabinets



SERVICE WORK ONLY TO BE CARRIED OUT BY QUALIFIED PERSONS

Suitable for the following models:

H8-FSUC / H10-FS Holding Cabinets



Packed By: -	
Initial	Date


Contents:

Double Stack Plate Front.
Double Stack Rear Strap.


Drain Plug 25.4mm.
Screw 8 x 3/8" Truss HD PHL NP.

Top Cabinet

1. Locate top Holding Cabinet and carefully lay it onto it's back to access underside of cabinet.
2. Remove Castors, Castor Spacers, Condensate Pan, Runners, Floor Drain and the Condensate Channel from the underside of the top cabinet. Retain all screws from Condensate Channel.

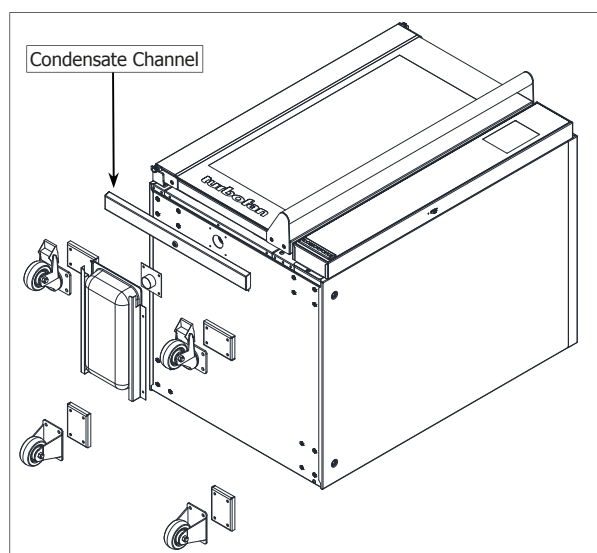


3. Fit the Front Double Stack Plate to the underside of the top cabinet where the Condensate Channel was removed from, using screws removed from condensate channel.

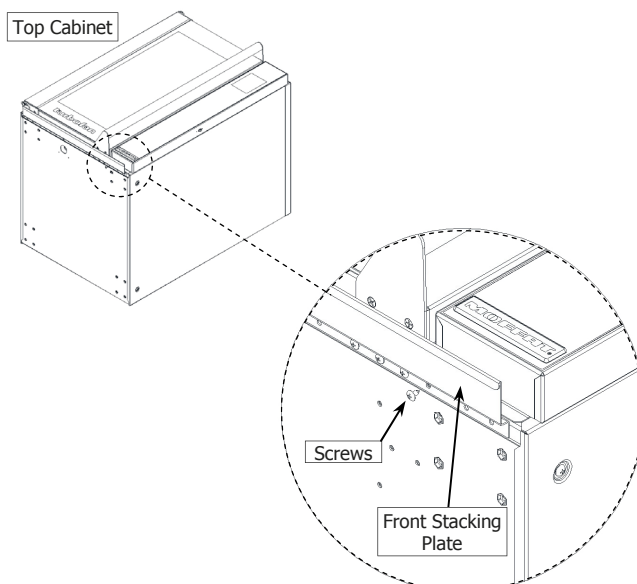


Bottom Cabinet

4. Remove 4 screws from the rear of the top cover on the bottom cabinet.

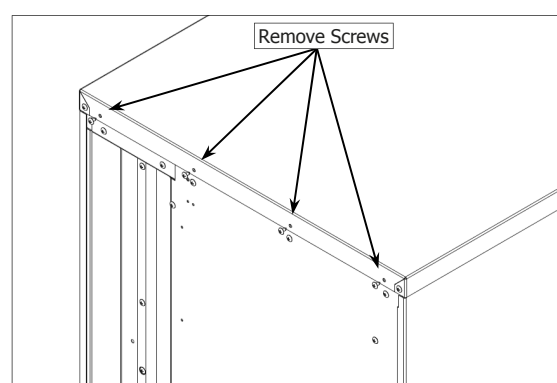


5. Fit the Rear Stacking Strap to the top cover of the bottom cabinet as shown, with 4 x screws removed above.

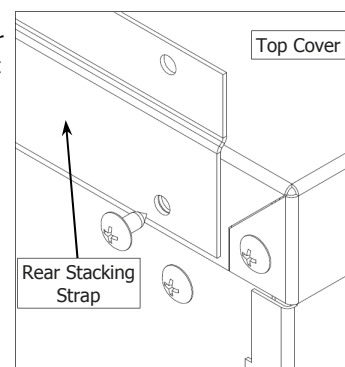


Instruction Sheet for the fitting of Double Stacking Kit 240533 to H Series Holding Cabinets

6. Carefully place the top cabinet on top of the bottom cabinet and align front and sides.

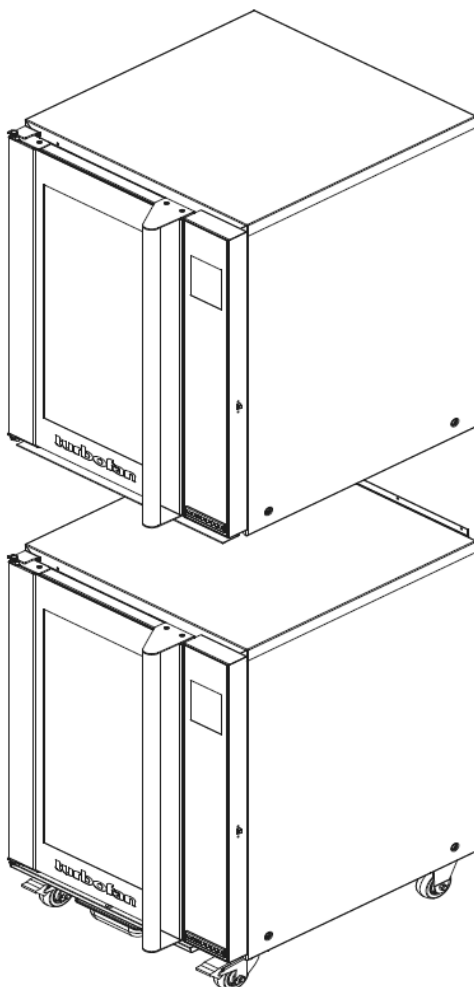

9. Once the cabinets are stacked, from inside the top cabinet, remove the floor Drain Cover from the floor of the Top Cabinet. This is a push fit.

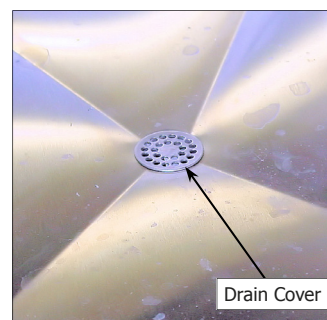

10. Apply a bead of silicone sealant around the shoulder of the Drain Plug supplied in the dDouble Stacking Kit and fit the Drain Plug to the Cabinet Drain. This is a push fit. Wipe off any excess sealant.



7. **For older Cabinets** - Using the 4 clearance holes in the top of the Rear Stacking Strap, drill 4 x 3.5mm holes into the base panel of the upper cabinet.

8. **For all Cabinets** - Secure the Rear Stacking Strap to the top cabinet with 4, 8 x 3/8" Screws supplied.

