

Components:**SC963603W****Panels:**(2) Floor Panels
(open hole sockets)(3) 1st, 2nd and 3rd Levels
(closed hole sockets)**Legs:**

(10) - 12"

(8) - 24"

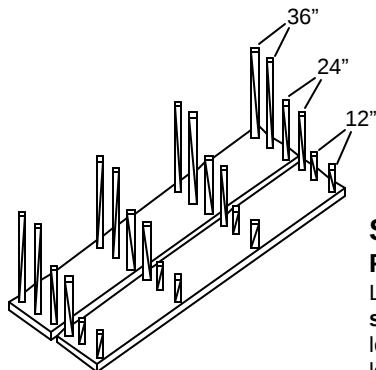
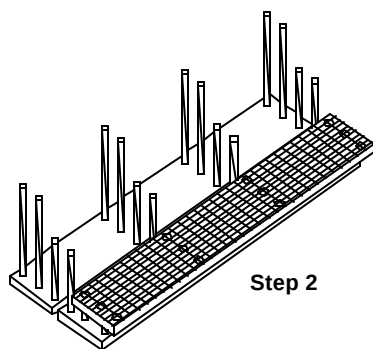
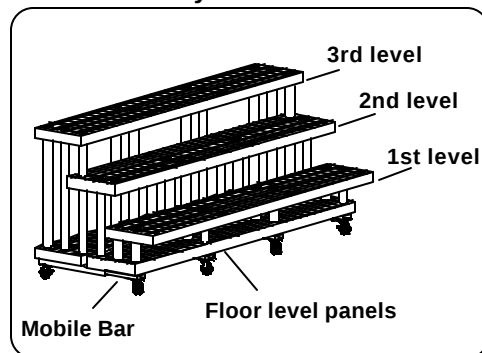
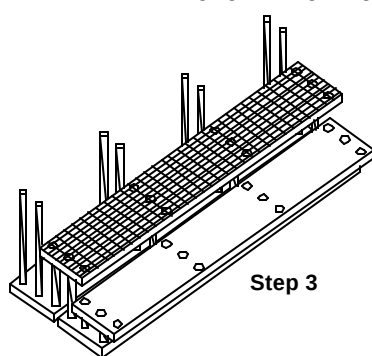
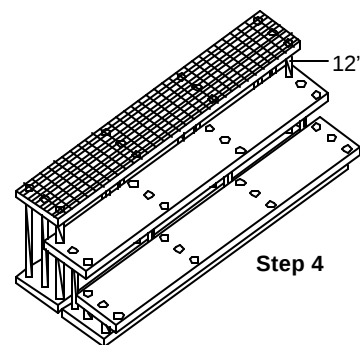
(8) - 36"

Accessories:

(4) - Mobile Bars

STEPMASTER™ ASSEMBLY INSTRUCTIONS**SC963603W****3 SHELF MOBILE WALL UNIT**

Oil all sockets before assembly

**Step 1****Floor level**Lay floor panels (**open hole sockets**) in position and place legs as shown. (Make sure legs go through to ground).**Fully Assembled****Step 2****Step 3****Step 2 and step 3**
1st level and 2nd levelPosition the 1st and 2nd level panels (**closed hole sockets**) overhanging outside edges as shown. Push down until leg rests on top of socket.**Step 4****Step 4**
3rd levelPosition the 3rd level panel overhanging outside edge as shown. Next place the (2) remaining **12"** legs in outside corners of panel. Push down until leg rests on top of socket.**Mobile Bar****Step 5**
Mobile Bar

Position fixture on its back side and insert the stems of the mobile bar inside the sockets as shown.

Brakes go to the front of the fixture.

