


# ***Single Section Knock Down Racks***

**ASSEMBLY  
INSTRUCTIONS**

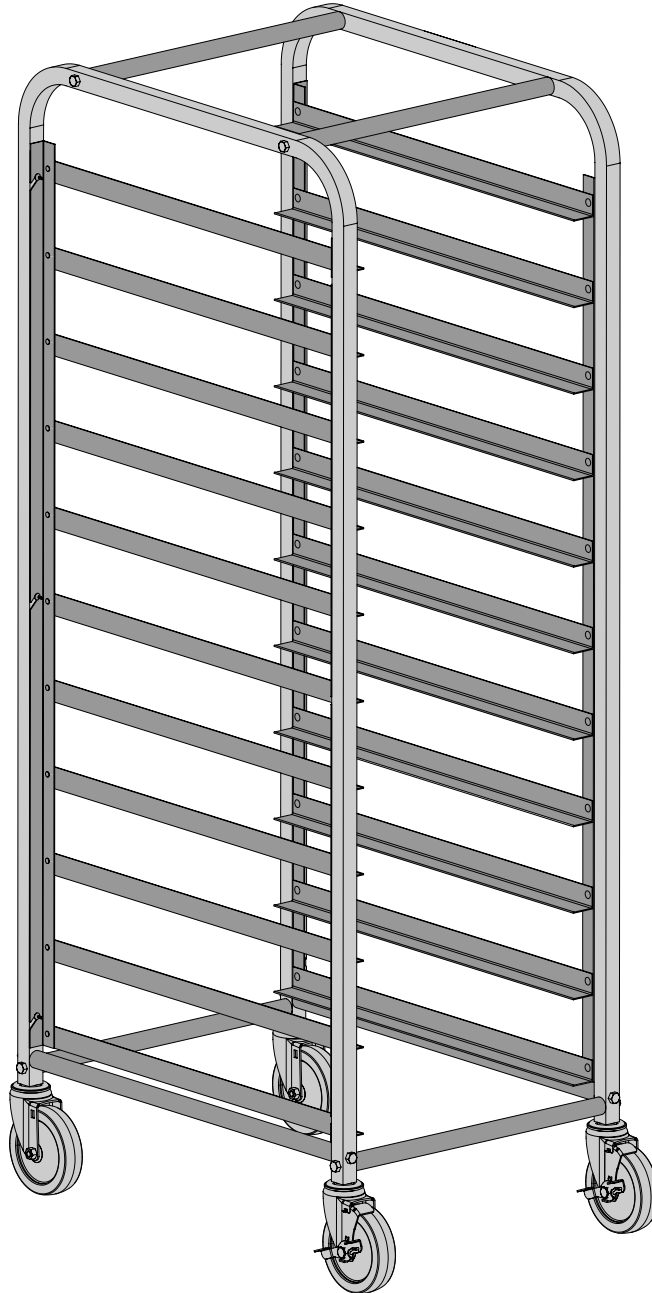

**RT115N, RT183N, RT1334N  
RT3318N, RT3511N, RT3634N**



**InterMetro Industries Corporation**  
North Washington Street, Wilkes-Barre, PA USA 18705  
For Product Information Call: 1-800-992-1776  
Visit Our Web Site: [www.metro.com](http://www.metro.com)

**ASSEMBLY  
INSTRUCTIONS**  
*For Single Section  
Knock Down Racks*


# Single Section Knock Down Racks

## ASSEMBLY INSTRUCTIONS FOR MODELS


**RT115N,  
RT183N,  
RT1334N,  
RT3318N,  
RT3511N,  
RT3634N**

Two People Required to  
Assemble Unit.


**1** Lay One End Slide  
Assembly on its Side

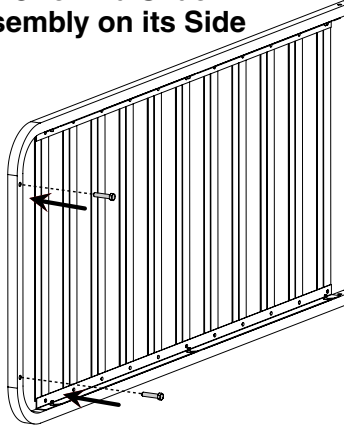


**2**

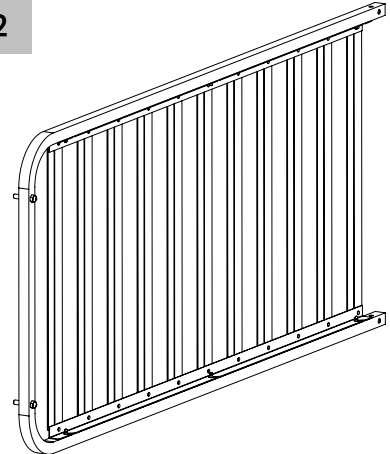


**3** Short Tie Bar

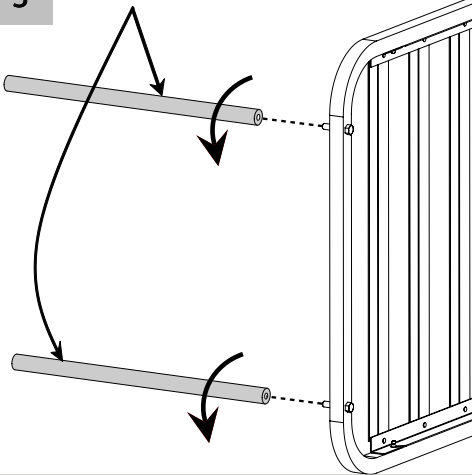


**4** Do Not Tighten  
the Fasteners  
Completely

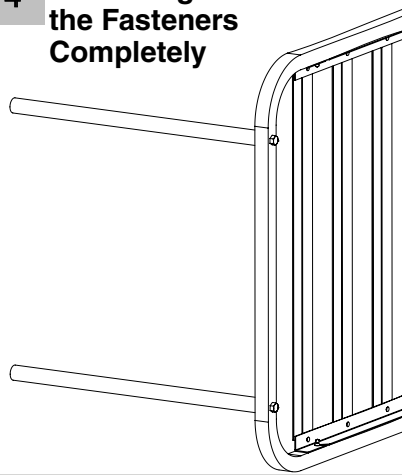


**5**

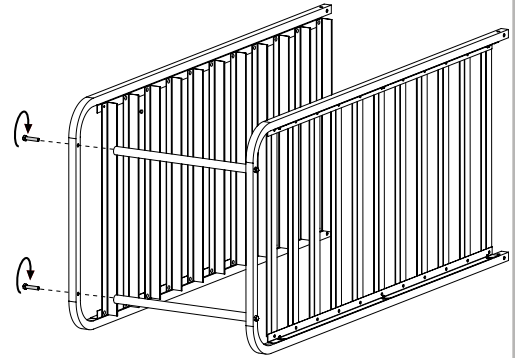


**6** Do Not Tighten  
the Fasteners  
Completely

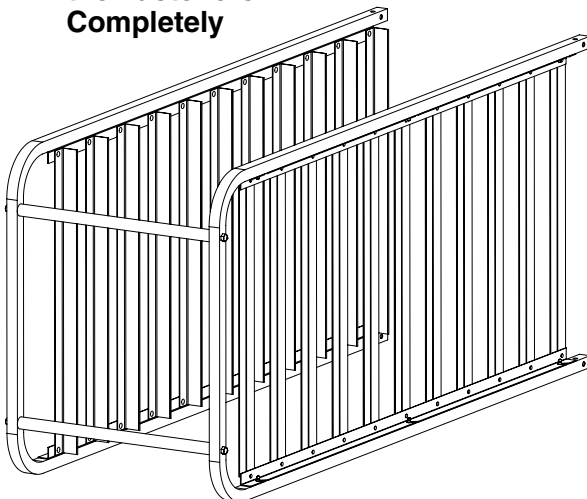


**7**

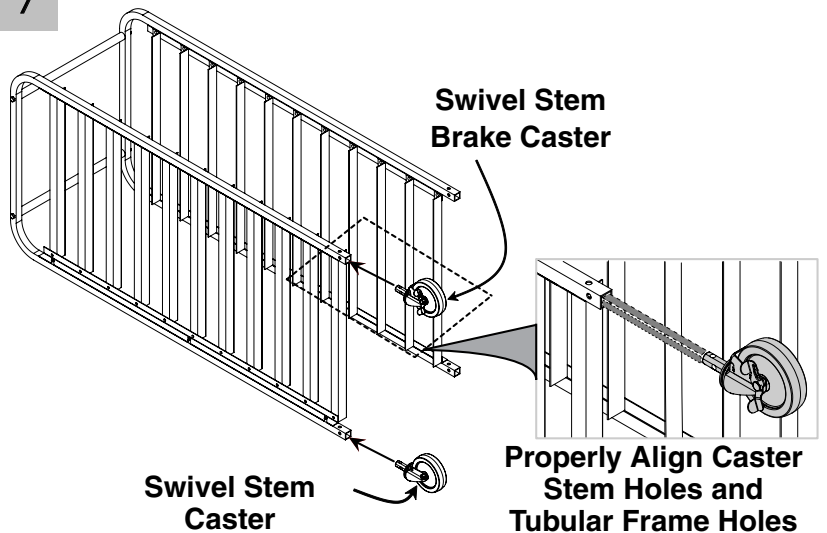


8

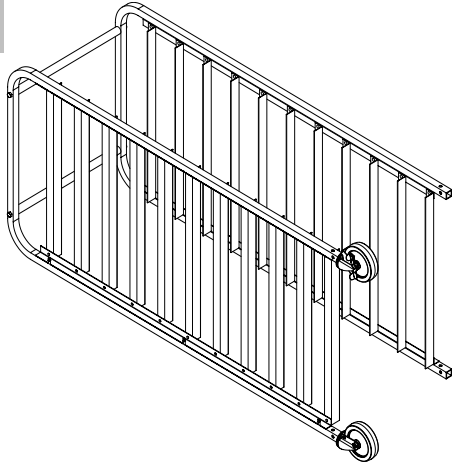


9

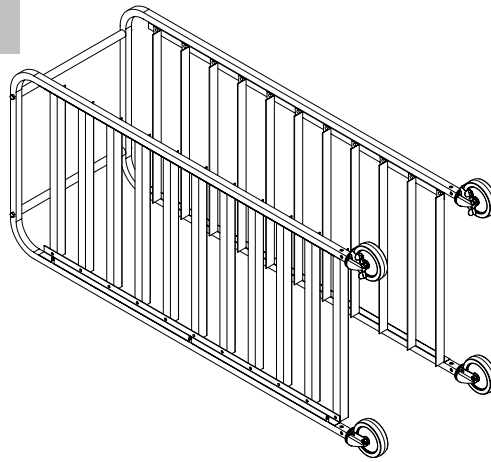


10

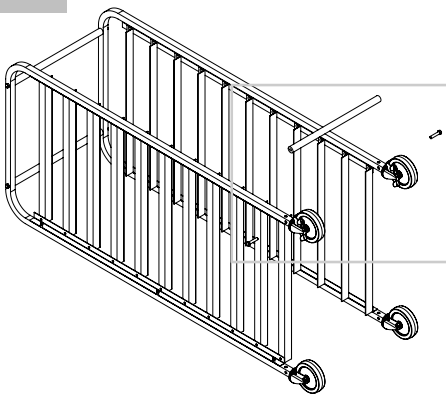

Short Tie Bar

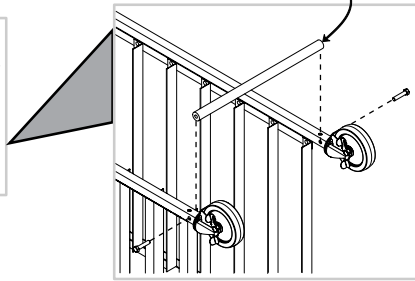


11

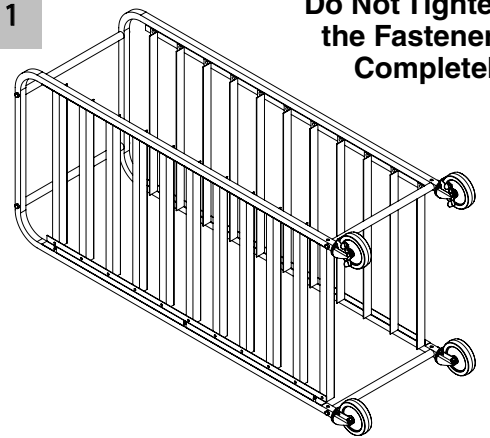


**Do Not Tighten  
the Fasteners  
Completely**

12


**Rotate the  
Unit 90°**

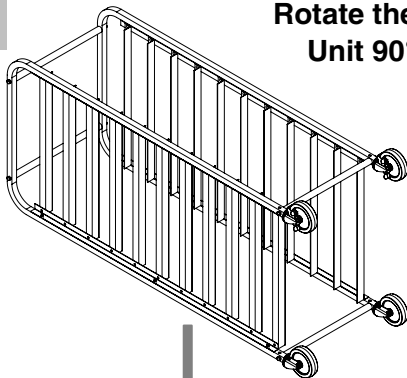

13

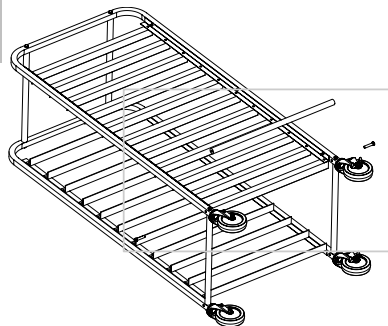


Long Tie Bar

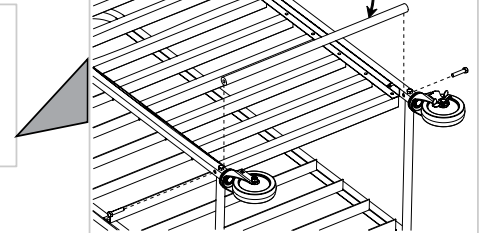


14

**Do Not Tighten  
the Fasteners  
Completely**

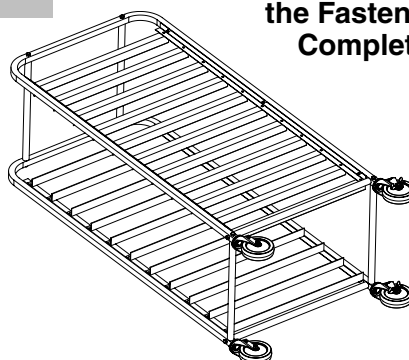


15

**Stand the  
Unit  
on its Caster**

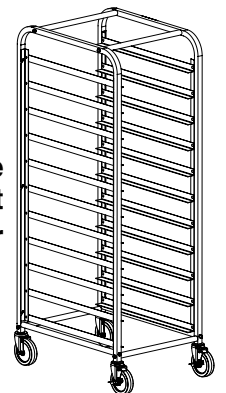


# Single Section Knock Down Racks

16

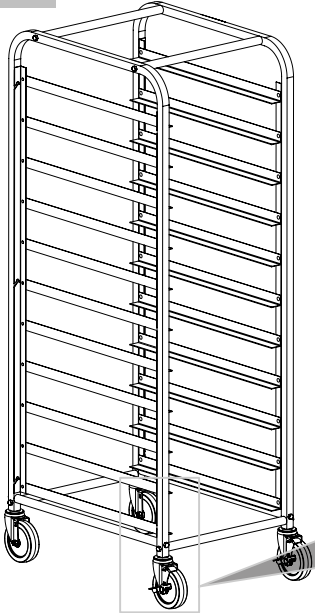

**Tighten All Fasteners  
Completely**

17

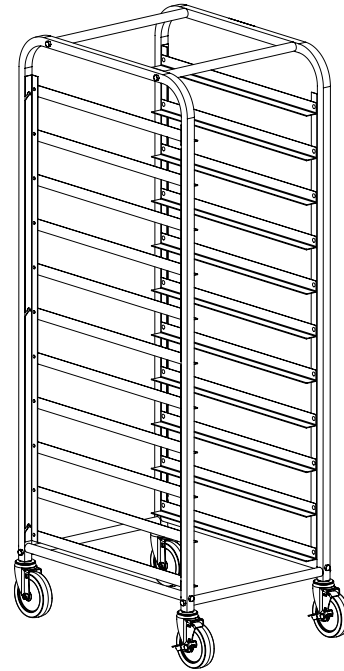

**THIS COMPLETES THE ASSEMBLY OF  
SINGLE SECTION KNOCK DOWN RACKS**



**InterMetro Industries Corporation**  
North Washington Street, Wilkes-Barre, PA USA 18705  
For Product Information Call: 1-800-992-1776  
Visit Our Web Site: [www.metro.com](http://www.metro.com)

L01-053  
Rev. A  
11/10

Information and specifications are subject to change  
without notice. Please confirm at time of order.