

Instructions

for the installation of tamperpoof exterior screws

Kit KTPS-SM fits all modular Prodigy except EH222 and C2648

Kit Contents:

Screw	Use	Used
5-16 x $\frac{3}{4}$ truss head machine	4	bin to unit fasteners
$\frac{1}{4}$ - 20 x $\frac{1}{2}$ pan head machine	4	drain fitting(s) attachment, receiver bracket
#8 x 1 $\frac{1}{4}$ pan head sheet metal	2	front panel attachment
8-32 x $\frac{1}{4}$ pan head machine	2	water regulating valve attachment
#8 x $\frac{3}{8}$ sheet metal screws	34	back panel, ac condenser & electrical cover attachment
#8 x $\frac{1}{2}$ flat head sheet metal	12	back panel of 2 plate models and air filters
#10 x $\frac{5}{8}$ pan head sheet metal	2	back panel
10-24 x $\frac{1}{2}$ machine	1	back panel of 22 and 30 inch, points down
small tool bit	1	
medium tool bit	1	
large tool bit	1	

Note: Must be done before installation.

Prodigy Instructions:

1. Check kit contents, do not begin unless all parts & tools are available.
2. Remove all panels.
3. Use the enclosed tools to replace all exterior screws with screws from the kit.
4. Air cooled models: Drill $\frac{1}{8}$ " dia. hole in air filter handle and into the underlying sheet metal. Use one #8 screw per filter to secure the filter to the panel.

Keep the enclosed tools for future service.

Instructions

for the installation of tamperproof exterior screws

Kit KTPS-BIN fits BH360, BH550, BH800, BH900, HTB250, HTB350, HBT555

Kit Contents:

Screw	Qty in kit	BH360 uses	BH550/800 uses	BH900 uses	HTB250/350 uses	HTB555 uses	Used for
#10 x 3/8 pan head sheet metal	3		3				door frame
#8 x 3/4 pan head sheet metal	3			3			door frame
5-16 x 3/4 truss head machine	5			5		3	baffle screws
10-24 x 1/2 pan head machine	5	4	5		3		baffle & drain screws
10-24 x 1/4 pan head machine	4			4			door to hinge
#8 x 1 1/4 flat head sheet metal	4		4				hinge to bin
8-32 x 1/4 flat head machine	4		4				bin door to hinge
#8 x 1 sheet metal screws	4				2	4	canopy to bin
10-24 x 3/8 pan head machine	3		3				door frame
#6 x 3/4 pan head sheet metal	4				4		hinge to bin
#10 x 1/2 pan head sheet metal		8					door frame and canopy
#10 x 3/4 pan head sheet metal		2					mounting brackets
10-32 x 3/8 pan head machine		4					door hinges
small tool bit	1						
medium tool bit	1						
large tool bit	1						

Note: Must be done before installation.

1. Check kit contents, do not begin unless all parts & tools are available.
2. Use the enclosed tools to replace all exterior screws with screws from the kit. Keep the enclosed tools for future service.

Instructions

for the installation of tamperpoof exterior screws

Kit KTPS-LG fits the CME1356, CME1656, CME1856 and CME2006 (C1)

or

Prodigy C1448, C1448, or C2148 (C2)

Kit Contents:

Screw	Qty in kit for C1	Qty in kit for C2	Used for
¼ -20 x ½ pan head machine	6	6	drain castings, receiver top bracket
5-16 x ¾ truss head machine	4	4	machine to bin attachment
#8 x 3/8 pan head sheet metal	21	30 or 34	back panel and/or condenser support and air filter
#8 x 1 ¼ truss head sheet metal	2	2	front panel
8-32 x ¼ pan head machine	6	2	water reg valve (2)
#8 x 1 ¼ pan head sheet metal	3		back panel
#10 x 5/8 pan head sheet metal		2	back panel
#5/16 x 1.2 pan head sheet metal		1	back panel
#8 x 1/2 flat head sheet metal		12	back panel
small tool bit	1	1	
large tool bit	1	1	

Note: Must be done before installation.

1. Check kit contents, do not begin unless all parts & tools are available.
2. Use the enclosed tools to replace all exterior screws with screws from the kit. Keep the enclosed tools for future service.

Prodigy Models: Air cooled models: Drill 1/8" dia. hole in air filter handle and into the underlying sheet metal. Use one #8 screw per filter to secure the filter to the panel.

Instructions

for the installation of tamperpoof exterior screws

Kit KTPS-MDT fits MDT5 only

Kit Contents:

Screw	Qty in kit	Used for
#8 x 1 ¼ flat head sheet metal	4	NDE front panels only
#6 - 32 x ½ pan head machine	2	attachment of splash panel
ss washers	2	attachment of splash panel
¼ - 20 x ½ pan head machine	6	drain fittings
#8 x 3/8 pan head sheet metal	46	side and back panels, water line bracket, electrical box cover
#8 x 1 ½ flat head sheet metal	4	top panel
#8 x 5/8 flat head sheet metal	8	louvered panels
small tool bit	1	
large tool bit	1	

Note: Must be done before installation.

1. Check kit contents, do not begin unless all parts & tools are available.
2. Remove top, front, splash and louvered access panels.
3. Remove strikes from splash panel.
4. Place splash panel onto dispenser, secure at top with two #8 screws.
5. Place washer on phillips head screw and drive screw through catch and into front panel. Access is from openings where louvered panels were. Repeat for both screws. Note: Left side screw on air cooled model may require using screwdriver bit and a wrench or a magnet-tipped screwdriver.
6. Use the enclosed tools to replace all exterior screws with screws from the kit. When replacing screws in the back, replace one at a time to keep interior brackets from falling into unit.

Keep the enclosed tools for future service.

Instructions

FOR INSTALLATION OF KTPS BAFFLE

The kit's baffle has holes on one edge to use as a template and inserts on the other to use for fastening.

1. Remove and discard plastic baffle.
2. Locate the edge of the baffle with the holes only.
3. Place that edge of the baffle onto the front of the canopy. Use the open holes in the baffle as a template to mark the drilling locations on the bin canopy. See figure 1.
4. Drill 3/8" holes in the canopy at the marked locations.

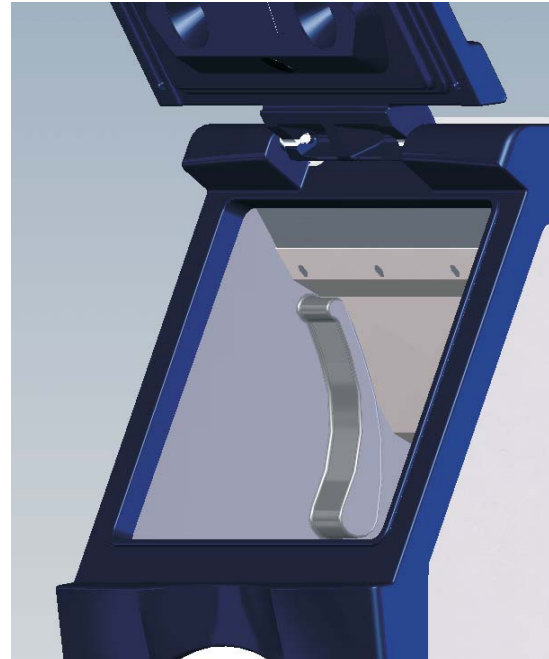


Figure 1

5. Reverse the baffle top-to-bottom and place it (see figure 2) so that the inserts in the baffle are behind the canopy.
6. Attach the baffle to the canopy using the 5/16 tamperproof screws provided.
7. Replace any exterior screws found with tamperproof screws from the kit. They will be behind and under the bin.

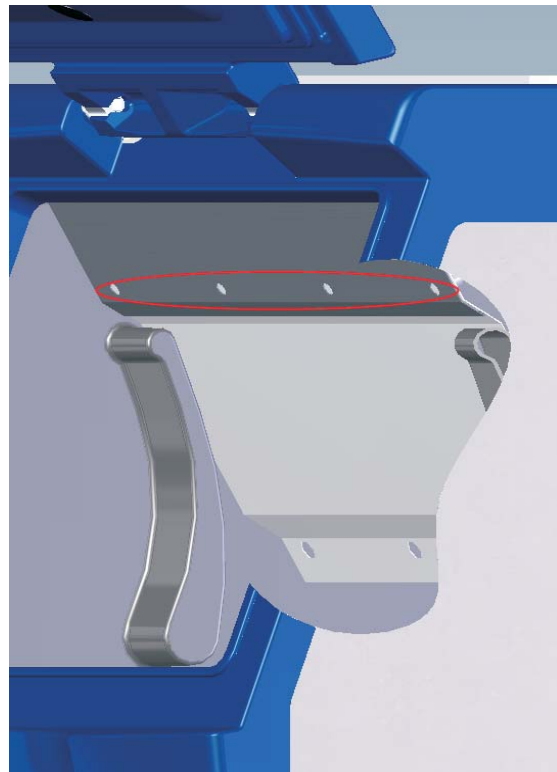


Figure 2