


LLMC20 Modular Charging Cabinet


Assembly Instructions

Tools Required:
Phillips Head Screwdriver




Parts Key

A x1

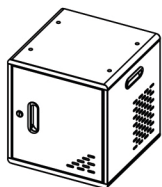

Charging Cabinet

B x1

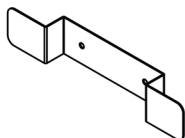

Cord Wrap

C x2





Bolt,
Phillips Head

D x4




Thumbscrew



- 1** Position cord wrap on the rear of the cabinet, over the corresponding threaded mount holes.

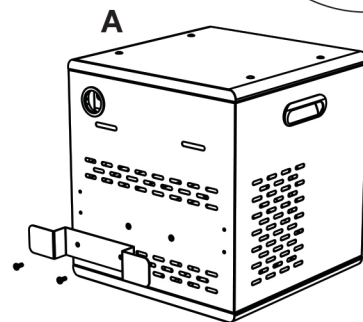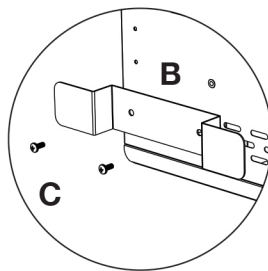



- 2** Insert each bolt into a lock washer, then a flat washer, then use to attach the casters to the Dolly.

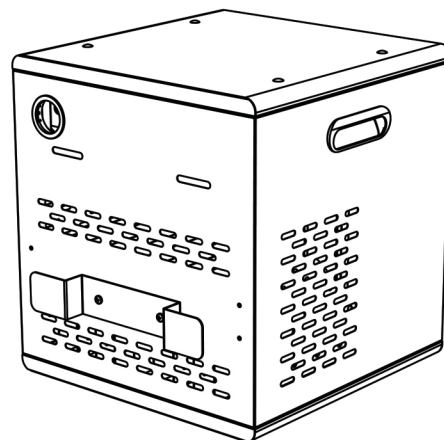


- 3** Remove the drawer from the bottom/lower cabinet by pressing the release lever on each side of the drawer track.

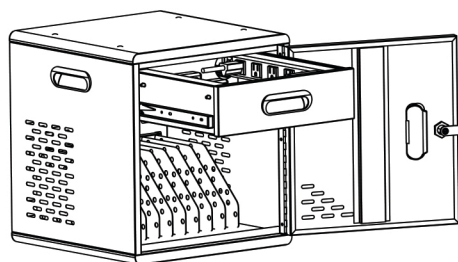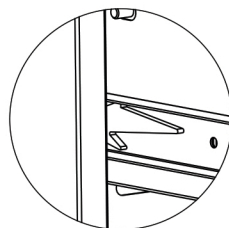


- 4** Remove the rubber caps from the top of the cabinet.

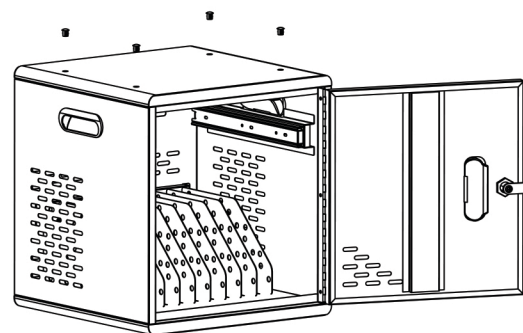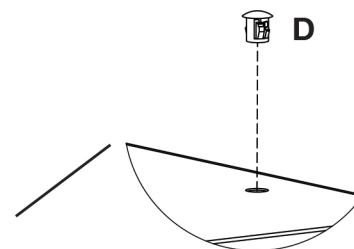

- 5** Position a second cabinet on top, aligning the threaded mount holes.

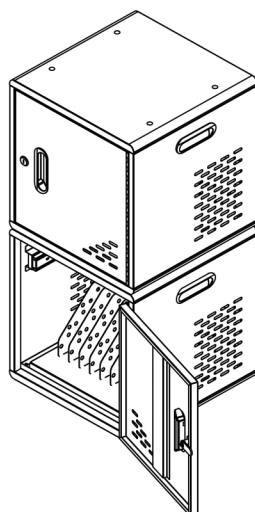

- 6** Using the thumbscrews attach the lower Cabinet to the upper Cabinet.

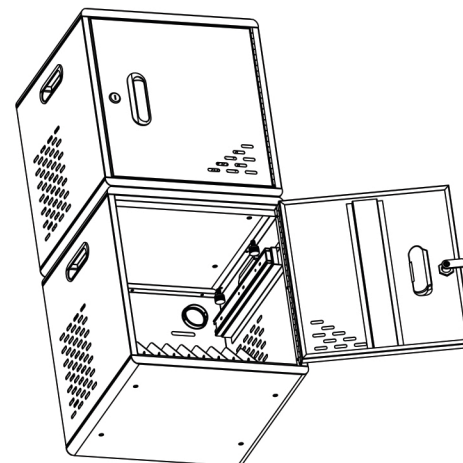


LLMCSP Modular Charging Cabinet - Single Dolly Assembly Instructions

Tools Required:
Phillips Head
Screwdriver



Parts Key

A x2

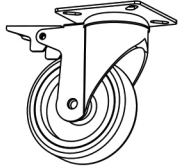

Caster, Locking

B x2



Caster, Non-Locking

C x16



Bolt, Phillips Head

D x16



Lock Washer

E x16



Flat Washer


F x4



Thumbscrew


- 1** Flip the Dolly over and position the casters over the corresponding threaded mount holes.

IMPORTANT: Position the locking casters on the end next to the power strip.

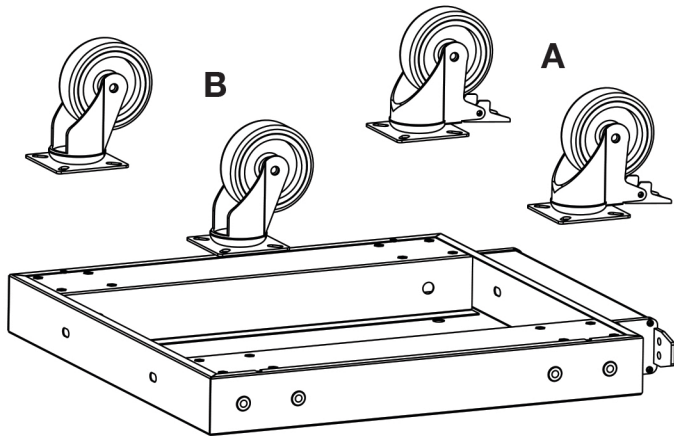

- 2** Insert each bolt into a lock washer, then a flat washer, then use to attach the casters to the Dolly.

C
D
E

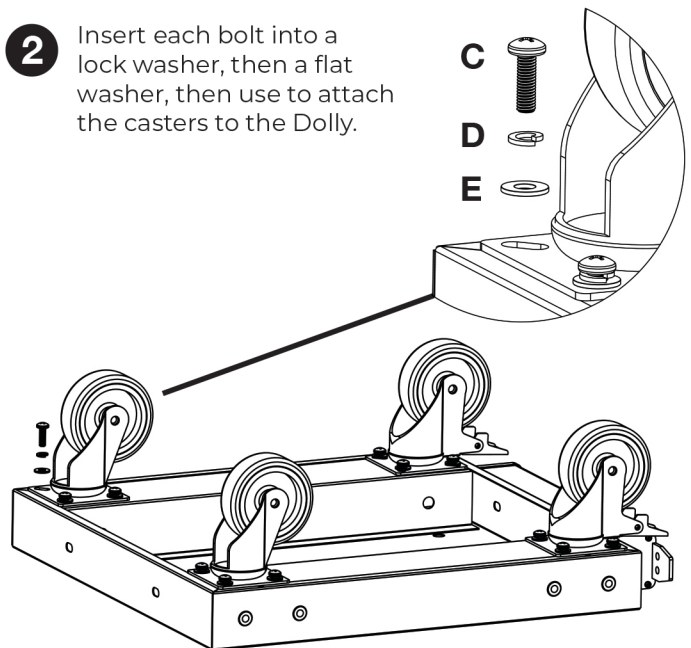

- 3** Using the thumbscrews, attach the Modular Charging Cabinet.

IMPORTANT: Position the Charging Cabinet so the cabinet door faces perpendicular to the edge of the Dolly with the power strip.

