

# TRESTLE BASE ASSEMBLY INSTRUCTIONS

## IMPORTANT

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE


### CONTENTS


Description	Quantity
(A) Leg	4
(B) Iron Side Bottom Brace	2
(C) Iron Side Top Brace	2
(D) Connector Bar	1
(E) Brace Support	2
(F) Table Top (if included)	1

### TOOLS

Description	Quantity
Allen Wrench	2
Phillips Head Screwdriver	<i>not included</i>
Drill	<i>not included</i>

### HARDWARE

 <p>① Adjustable Footpad 4 pcs</p>	 <p>② Round Cap Wire 44 pcs</p>	 <p>③ Button Nut Screw 8 pcs</p>
 <p>④ Combined Screw 2 pcs</p>	 <p>⑤ Button Nut Screw Cap 8 pcs</p>	 <p>⑥ Flat Washer Locking Washer 4 pcs</p>

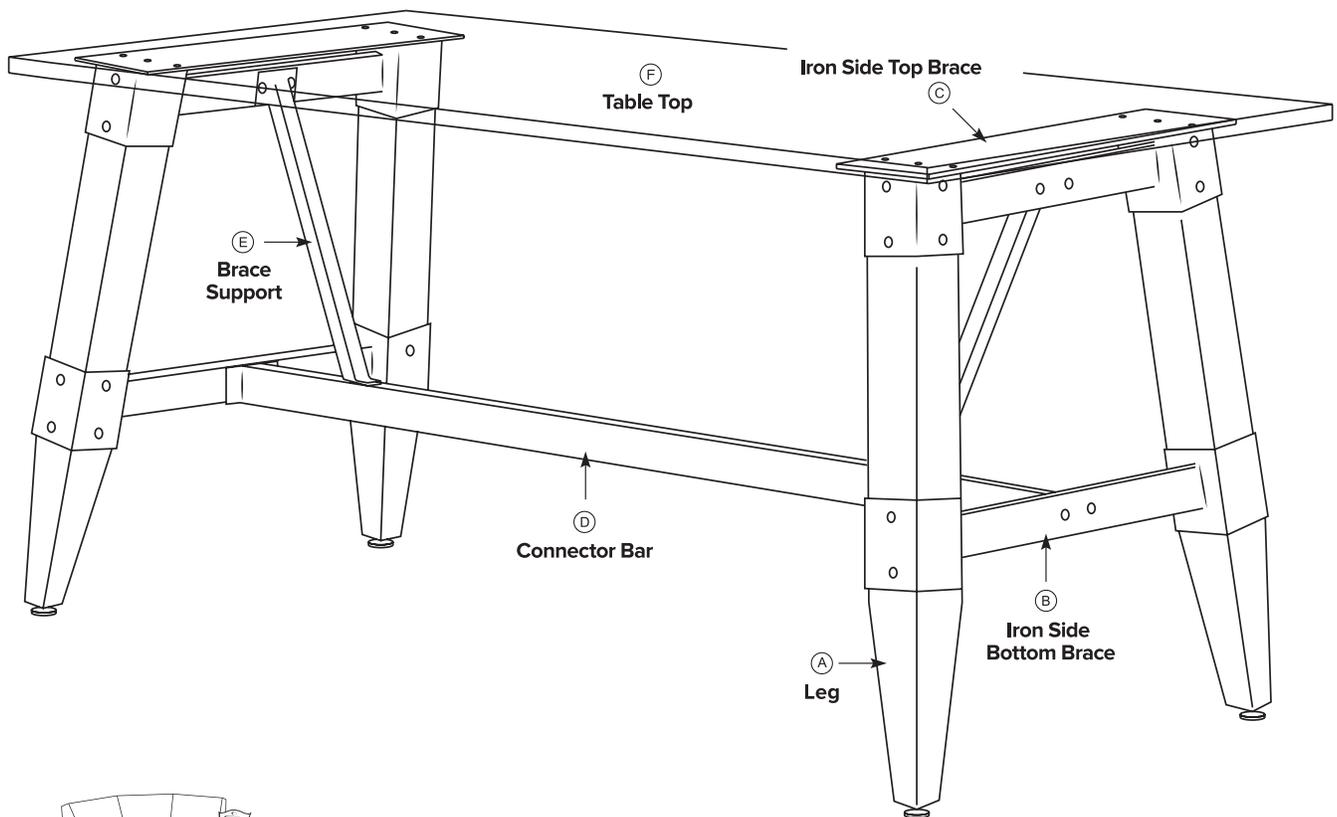


**LANCASTER**  
TABLE & SEATING

2205 OLD PHILADELPHIA PIKE • LANCASTER, PA 17602  
1-800-942-0412 • WWW.LANCASTERTABLEANDSEATING.COM

**1**


Gather Iron Side Top Braces (Part C) and Brace Supports (Part E) , 2 pieces each.

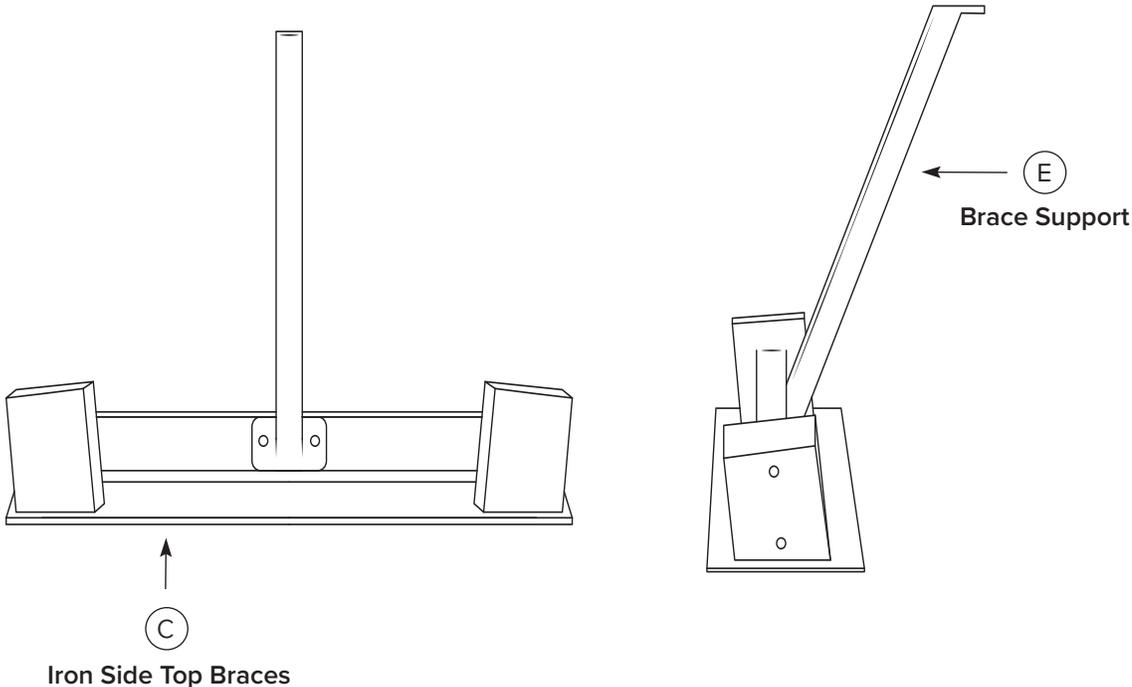

**2**

Secure both parts at pre-drilled holes using 2ea Button nut Screw Cap, ⑤ from the Brace Support (Part E), and 2ea Button nut ③ from the opposite side. Secure Button nut into Button nut Screw Cap using both Allen Wrenches simultaneously. Repeat for second pair.


*For this step you will need:*  
x4 Button nut  
x4 Button nut Screw Cap  
x2 Allen Wrenches

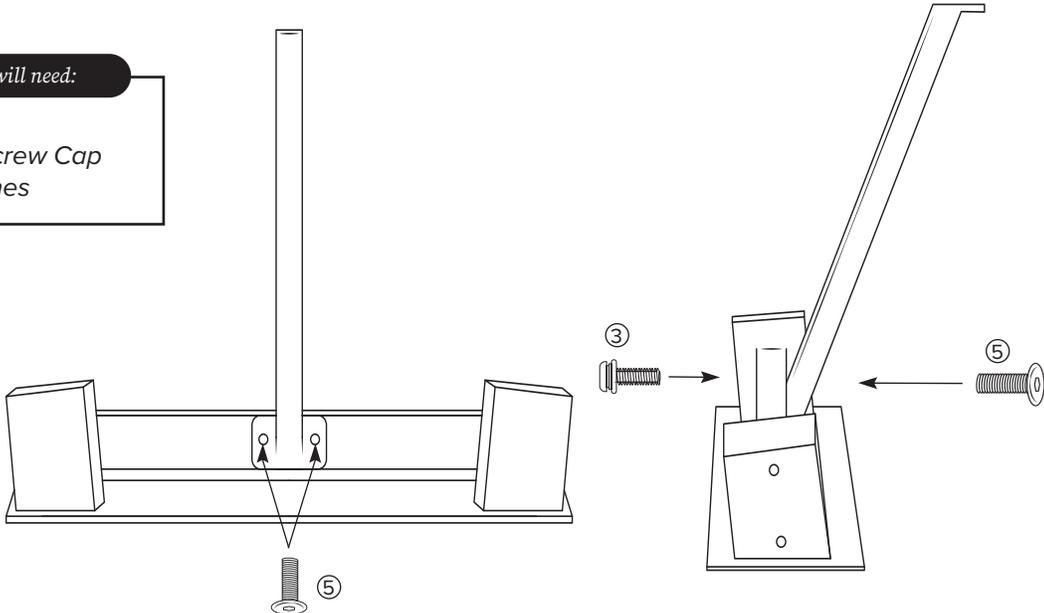

- 3** Take Connector Bar (Part D) to secure to Brace Supports (Part E).



- 4** Secure them by using Combined Screw and 1 Flat Washer and 1 Locking Washer ④ from Brace Support (Part E) side. Repeat on opposite side.

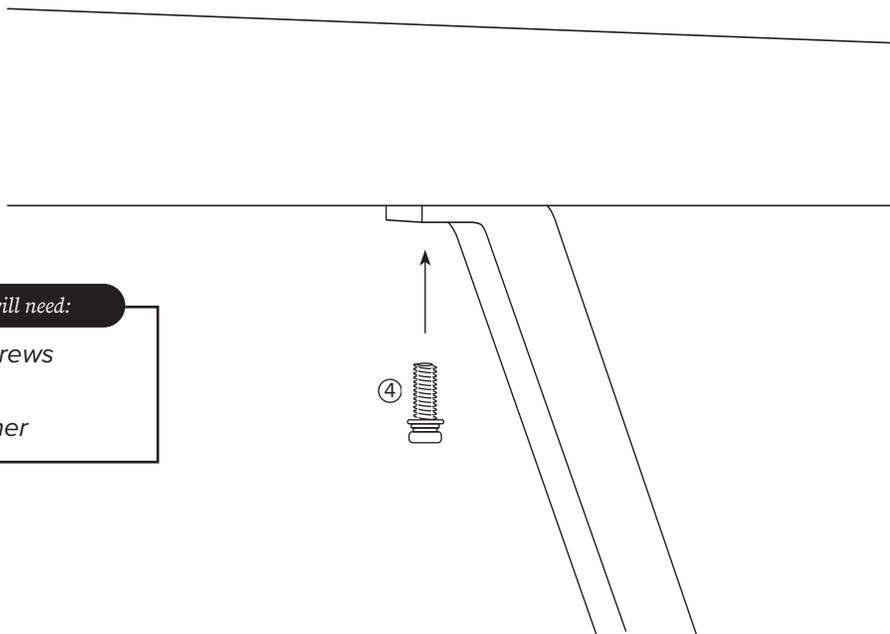


*For this step you will need:*


x2 Combined Screws  
x2 Flat Washer  
x2 Locking Washer

**5** Place Table Legs (Part A) into the Iron Side Top Braces (Part C), ensure the foot end of each leg is level.

**6** Place Iron Side Bottom Brace (Part B) down the Table Legs to meet Connector Bar (Part D) at the pre-drilled holes.

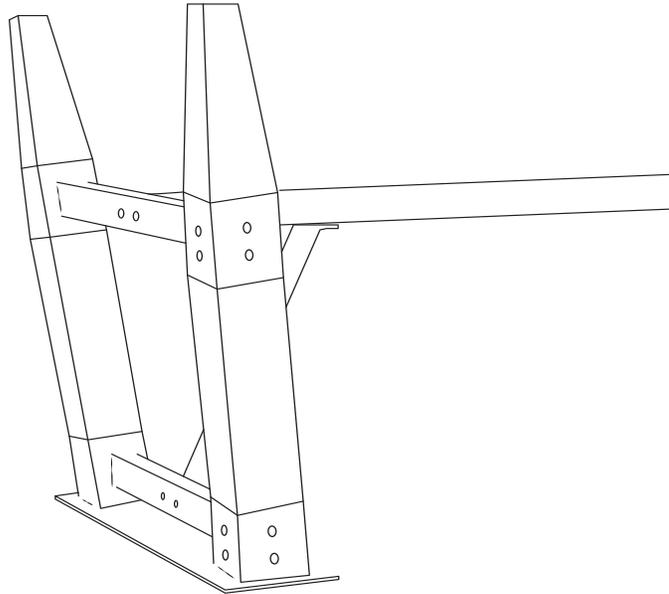

**7** Secure Iron Side Bottom Braces (Part B) to Connector Bar (Part D) using Button Nut ③ from the outside and Button nut screw cap ⑤ from the opposite side using both Allen Wrenches simultaneously. Repeat for other side.

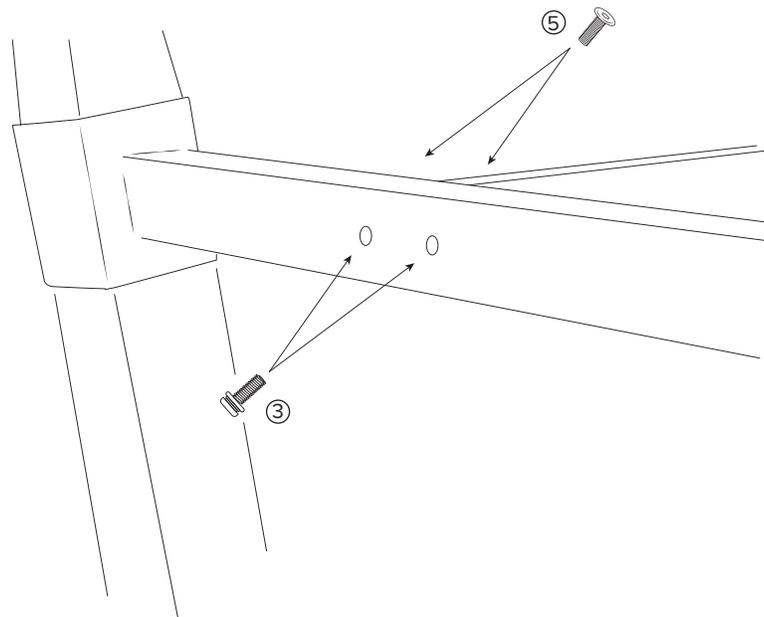


*For this step you will need:*

x4 Button nut  
x4 Button nut Screw Cap  
x2 Allen Wrenches

- 8** Secure Iron Side Bottom Brace (Part B) to Table Legs (Part A) by using Round Cap Wire Screws ② at the pre-drilled holes. If using a drill, you can drill pilot holes through all the predrilled holes on the Bottom Brace (Part B) and then Part C.

*For this step you will need:*


**x16 Round Wire Cap Screws**  
(4 on each leg)

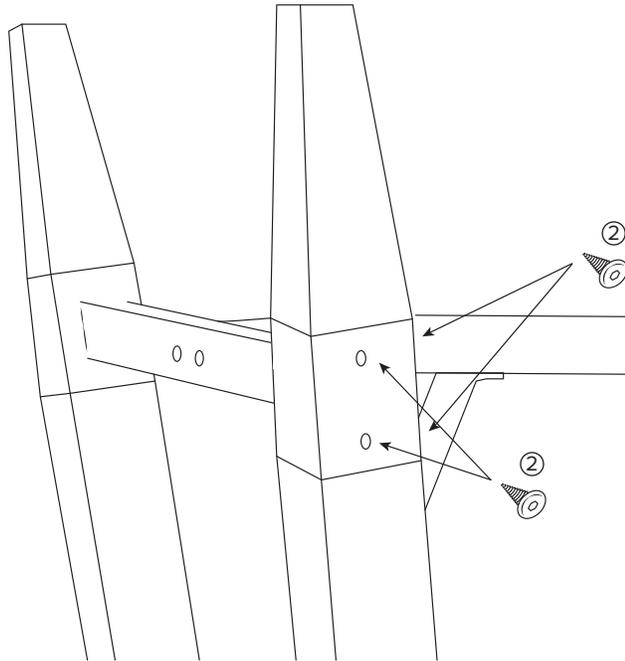

- 9** Then use Round cap Wire Screws ② to secure Iron Side Top Brace (Part C) from the sides.

*For this step you will need:*


**x16 Round Wire Cap Screws**  
(4 on each leg)

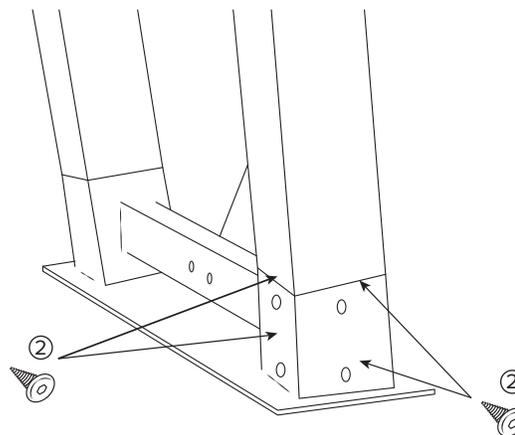

**10** Place and secure Adjustable Footpad ① to bottom of the Table Base Legs (Part A).

*For this step you will need:*


x4 Footpads

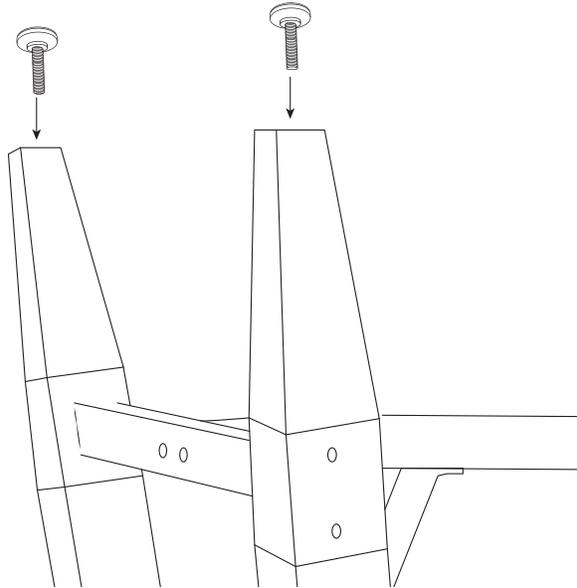

**11** Next, turn base right side up. Secure legs to Iron Side Top Brace (Part C) using Round Cap Wire Screws ②.

*For this step you will need:*

x4 Round Wire Cap Screws

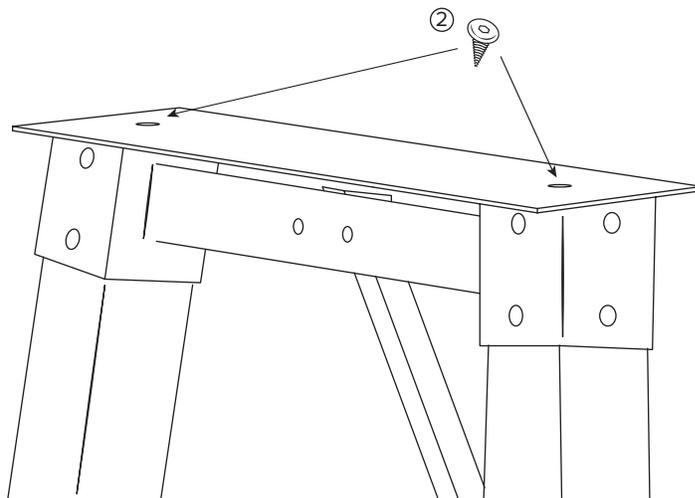

**12**

Place Table Top on top of Iron Side Top Braces (Part C).



**13**

Secure by using Round Cap Wire Screws ② from underneath the top.

*For this step you will need:*

*x8 Round Cap Wire Screws*