

Mid-Century Bucket Seat

ASSEMBLY INSTRUCTIONS




LANCASTER™
TABLE & SEATING

PARTS LIST:

A Cushion



B Frame

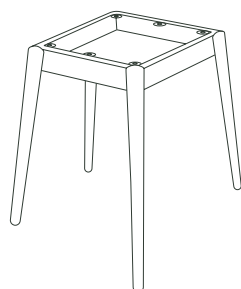

HARDWARE:

C (6) Bolts



(6) Flat Washers



(1) Allen Key




NOTES:

- Inspect all pieces for damage before assembly. Do not assemble if any pieces are broken or damaged. Ensure you have all the required pieces before assembly.
- Power drill is optional for assembly.


STEP 1

Position the cushion with its underside facing upward on a flat, stable surface, with the back of the cushion off of the table.

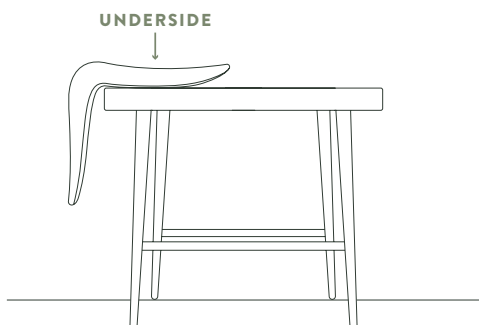


STEP 2

Align the frame with the cushion, matching the frame's holes with the predrilled holes located on the bottom of the cushion.

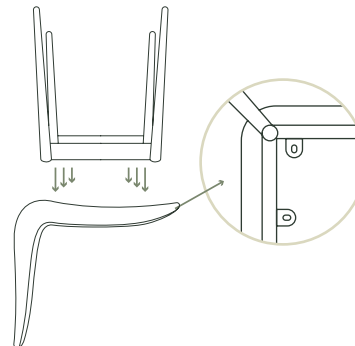

STEP 3

Insert a flat washer and bolt into each predrilled hole. Use the provided allen key or a power drill (not included) to secure each bolt. Verify that all washers and bolts are fully tightened.

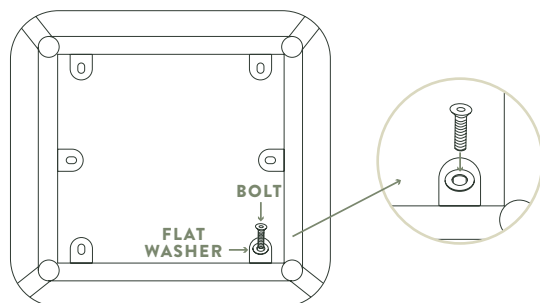

STEP 4

Carefully stand the assembled chair to an upright position and ensure the chair is level and stable.

