

SLT Series

Science Lab Table

Assembly Instructions

The SLT Series has been designed with the capability to be used both with our standard book compartments or if desired with a non-book compartment style.

To assemble the table using the standard book compartment style follow instructions #1.

To assemble the table using the non-book compartment style follow instructions #2.

Instructions #1

(for standard assembly)

Tools Required

WRENCH



Step 1: Place the tabletop upsidedown on the floor with apron side up.

Note: Floor should be clear of any objects or dirt in order not to damage the tabletop

Step 2: Remove plastic cover on bolt and place leg in position with legs bolts going throught the corner brace.

Step 3: Place a washer, lock washer and nut onto each bolt and tighten using the provided wrench. (tighten well)

Step 4: Slide a leg boot onto each leg assuring that the wider side is facing the bottom of the leg.

Step 5: Screw a glide into the bottom of each leg.

Step 6: Turn the table over with the tabletop facing up. Place the table in desired location. Adjust the glides to assure the table is stable.


Step 7: Slide down Protecting Boots to cover the adjusted glides.

Instructions #2

(for non-book compartment assembly)

Tools Required

Philips Screw Driver



Step 1: Place the tabletop upside-down on the floor with apron side up.

Note: Floor should be clear of any objects or dirt in order not to damage the tabletop

Step 2: Removing Book Compartments

Step 2: Remove the (12) screws that secure the book-compartments to the tabletop (see figure 2).

Once screws are out, remove the two book compartments from the tabletop.

Step 2A: First remove the (3) screws that secure the front apron panel to the tabletop (see figure 2A)

then remove the (6) screws that secure the front apron to the corner brackets and remove the panel from the table.

Step 3: Replacing Front Apron Panel

Step 3: Insert the groves on the apron panel marked NBC into the two steel corner braces where the book compartment apron panel was located.

Step 3A: Secure apron panel marked NBC into the two steel corner braces using the (9) screws that where used for book compartment apron .

Follow Steps 2-7 in Instructions #1 to complete assembly.

**National Public
SEATING Corp.**

149 ENTIN ROAD, CLIFTON, NJ 07014
TEL 973-594-1100 | FAX 973-594-1500
e-mail: info@NationalPublicSeating.com

FIGURE 2


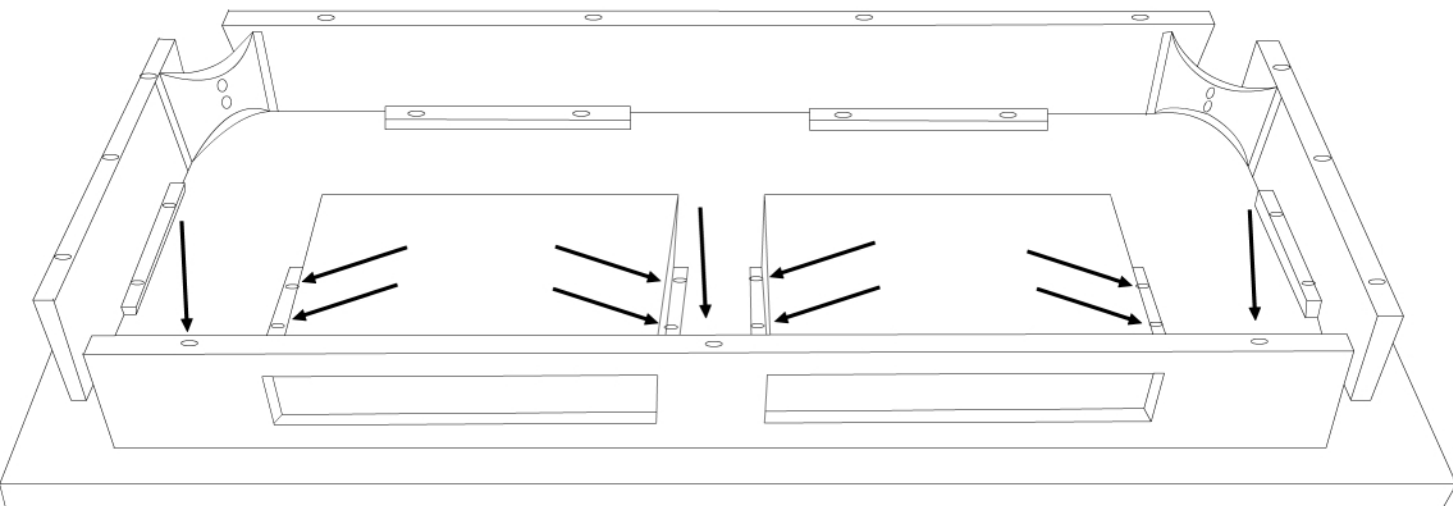


FIGURE 2A

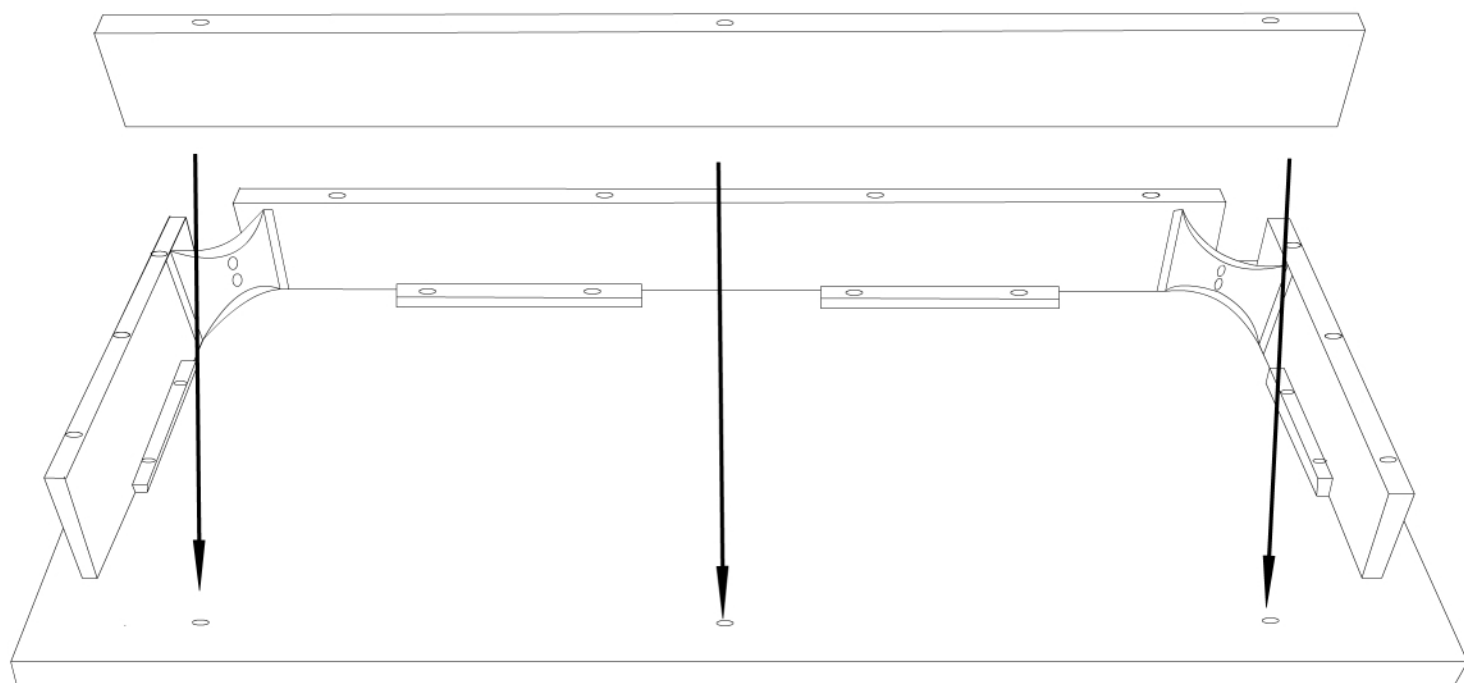

**National Public
SEATING Corp.**

149 Entin Road, Clifton NJ 07014
Tel: 973-594-1100 Fax: 973-594-1500
e-mail: Info@NationalPublicSeating.com