


ASSEMBLY INSTRUCTIONS


MODEL CT-ARM

ARMREST COMPONENTS

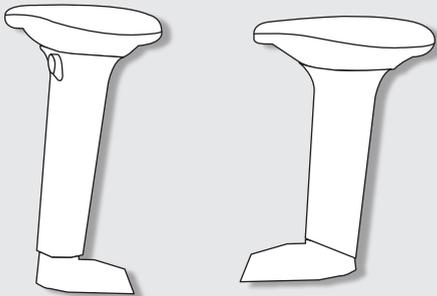


A. 2x Armrest

INCLUDED HARDWARE




6 Screws 1/4" x 1-1/8"



6 Washers


INCLUDED TOOLS

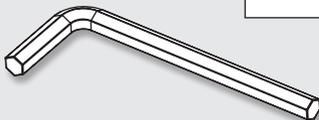

Allen wrench

ARMREST ASSEMBLY

- 1 Turn the chair over on a flat surface. Position and attach the armrests (A) to the bottom of the seat using 3 screws and washers for each one.

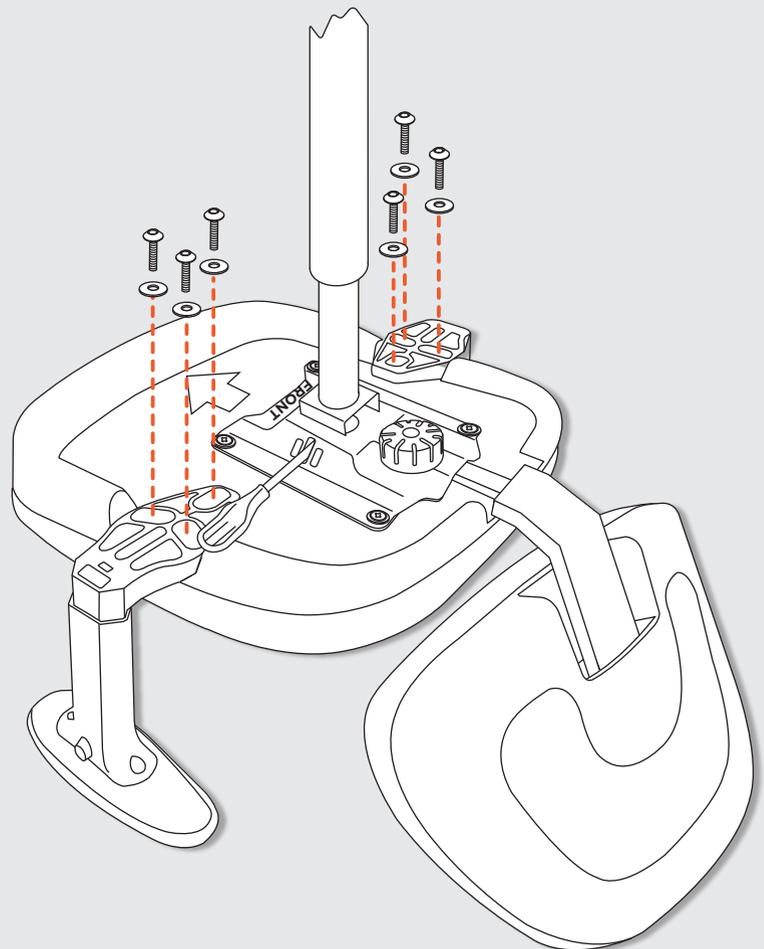

Hand tighten all screws and then tighten them completely using the allen wrench.

Congratulations, your armrest is now assembled and ready to be used!

Dear Customer, Thank you for your purchase. Although extreme care goes into manufacturing & packaging of this product, mistakes are possible. If you encounter any missing parts or difficulty in assembly, please contact our customer service Toll Free at 1-800-261-4112 or info@nationalpublicseating.com for courteous & immediate resolution to your problem.