

#257SPT243620 | #257SPT244820 | #257SPT304820 | #257SPT306020

# Platform Truck

### ASSEMBLY TIPS

- Read these instructions thoroughly before proceeding.
- Tighten all parts by hand. Do not use power tools.

### PARTS LIST



**A** (2) 6" Fixed Caster




**B** (2) 6" Swivel Caster with Brake




**C** (16) Bolt M8X20



**D** (16) Lock Washer

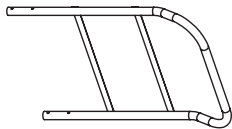


**E** (1) Handle

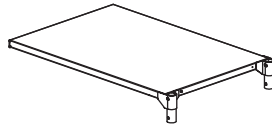

**F** (1) Base




**G** (4) Bolt M8X55

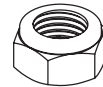

**H** (4) Lock Nut M8


### STEP 1

Install casters using the lock washers (D) and bolts M8x20 (C). The swivel casters (B) should be installed on the handle side as shown.

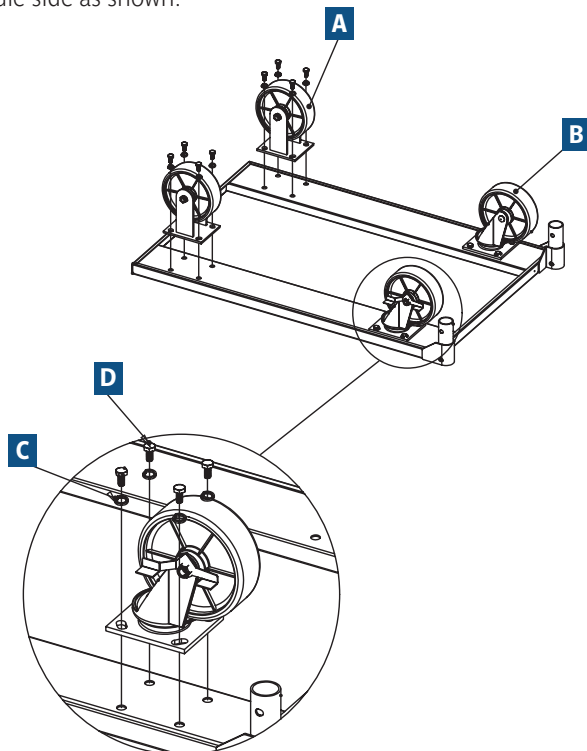

### STEP 2

Insert the handle (E) into the base (F) using bolt M8x55 (G) and locknut M8 (H) to lock the handle into place.

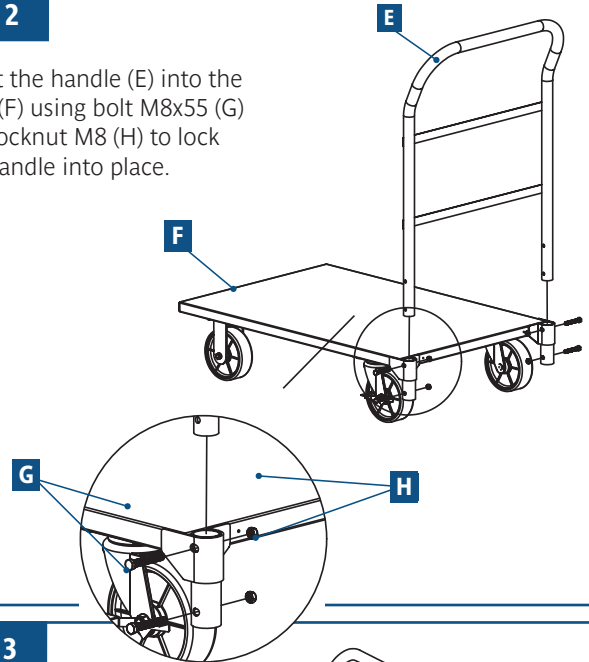

### STEP 3

Final Assembly

