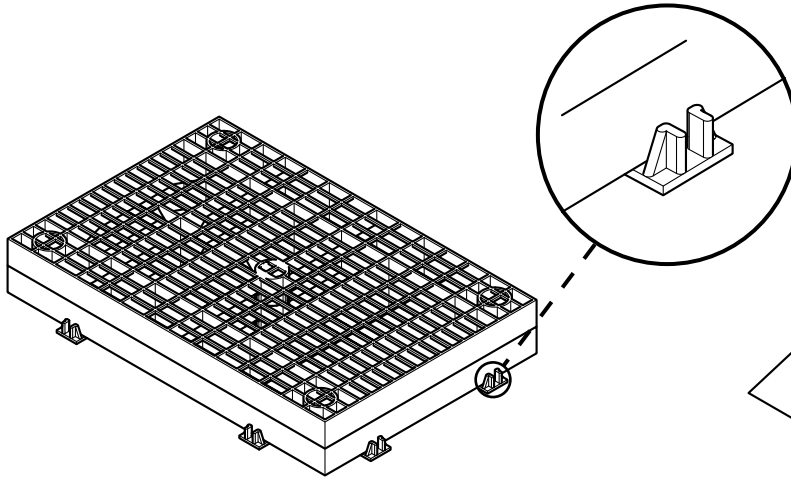


Step 1

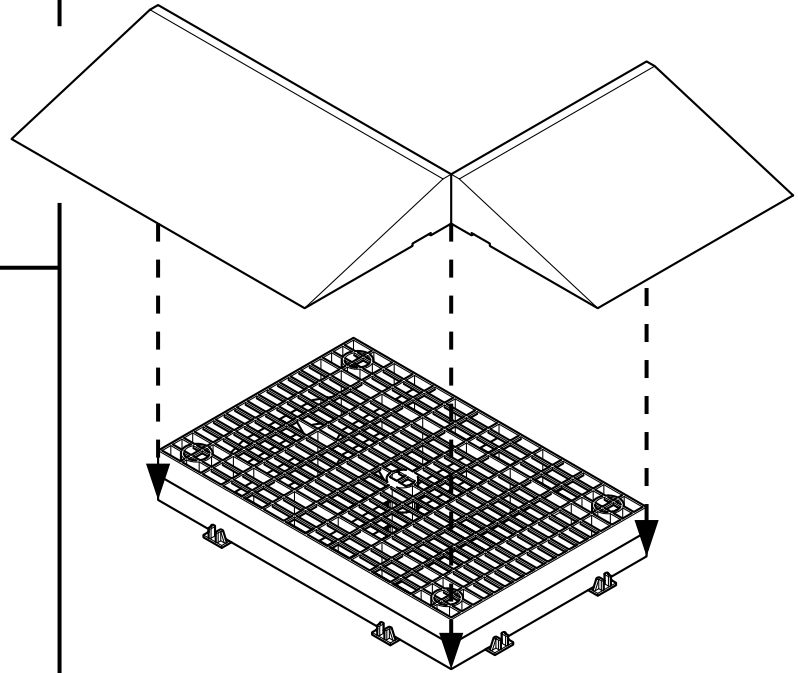
Place (2) Poly Clips on the bottom of each side of the Add-A-Level Work Platform that will need ramps.



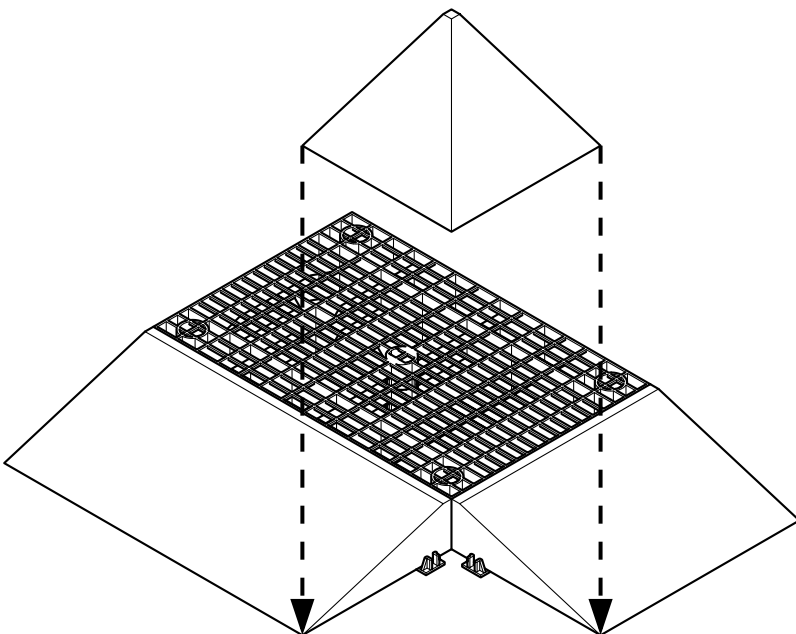
Custom built wooden Add-A-Level Ramps create an easy transition from the floor to your Add-A-Level platform, minimizing trip hazards at employee workstations. Add-A-Level Ramps are painted high-visibility yellow and include anti-slip grit tape.

Step 2

Slide the ramps down onto the Poly Clips on each side of the Add-A-Level Work Platform.

**Step 3**

If a corner ramp is necessary, place Poly Clips in the notches on the sides of the ramps where the corner ramp will connect, then slide the corner ramp down onto them.

**Assembled Platform with Ramps**