

Floor Mounted Mop Sink

Assembly Instructions

TOOLS REQUIRED


- Drain Key (included)
- Large Flat Screw Driver

PARTS:

- (A) (1) Sink
- (B) (1) "Z" Mounting Bracket
- (C) (1) Drain
(600MOPDRAIN)



Detailed View of Drain Assembly

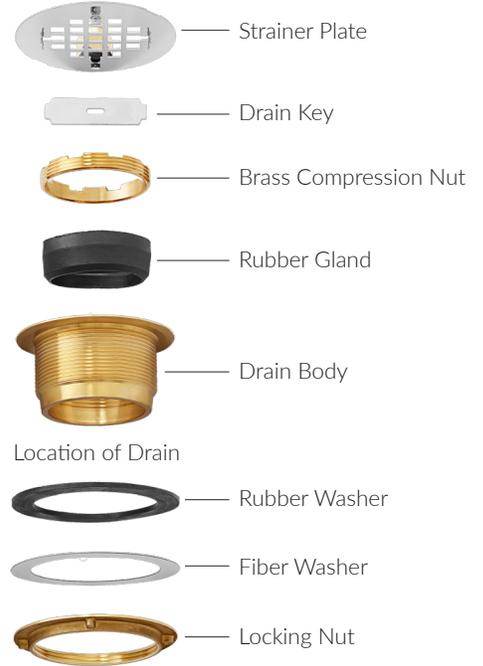

Assembly Instructions

1. Install "Z" mounting bracket 2 1/4" above floor.

Distance from wall to center of stub pipe:

16" x 20" Sink: 10 1/2"

20" x 28" Sink: 12 1/2"

24" x 24" Sink: 14 1/2"

NOTE: Hardware not included. These measurements do not apply to corner sink models

2. Assemble mop sink drain to mop sink. **NOTE:** Do not install top strainer plate, rubber gland, or brass compression nut at this time.
3. Position mop sink over 2" I.P.S. stub pipe while securing rear strap onto "Z" mounting bracket. **NOTE:** 2" pipe stub must protrude 3" above finished floor for proper installation. Recommend using silicone sealant between bottom of mop sink apron and floor.
4. Insert rubber gland over 2" I.P.S. stub pipe (use liquid soap on gland for easy installation). Thread brass compression nut over rubber gland.
5. Insert drain key into brass compression nut (**FIGURE 1**). Using flat blade screw driver, tighten compression nut to ensure tight seal between rubber gland and 2" pipe stub. Remove drain key and secure strainer plate to top of drain.

WARNING! Risk of personal injury. Stainless steel edges are sharp and can cause cuts. Wear gloves during installation and handle with care.

FIGURE 1

Top view of drain showing drain key inside brass compression nut

