

## Underbar Ice Bin



### Assembly Instructions

#### TOOLS REQUIRED

Allen wrench (included)



#### PARTS:

- (A) (1) Ice Bin
- (B) (4) Legs
- (C) (8) Tightening Screws

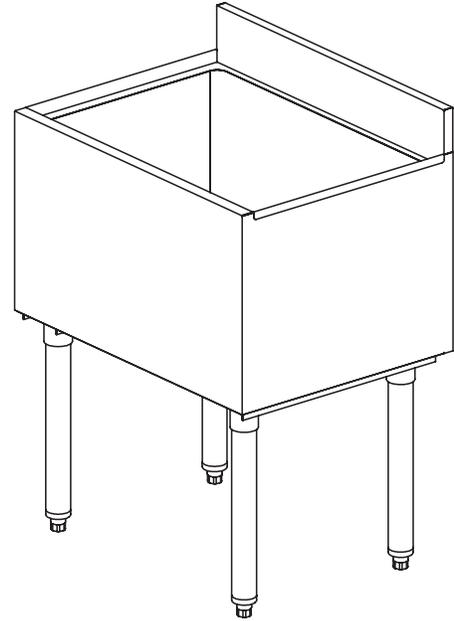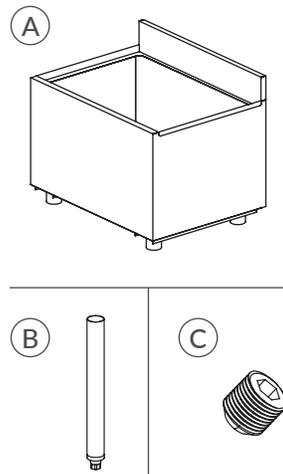

### Assembly Instructions

1. Place the underbar ice bin body upside down and on a surface that will not scratch it.
2. Slide the cross braces onto the legs and tighten all set screws. Skip this step if your model has galvanized legs.
3. Insert legs into the ice bin body gussets. You may be required to loosen a set screw if one struggles to go in.
4. Tighten all set screws and place the ice bin right side up.
5. Adjust the feet as needed to meet your height requirements or to compensate for uneven flooring. Remove any protective film.

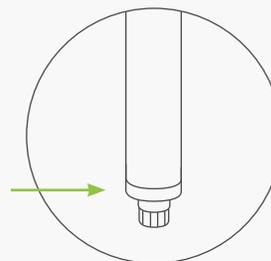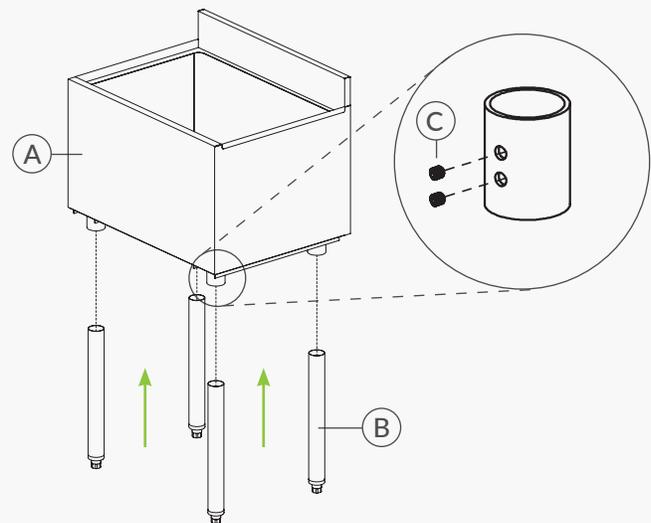

**WARNING!** Risk of personal injury. Stainless steel edges are sharp and can cause cuts. Wear gloves during installation and handle with care.