


Mirella Series 192" 1/2 Standing Conference Table Model No. MRCH96T

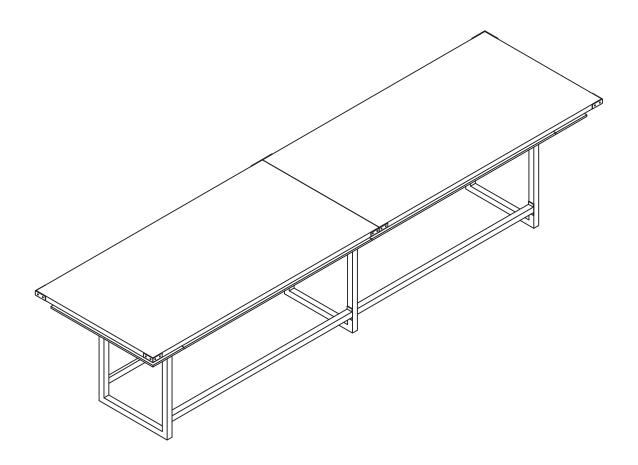

For questions or concerns, please call 1-888-971-6225 available Monday-Friday 7:30 AM to 5:00 PM (Central Time) (English-speaking operators)

990000205: 1 of 8; Rev A; Rev Date: 21-FEB-2019

www.safcoproducts.com

PARTS LIST

Name	Part	Qty.	Spare Qty
А	Frame	4	
В	Foot Rest	2	
С	HB Stand-off Ø20x76	4	
D	Leveler	4	
E	260*100*3mm	1	
F	60*50*3mm	3	
G	60*20*100mm	4	
Н	Cam Post	20	1

Name	Part	Qty.	Spare Qty
I	Cam Lock	20	1
J	Cam Sticker	20	2
K	НВ М6*15mm	16	1
L	НВ	12	1
М	HB M6*35mm	10	1
N	870mm	2	
	MRCH96THB		

Items with HB are in hardware box.

990000205: 2 of 8; Rev A; Rev Date: 21-FEB-2019

PARTS LIST

Name	Part	Qty.
0	Top Panel	1
Р	Short Modesty Panel	1
Q	Short Fixed Shelf	1
R	Long Modesty Panel	1

Name	Part	Qty.
S	Lang Madaghi Pagal	1
	Long Modesty Panel	
Т	Long Fixed Shelf	1
U	Long Fixed Shelf	1


IMPORTANT!

Review ALL instructions before beginning assembly. These instructions are provided to avoid problems that may occur from improper assembly or installation. SAFCO and/or its distributor are not responsible for failure resulting from improper assembly or installation of this product. Moreover, all warranties are void for failure to follow these assembly instructions.


990000205: 3 of 8; Rev A; Rev Date: 21-FEB-2019

Install the T Support (G) and the Stand-off (C) to the Top (O), Use the Levelers (D) to install the Wire Management Tray (N) to the Stand-off (C);

Please assemble the other 1/2 Top by step 1-6;

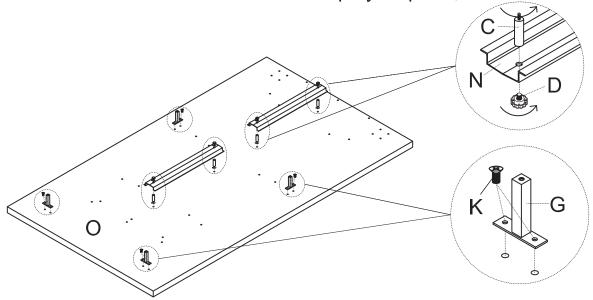


Use the Screw to connect the Legs and the Frame (A) to the Top (O). Use the Screw (K) to connect the Metal Plate (E) with the Top (O);

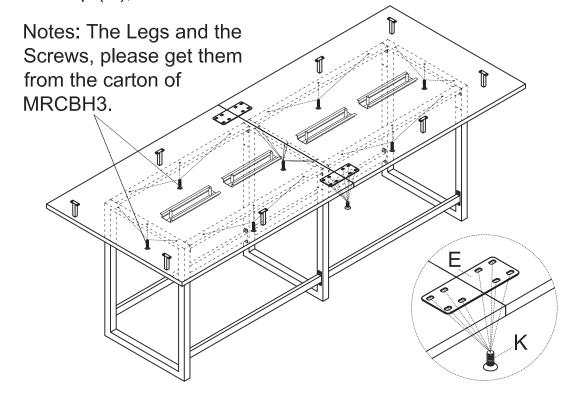


990000205: 4 of 8; Rev A; Rev Date: 21-FEB-2019

Insert the Cam Post (H) to the Top Panel (O), Install the Cam Lock (I) on the Modesty Panel (P&R&S), Fasten the Cam Lock, Attach the Cam Sticker (J) to the cams;

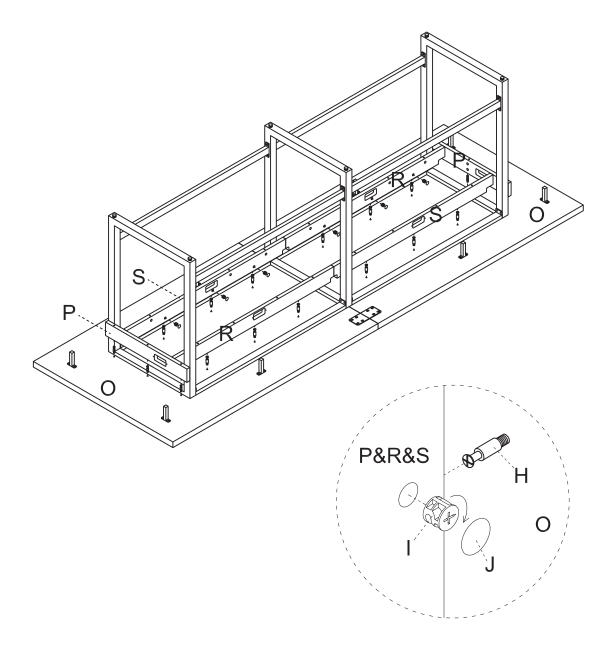


990000205: 5 of 8; Rev A; Rev Date: 21-FEB-2019

Insert the Cam Post (H) to the Fixed Shelf (Q&T&U), Install the Cam Lock (I) on the Modesty Panel (P&R&S), Fasten the Cam Lock, Attach the Cam Sticker (J) to the cams;

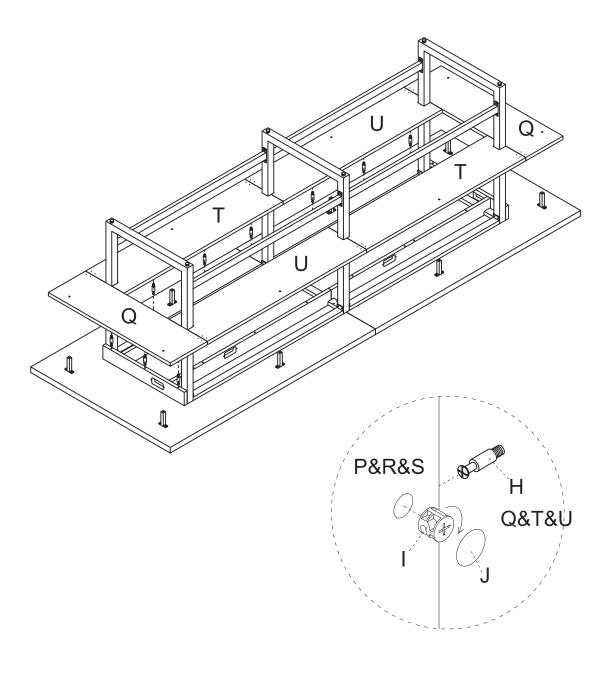


990000205: 6 of 8; Rev A; Rev Date: 21-FEB-2019

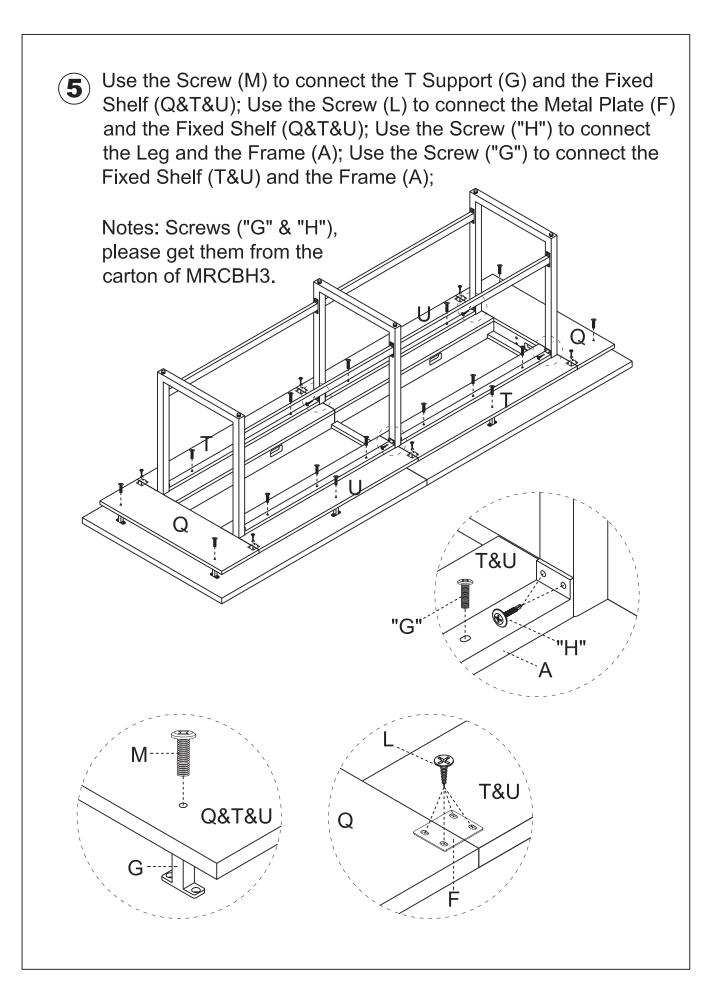


990000205: 7 of 8; Rev A; Rev Date: 21-FEB-2019

6 Use the Screw ("C") to connect the Bracket ("A" & "B") to the Top Conner;

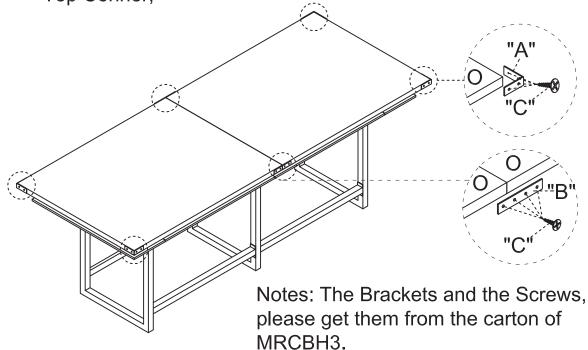

Remove the PVC cover, then use Screw to install the power unit (MRPM3) to the cutout if you chose the Power Unit; (The power unit is optional part, if you did not choose the power unit, please ignore this step)

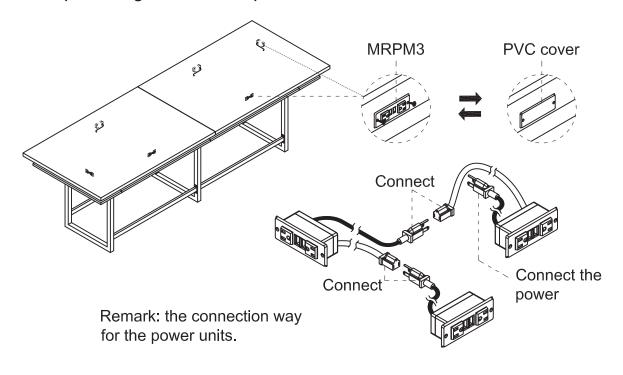

990000205: 8 of 8; Rev A; Rev Date: 21-FEB-2019