

Janitorial Gloves

Stay safe and protected with Lavex janitorial gloves.

Measuring for the Perfect Fit

We recommend using a dress maker's cloth tape to determine size.

Method 1: Circumference

Use the measuring tape to measure the circumference of the palm of the hand at its widest point in millimeters.


Method 2: Full Length

Use the measuring tape to measure from the tip of your middle finger to your wrist in millimeters.

Cross-reference these measurements against the table provided below.



Gloves of each size need to meet the minimum length requirements detailed in the table below.

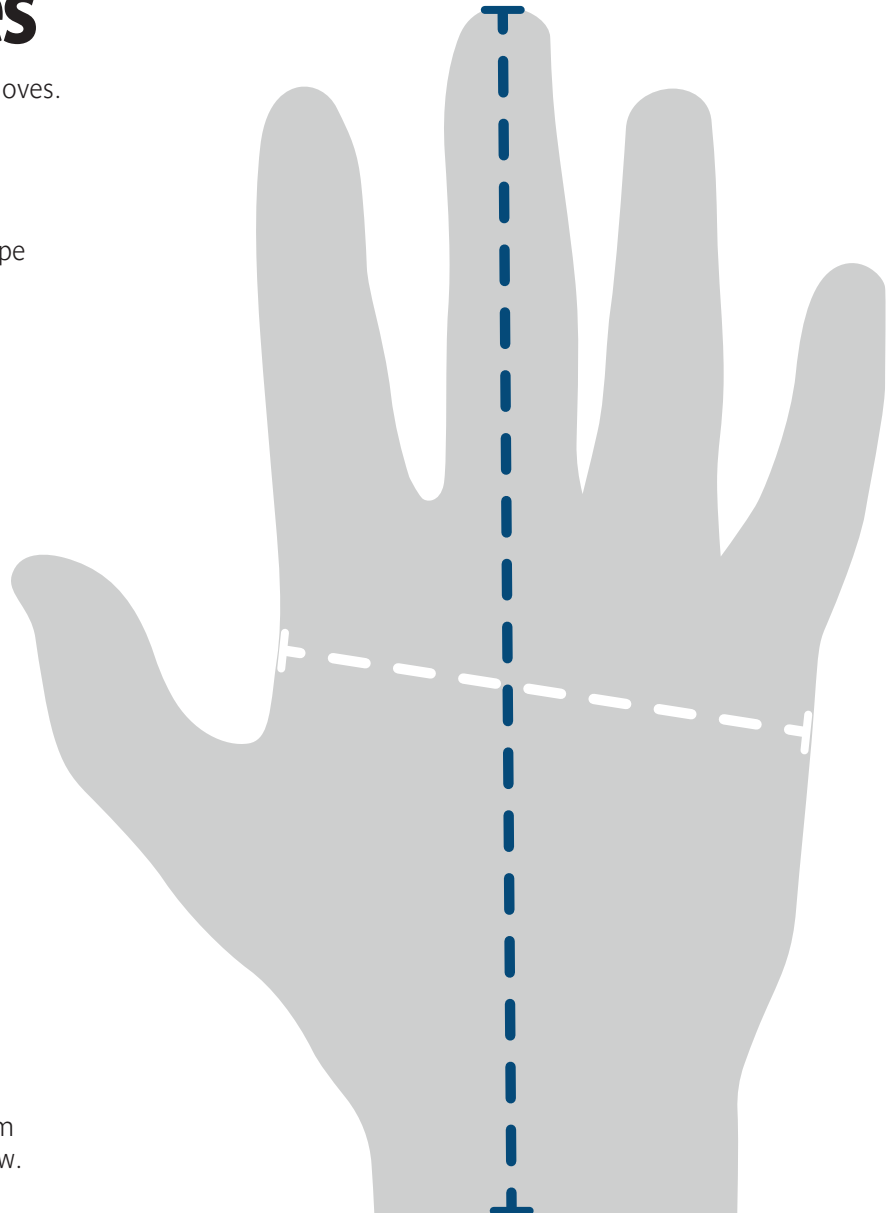

Size	Hand Circumference / Width	Length
XS	152 mm	160 mm
S	178 mm	171 mm
M	203 mm	182 mm
L	229 mm	192 mm
XL	254 mm	204 mm
2XL	279 mm	215 mm