




PARTS


A Post




B Base Cover

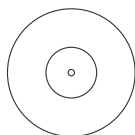

C Base Weight

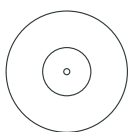

D M12 Bolt



E 17 mm Lock Washer



F 30 mm Flat Washer




NOTES

- Assembly requires 2 people, as some pieces may be heavy.
- The bolt and washers come in the post.


STEP 1

Place the base cover (B) over the base weight (C), and then lift the whole base on its side and hold in place.

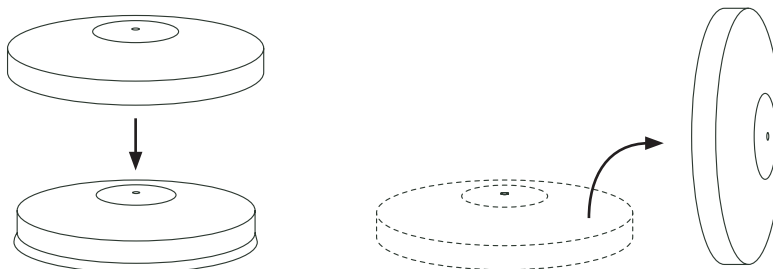

STEP 2


Lay the post (A) on its side and lift the bottom of the post to align with the screw hole on the base.

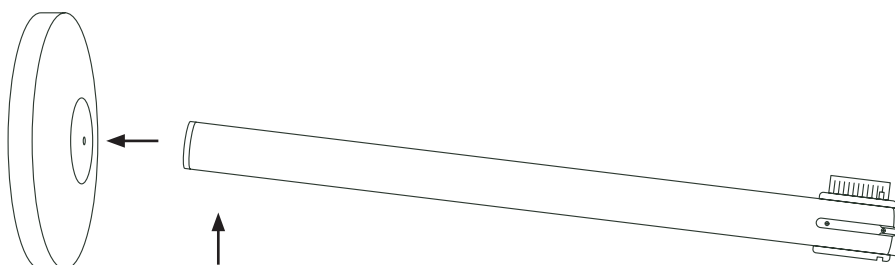




STEP 3

Place the 17 mm lock washer (E), and then the 30 mm flat washer (F) on the M12 bolt (D).

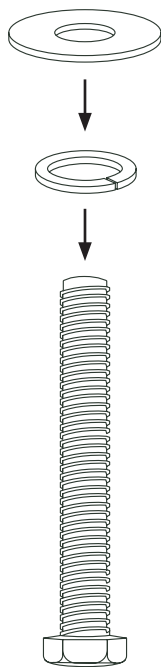

STEP 5

Assembly complete.

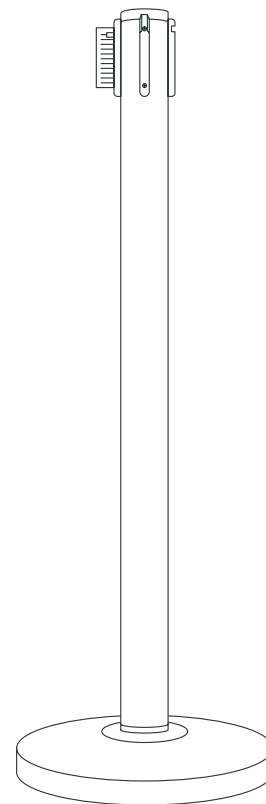

STEP 4

Screw the M12 bolt (D) through the bottom of the base and into the post and tighten. Do not overtighten.

