


STATIONARY RECEIVING DESK - 257RD2224

ASSEMBLY INSTRUCTIONS




PARTS

- | | |
|--|---|
| A (2) Side Underframe | I (8) $\frac{5}{16}$ " Flat Washer |
| B (2) Top Horizontal Tube | J (1) Drawer Box |
| C (1) Shelf | K (1) MS743 Lock |
| D (4) Cross recessed pan head screw | L (1) Top Cover Plate |
| E (4) $\frac{1}{4}$ " Flat Washer | M (1) Top Storage Compartment |
| F (4) $\frac{1}{4}$ –20" Nylon Lock Nut | N (4) M6 x 12mm Cross Recessed Flat Head Screw |
| G (12) $\frac{5}{16}$ –18" x $1\frac{1}{2}$ " Hex Screw | O (4) M6 Flat Washer |
| H (8) $\frac{5}{16}$ –18" Nylon Lock Nut | P (4) M6 Flange Nut |

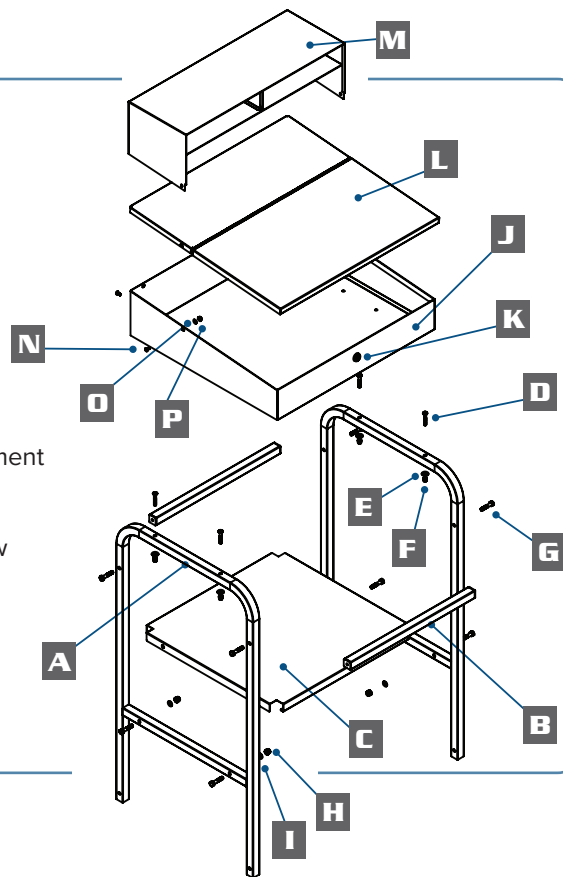


1

Figure 1

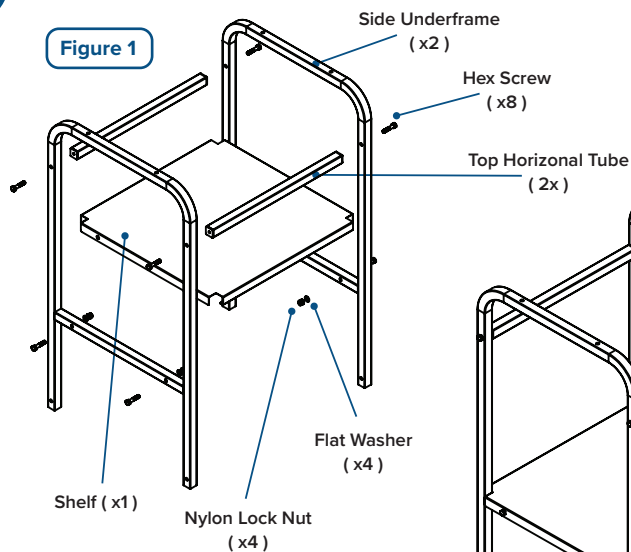

Install the underframes and the shelf. Use $\frac{5}{16}$ –18" x $1\frac{1}{2}$ " hexagon screws to install the top horizontal pipes and use $\frac{5}{16}$ –18" x $1\frac{1}{2}$ " Hexagon screws, flat washers, and nylon lock nuts to fix the shelf. See figures 1 & 2.

Figure 2

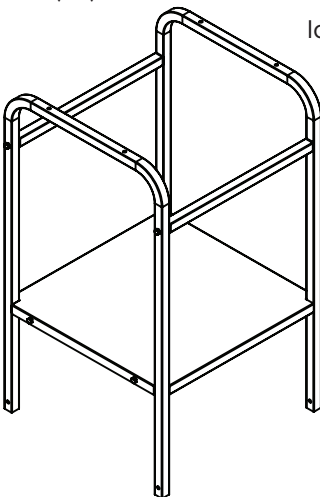

STATIONARY RECEIVING DESK - 257RD2224

ASSEMBLY INSTRUCTIONS



2

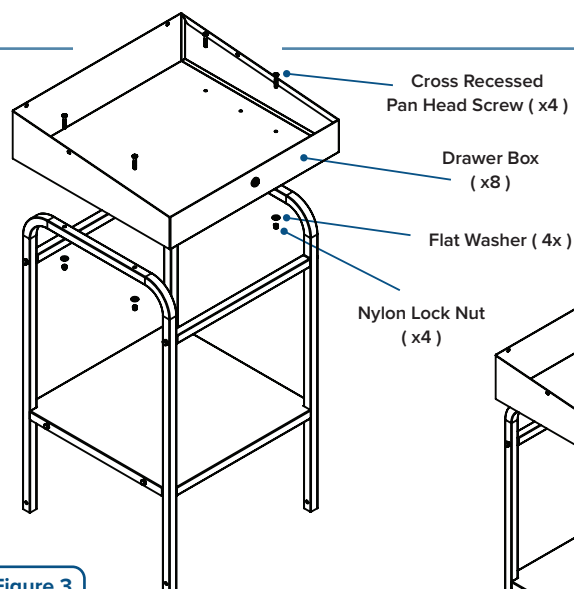


Figure 3

Install the drawer box. Fix the box to the under frames with $\frac{1}{4}$ -20" x $1\frac{1}{2}$ " cross recessed flat head screws, flat washers, and nylon lock nuts. See figures 3 & 4.

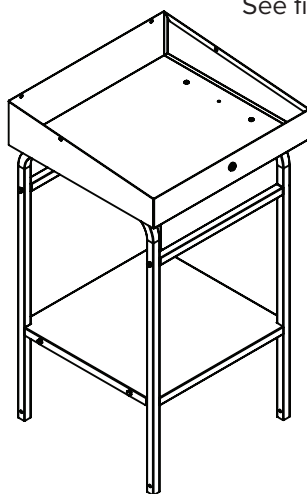


Figure 4

3

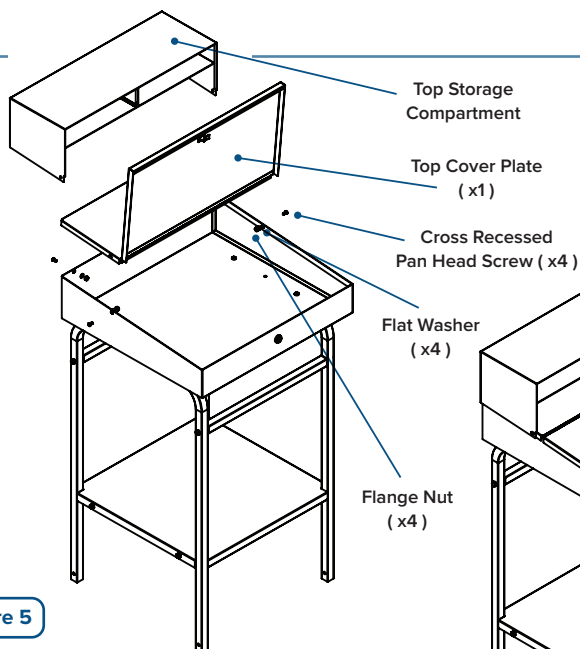


Figure 5

Install the top cover plate and the top storage compartment. Use M6 x 12mm cross recessed flat head screws, flat washers, and nylon lock nuts to fix the top cover plate and the top storage compartment to the drawer box. Turn up the cover plate when installing the screws for convenient assembly. See figures 5 & 6.

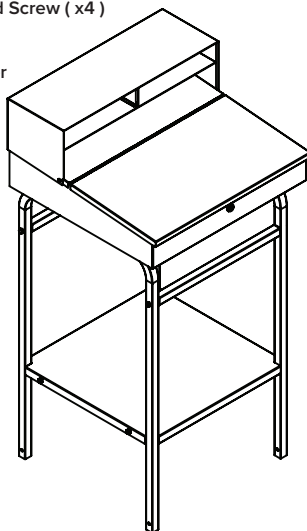


Figure 6

ASSEMBLY COMPLETE