



#### STOOL COMPONENTS

**A** 1x Backrest

**B** 1x Stool

**C** 1x Backrest Arm



#### INCLUDED HARDWARE



2x M6x14 Bolt



2x M8x40 Bolt




2x M8 Washer




2x Star Knob

**1** Turn stool upside down on a flat surface and insert the Backrest Arm **C** through the Stool Frame Brackets **B<sup>1</sup>**. The Backrest Arm has six adjustment levels, choose the desired one and drive an M6x14 Bolt **1** on each side and tighten securely using Allen Wrench **5**. Insert into each side of the Stool Frame Brackets a Star Knob **4** and securely tighten.

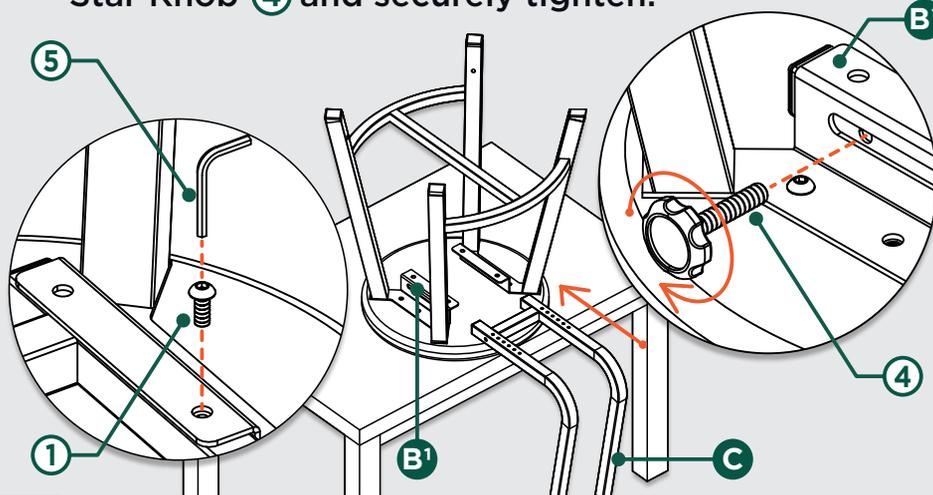

**!** Ensure that all bolts are fastened tightly.

**2** Instal the Backrest **A** into the Backrest Arm **C** drive the supplied M8x40 Bolt **2** and M8Washer **3** thru the slot of the Backrest Bracket.

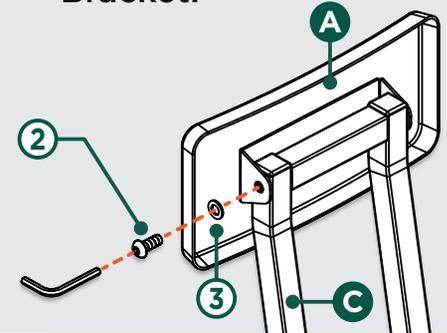

**!** Double check all bolts to be tightened securely before use. Check all screws periodically. Failure to completely tighten the screws may result in tipping and possible injury!

#### TOOLS FOR ASSEMBLY



Allen Wrench

**Congratulations, your stool with backrest is now assembled and ready to be used!**