


# WALL MOUNT RECEIVING DESK - 257RD2224WM

## ASSEMBLY INSTRUCTIONS




### PARTS

- |                                      |   |
|--------------------------------------|---|
| <b>A</b> (1) Top Storage Compartment | <b>E</b> (4) M6 x 12mm Cross Recessed Flat Head Screw |
| <b>B</b> (1) Top Cover Plate         | <b>F</b> (4) M6 Flange Nut                            |
| <b>C</b> (1) Drawer Box              | <b>G</b> (4) M6 Flat Washer                           |
| <b>D</b> (2) Supporting Bar          | <b>H</b> (1) MS743 Lock                               |

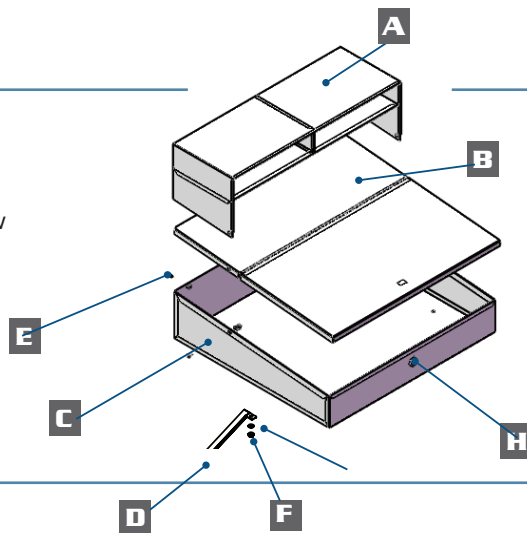


1

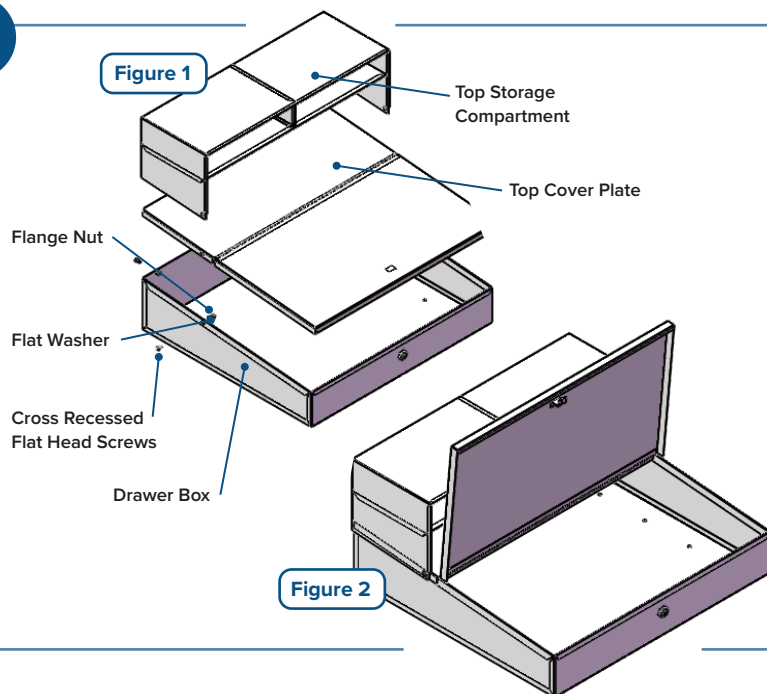

Put the drawer box on a flat platform. Put the top cover plate on the drawer box and align the holes of the top storage compartment, drawer box, and the top cover plate (figure 1). Insert the M6 x 12 cross recessed pan head screws from outside. Install flat washers and flange nuts inside. (Turn up the top cover plate when installing the screws, flat washers, and the nuts. See figure 2).

2

Install the supporting bar to the bottom of the drawer box with cross recessed pan head screws. See figure 3 & 4.

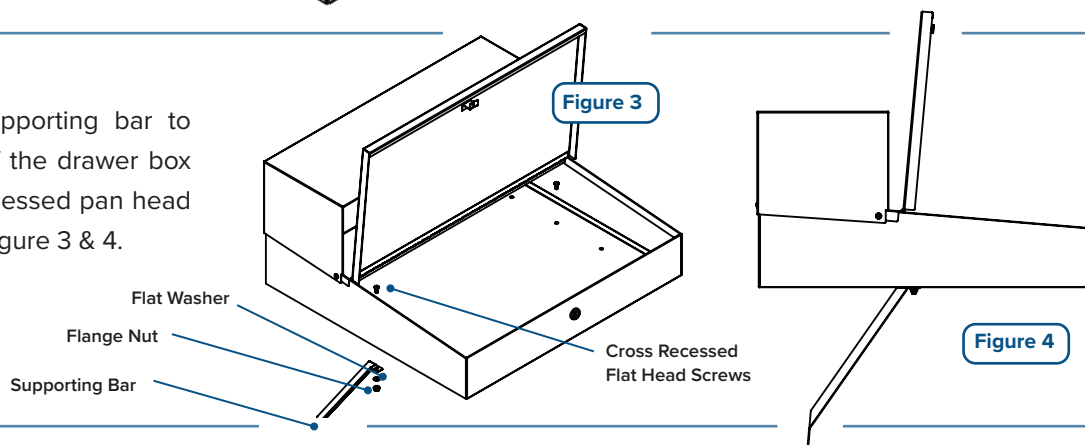

# WALL MOUNT RECEIVING DESK - 257RD2224WM

## ASSEMBLY INSTRUCTIONS



3

The Hole of Top Storage Compartment

Fix the holes on the other end of the supporting bar and the holes on the back of the storage compartment onto the wall.

Holes on the Other End of the Supporting Bar

Figure 5


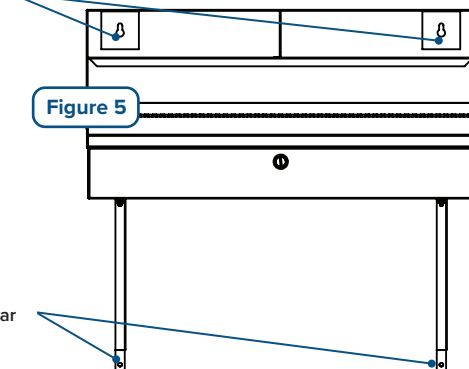


Figure 6

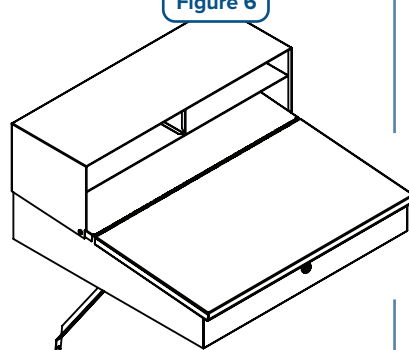

**ASSEMBLY COMPLETE**